



Heat recovery unit with rotary exchanger
Air flow rate from 1.000 to 30.000 m³/h
Quickly user manual

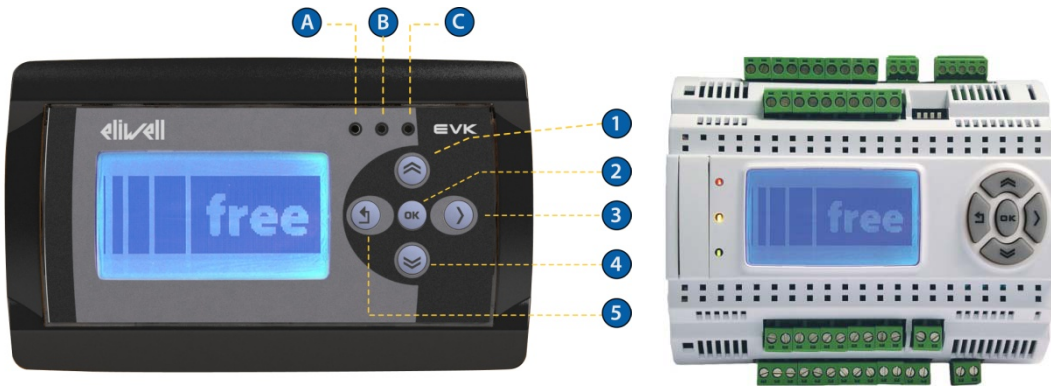
ERSR








EN


User Manual ERSR

Button Functionality

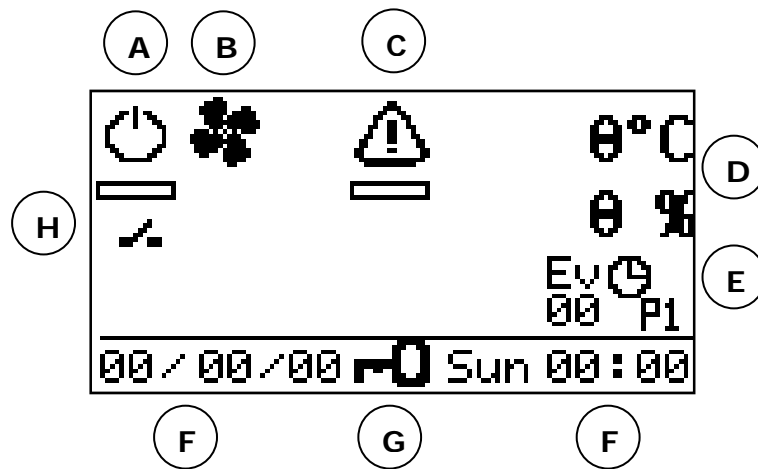





 
 
 
 
 


Button	Short Press	Long Press
	Navigation: - Change Selected Object Counterclockwise Value editing: - Change digit value	On Main view page: - Lock/Unlock OK button
	Navigation: - Change Selected Object Clockwise Value editing: - Change digit value	On Setting page & Password page: - Password logout
	Navigation: - Change Selected Object Counterclockwise Value editing: - Change selected digit	Navigation: - Page Esc Value editing: - Cancel Value Modification
	Navigation: - Change Selected Object Clockwise Value editing: - Change selected digit	On Main view page: - Enter into the settings page
	Navigation: - Enter Value Editing - Graphic Button Press Value editing: - Confirm Modification	On Alarm Page: - Alarm Reset
Page Timeout	- Go to previous page - On Main view page lock of the OK button	

Led

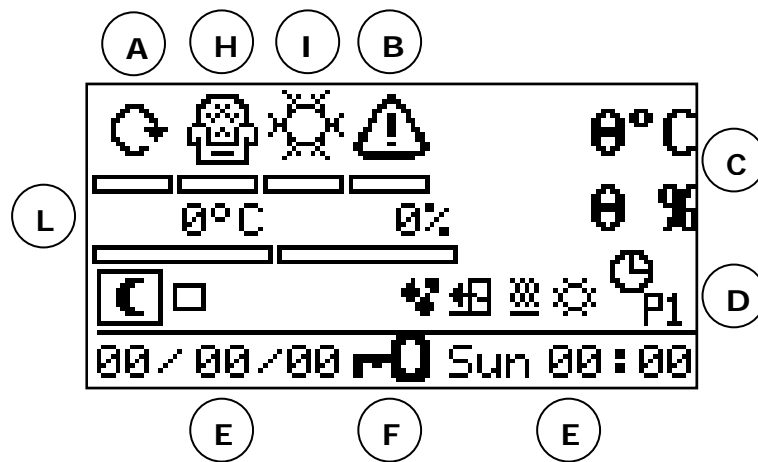
	Off	On	Blink
Green	ERSR Off	ERSR On	-
Yellow	-	Usb functions running	-
Red	No Active Alarms	Active Alarms	Resettable Alarms

Main View - Unit Off




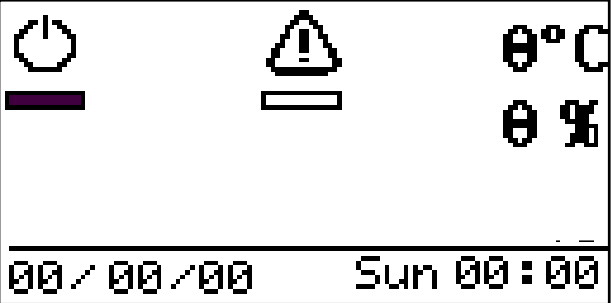

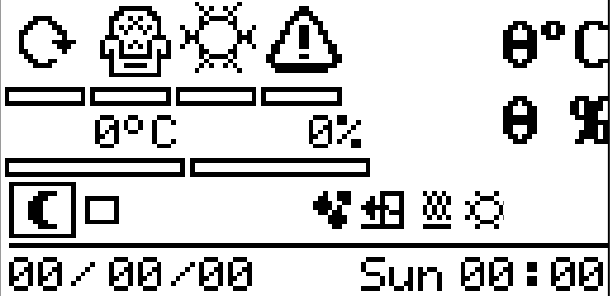

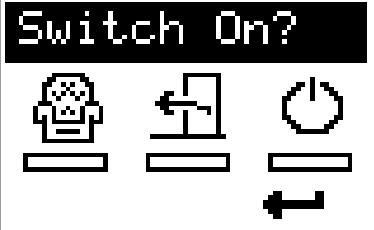

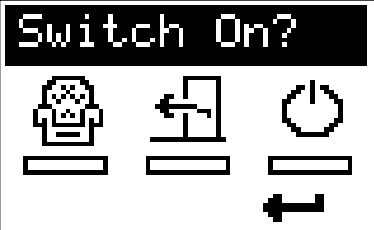

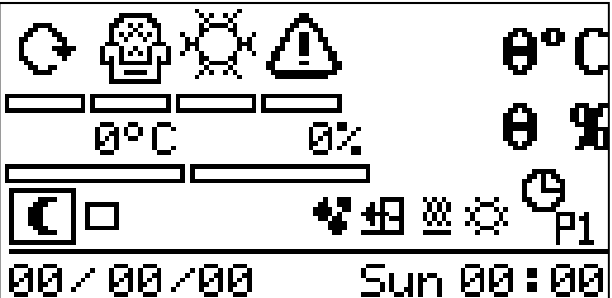
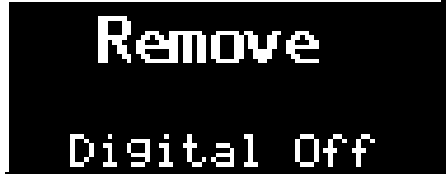

A	On/Off Button with Icon Status:  : Permanent Off by keyboard  : On by keyboard, the unit may be off by time table
B	Post Ventilation Active
C	Button with Icon Status:  Visible if some alarms is active
D	Current Temperature and Humidity
E	Current Time Bands Profile:  - P1  - P2  - P3  - P4  - P5
F	Hour and Date
G	 Visible if keyboard is locked
H	 Visible if unit is off by digital input

Main View - Unit On


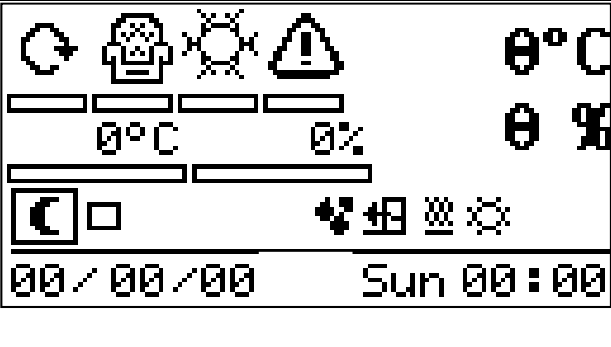

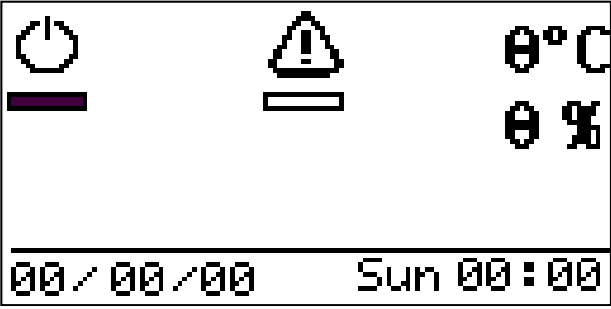

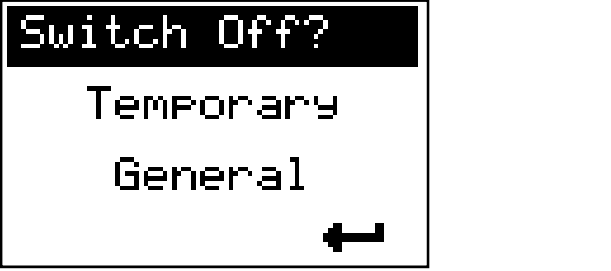

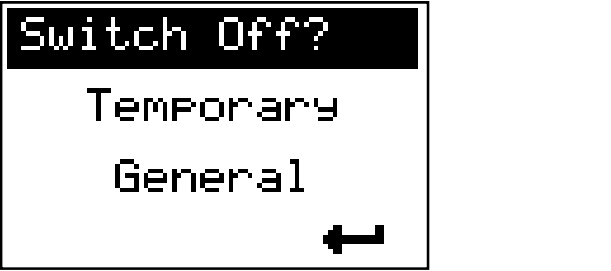

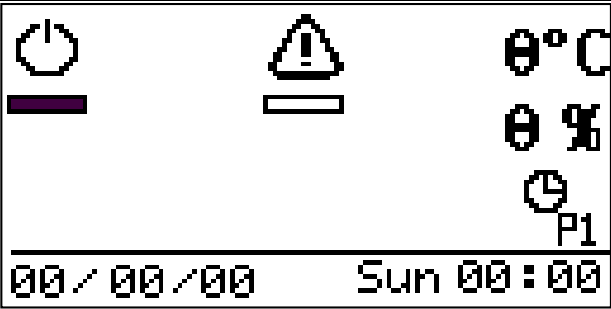


A	On/Off Button with Icon Status: ☰ : On by keyboard
B	Button with Icon Status: ⚠ Visible if some alarms is active
C	Current Temperature and Humidity
D	Current Time Bands Profile: 🕒 _{P1} - P1 🕒 _{P2} - P2 🕒 _{P3} - P3 🕒 _{P4} - P4 🕒 _{OFF} - P5 Current Mode: ☀ - Cool; ❄ - Heat 🏠 - Economy Mode Active 💧 - Dehumidification Active 🌙 - Night Mode Active
E	Hour and Date
F	🔒 Visible if keyboard is locked
G	⚡ Visible if unit is off by digital input
H	Comfort/Eco Button with Icon Status: 🛋 - Comfort Mode 🏠 - Economy Mode
I	Mode Button with Icon Status: 🔄 - Auto Mode ☀ - Cooling Mode ❄ - Heating Mode
L	Setpoint Buttons with display of the current temperature and humidity setpoint


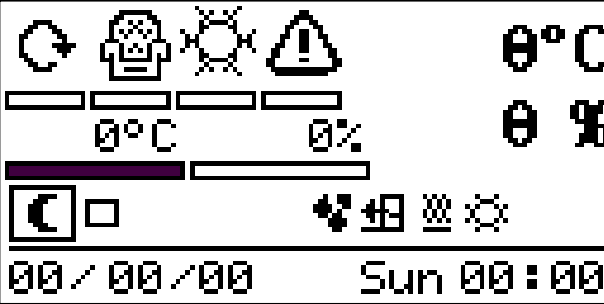







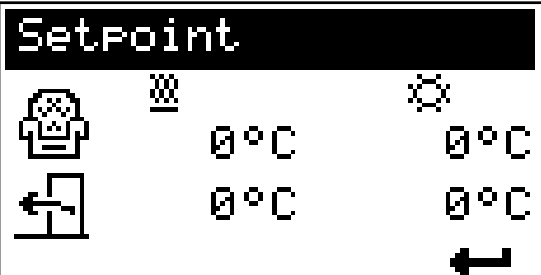


How to Switch On

		<p>Move until the On/off button is selected</p>
<p>1)</p> 		<p>If the time bands are not active, unit will switch on immediately</p>
<p>2)</p> 		<p>If the time bands are active, this popup will appear</p>
		<p>Select <i>Comfort</i> or <i>Eco</i> if you want the unit to restart in this mode until the time bands next event Select <i>Stand By</i> if you want the unit to be Off independently by next time bands events</p>
		<p>If the time bands are not active, unit will switch on immediately</p>
<p>3)</p>		<p>This popup appears if the unit is  by digital input</p>

How to Switch Off


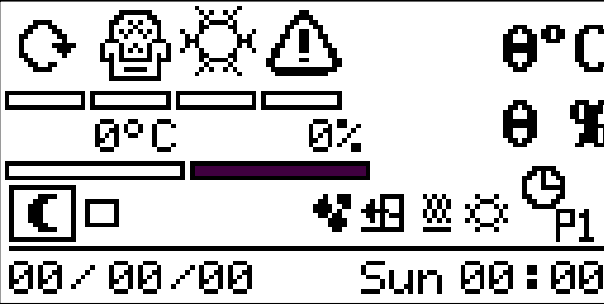

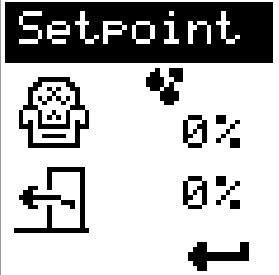

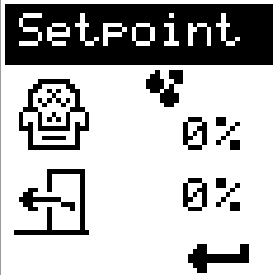

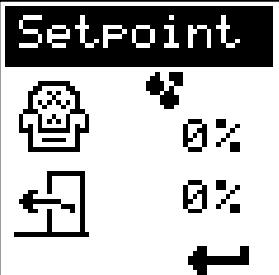

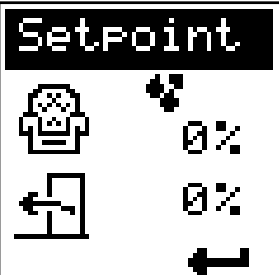


		<p>Move until the On/off button is selected</p>
<p>1)</p> 		<p>If the time bands are not active unit will switch off immediately</p>
<p>2)</p> 		<p>If the time bands are active this popup will appear</p>
		<p>Select <i>Temporary</i> if you want the unit to restore the working mode required by time bands at next event Select <i>General</i> if you want the unit to be Off independently by next time bands events</p>
		<p>⏻ : Permanent Off by keyboard ⌚ : The unit is temporary Off</p>

How to change the Temperature Setpoint

		<p>Move until the button of the setpoint you want to change is selected</p>
		<p>This popup will appear</p>
		<p>Select the desired setpoint</p>
		<p>Modify the value and press ok to confirm or Long Esc to Cancel modification Note: setpoints are limited one with each other in the following way: Eco Heat<Heat<Cool<Eco Cool</p>
		<p>Select ← and press to  close the popup, or long press of </p>


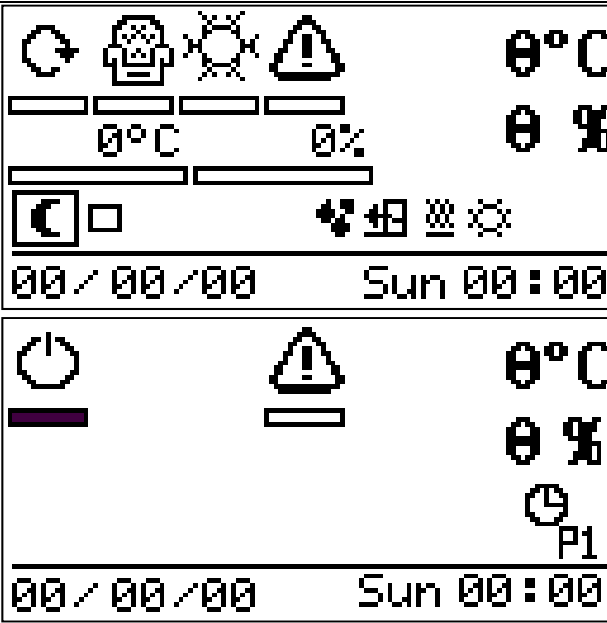

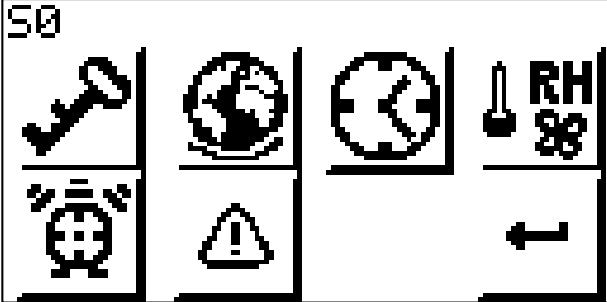




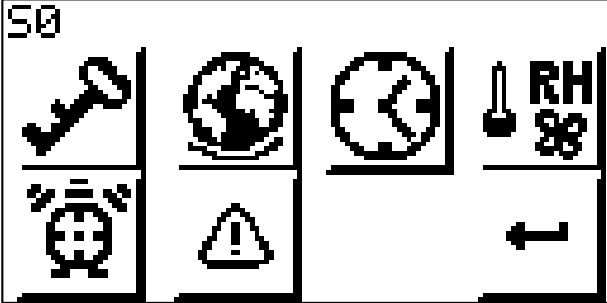

How to change the Dehumidification Setpoint

Note: Dehumidification is not active on all the unit, this part might be not visible on the display








		<p>Move until the button of the setpoint you want to change is selected</p>
		<p>This popup will appear</p>
		<p>Select the desired setpoint</p>
		<p>Modify the value and press ok to confirm or Long Esc to Cancel modification Note: setpoints are limited one with each other in the following way: Eco Heat<Heat<Cool<Eco Cool</p>
		<p>Select ← and press to  close the popup, or long press of </p>

How to enter into user setting page


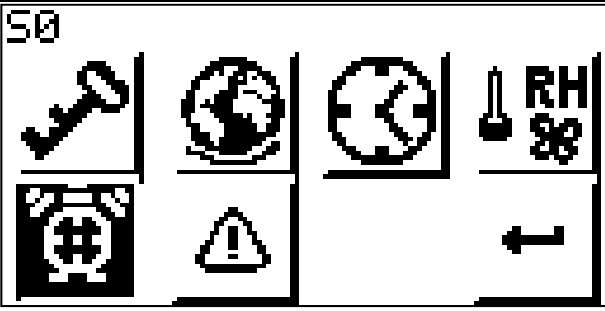

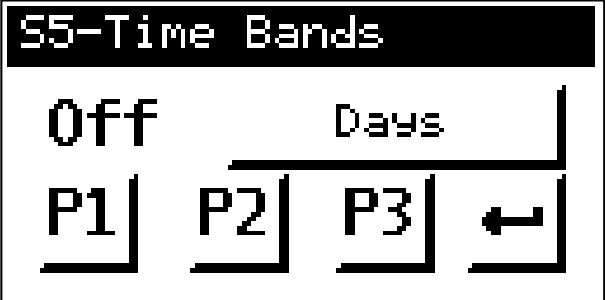

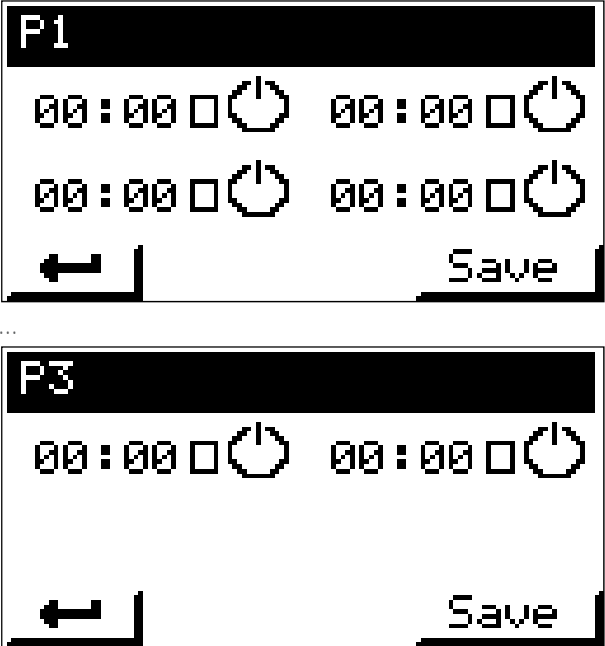



Note: Dehumidification is not active on all the unit, this part might be not visible on the display

		<p>Press long right button</p>
		<p>This page will appear</p>
   		<p>Select the desired option and press </p>


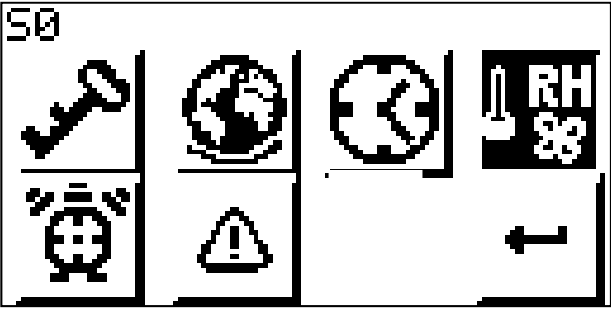



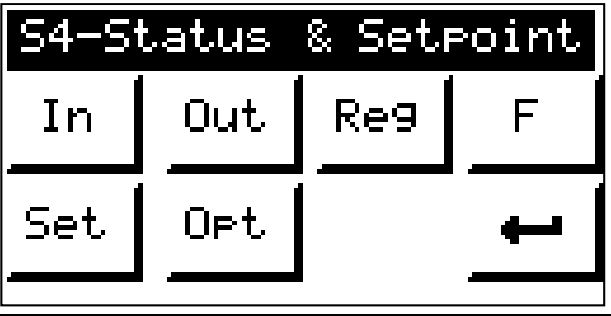
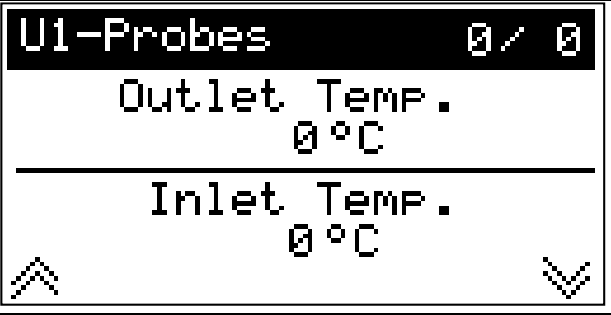
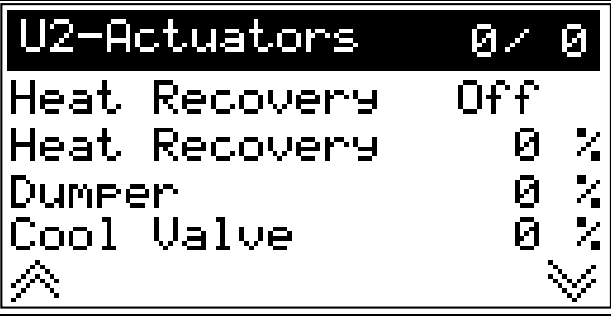
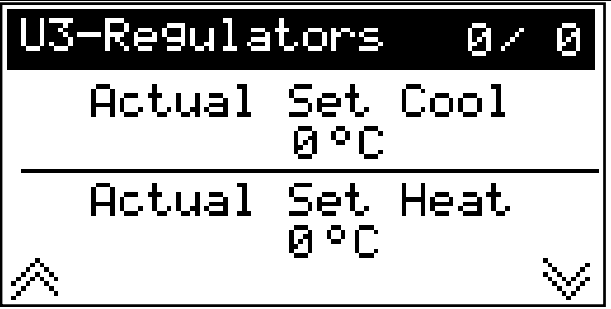
Setting page

	<p>Service Settings</p> <p>S1-Password</p> <p>rev: abcde</p> <p>abcde</p> <p>← [X] Ok</p>		<p>Set & Status Settings</p> <p>S4-Status & Setpoint</p> <p>In Out Reg F</p> <p>Set Opt ←</p>
	<p>Language Settings</p> <p>S2-Languages</p>  <p>English</p> <p>←</p>		<p>Time Bands Settings</p> <p>S5-Time Bands</p> <p>Off Days</p> <p>P1 P2 P3 ←</p>
	<p>Hour Settings</p> <p>S3-Clock</p> <p>00 : 00 : 00</p> <p>Sunday</p> <p>00 / 00 / 00</p> <p>Update</p>		<p>Alarm and Historical</p> <p>S6-Alarms</p> <p>Active - Res.</p> <p>Historical</p> <p>←</p>

How to set Time Bands

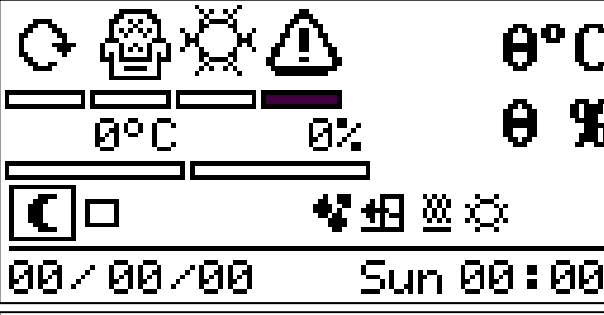
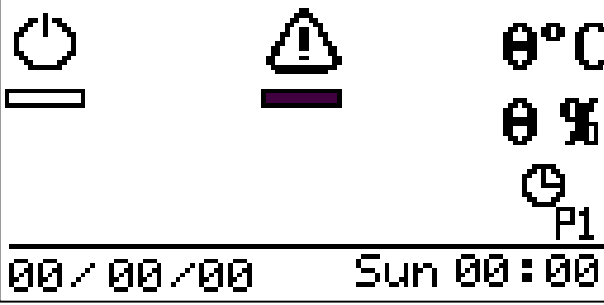

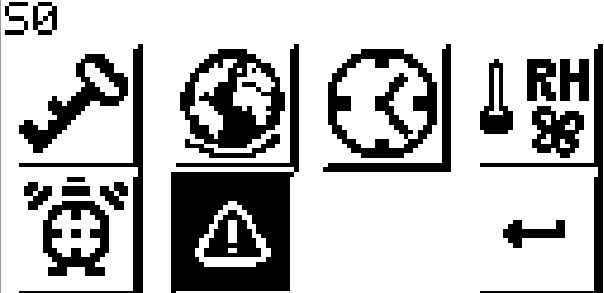

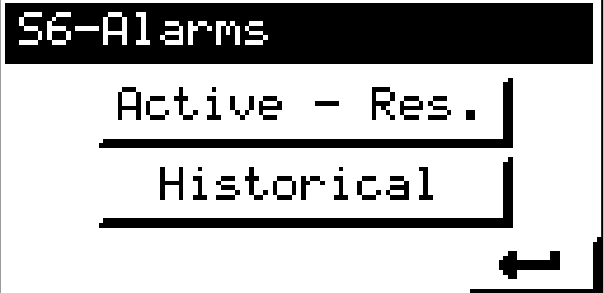

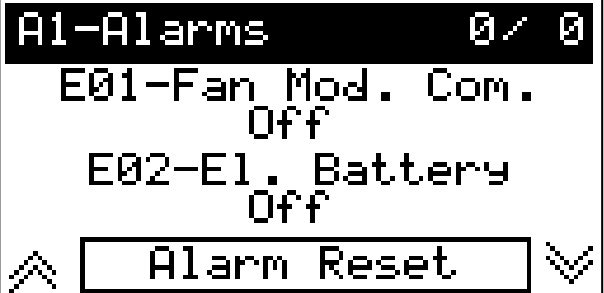
		
		<p>This page will appear. Select and eventually change <i>Off (On)</i> to enable/disable Time Bands Select <i>Days</i> to change the profile associates to each day of the week Select <i>P1,P2,P3</i> in order to change a profile setting Profile <i>P4,P5</i> cannot be changed they corresponds to all day on and all day off respectively</p>
		<p>Define the 2/4 time events of the profile and the related working mode: ☐ Off - 🧘 Comfort - 🏠 Economy- 🌙 Night</p> <p>Press <i>Save</i> to update the profile or  to cancel</p>
		<p>Define the profile associate to each day of the week</p>


Status & Setpoint

		<p>Status & Setpoint page can be accessed directly by pressing  on the  icon</p>
		<p>By selecting one of the icon user can access to the following lists.</p>
<p>In</p>		<p>Probe measures ----- is displayed in case of probe not connected or in alarm</p>
<p>Out</p>		<p>Actuators status ----- is displayed in case of actuator not present</p>
<p>Reg</p>		<p>Status List:</p> <ul style="list-style-type: none"> - Actual Set Cooling - Actual Set Heating - Outlet power reduction

F	<p>U4-Functions 0/0</p> <p>External Comfort Voc Comfort Keyboard Comfort</p> <p>⏶ ⏷</p>	<p>Status List:</p> <ul style="list-style-type: none"> - Eco/Comfort call by digital input - Eco/Comfort call by VOC - Eco/Comfort call Keyboard - Warpup phase
Set	<p>U5-Set 0/0</p> <p>Dynamic Set Cool 0 °C</p> <hr/> <p>Dynamic Set Heat 0 °C</p> <p>⏶ ⏷</p>	<p>Parameter List:</p> <ul style="list-style-type: none"> - Dynamic Setpoint Set in Cooling - Dynamic Setpoint Set in Heating - VOC Setpoint (R/W if enabled) - Changeover Setpoint (R/W if enabled) - Post Setpoint
Opt	<p>U6-Options 0/0</p> <p>Dynamic Setpoint No</p> <hr/> <p>Dehumidif. No</p> <p>⏶ ⏷</p>	<p>Parameter List:</p> <ul style="list-style-type: none"> - Enable/Disable Dynamic Setpoint - Enable/Disable Dehumidification (enable is possible only on limited configuration)






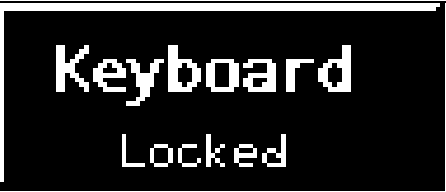
Alarms & Historical

<p>1)</p> <p>OK</p>	 	<p>Alarm page can be accessed directly by pressing OK on the alarm icon </p>
<p>2)</p> <p>OK</p>		<p>Alarm page can be accessed from setting page by pressing OK on the alarm icon </p>
<p>2)</p> <p>OK</p>		<p>Select <i>Active – Res.</i></p>
		<p>The list displays the current not active alarms and related status</p> <p>By long press of OK user can try to reset alarms</p>


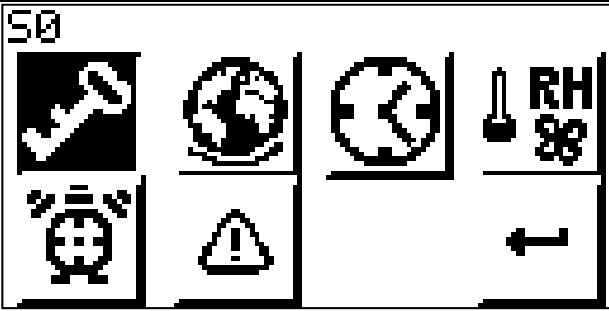



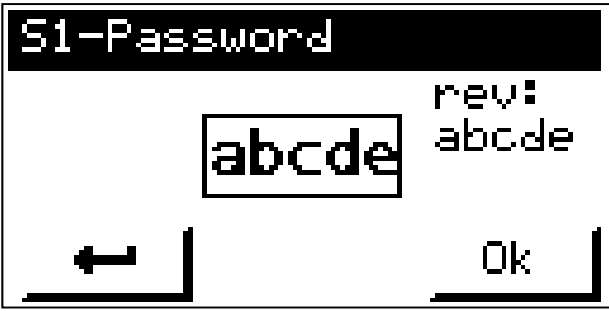

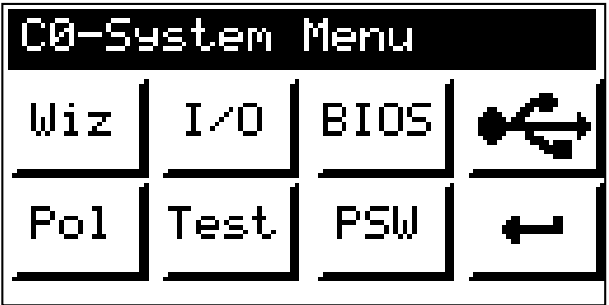

	<p>A2-Historical 0/30</p> <p>---</p> <p>Off</p> <p>00:00:00 00000</p> <p>⏪ ⏩</p>	<p>The list displays the historical alarms</p>
---	--	--


Alarm & Historical List
E01-Fan Mod. Com.
E02-El. Battery
E03-Ext.Temp.Pr.
E04-Inlet Temp.Pr.
E05-Outlet Temp.Pr.
E06-Inlet Inverter
E07-Outlet Inverter
E08-Inlet Pres.Pr.
E09-Outlet Pres.Pr.
E10-Inlet Filter
E11-Outlet Filter
E12-Umidity probe
E13-Smoke
E14-Reg. Probe
E15-Inlet Low Pres.
E16-Outlet Low Pres.
E17-Antifreeze
E18-Antifreeze Pr.
E19-Clock
E20-Voc Pr.

Messages


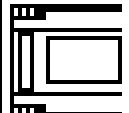


 
		The user has tried to write a value lower than the minimum allowed
		The user has tried to write a value greater than the minimum allowed
		Keyboard is locked

Service – How to enter System Menu

		<p>Service page can be accessed directly by pressing  on the  icon</p>
		<p>Insert the password and press <i>OK</i> button</p>
		<p>Select the desired option and press </p>

Password logout can be done by long press of  inside pages Setting or Password

System Menu page

Wiz	<p>Unit Configuration</p> <p>C1-Wizard</p> <p>°/RH  ACT VOC</p> <p>HR ... HW ←</p>	Pol	<p>Polarity Settings</p> <p>C5-Polarity 0 / 0</p> <p>DI1 0=Off/Alarm, 1=On</p> <p>DI2 0=Off/Alarm, 1=On</p> <p>⌅ ⌋</p>
I/O	<p>Physical I/O Value</p> <p>C2-I/O</p> <p>Analog Input</p> <p>Digital Input</p> <p>Analog Output</p> <p>Digital Output</p>	Test	<p>Test Output</p> <p>C6-Test 0 / 0</p> <p>D01 Off</p> <p>D02 Off</p> <p>D03 Off</p> <p>D04 Off</p> <p>⌅ ⌋</p>
Bios	<p>I/O and Connectivity Settings</p> <p>C3-Bios</p> <p>In  RS485</p> <p>Out</p>	Psw	<p>Password Definition</p> <p>C7-Password</p> <p>Service abcde</p> <p>OEM *****</p> <p>←</p>
	<p>Update application / Download parameter map</p> <p>C4-USB Key</p> <p> --> </p> <p><--</p>		



37040 Bevilacqua (VR) - Italia
Via Roma, 996 - Tel. (+39) 0442 633111
Telefax (+39) 0442 93730 – (+39) 0442 93566



carta riciclata
recycled paper
papier recyclé
recycled papier



The technical data in this document are not binding. AERMEC S.p.A. reserves the right to make changes at any time deemed necessary for the improvement of the product.