

Control panels

Control panels for fan coils



Control panels

- FMT10:** Electronic thermostat for fan coils installed in 4-pipe and 2-pipe systems and in 2-pipe systems with electric heater, can be connected to two On/Off valves for closing coil water supply. Simplified controls with only 2 selectors for adjusting temperature and fan speed (3 speeds). External air sensor (supplied with sensor holder) to be placed inside the fan coil.
Recessed installation.
- FMT20AW:** Electronic thermostat with LCD for fan coils installed in 4-pipe systems, 2-pipe systems and systems with 2-pipes with resistance, with the possibility of connecting two On - Off type valves for the cut-off of the coil supply water. Probe for air temperature inside the panel. A room air temperature probe can be connected (SWA accessory). A probe for the temperature of the water in the system can be connected (SWA accessory). Recess installation.
- KTLM:** Thermostat kit, including an IR remote control, an IR receiver, an electronic control board with air temperature sensor, a connecting cable, brackets and all the necessary mounting fittings. KTLM can be applied to fan coils installed in 2-pipe systems with or without water valves or in 4-pipe systems with water valves. For use with FCX fan coils with cabinet.
- KTLP:** Thermostat kit, including an IR remote control, an IR receiver, an electronic control board with air temperature sensor, a connecting cable, brackets and all the necessary mounting fittings. KTLP can be applied to fan coils installed in 2-pipe systems with or without water valves or in 4-pipe systems with water valves. For use with FCX fan coils without cabinet.
- PCT2:** Control panel with electromechanical thermostat for 2-pipe systems with thermostated ventilation. Not for use with FCA-R. Wall installation.
- PXBI:** Simplified control panel with electronic room temperature thermostat. Mounted directly on the fan coil.
- PXAE:** Electronic thermostat for fan coils installed in 2-pipe or 4-pipe systems. Simplified controls with only 2 selectors for adjusting temperature and fan speed (3 speeds, manual or automatic control). Can control 2 On/Off valves. Continuous or thermostated ventilation. Wall installation.
- PXAI:** Electronic thermostat for fan coils installed in 2-pipe or 4-pipe systems. Simplified controls with only 2 selectors for adjusting temperature and fan speed (3 speeds, manual or automatic control). Can control 2 On/Off valves. Water temperature sensor included. Continuous or thermostated ventilation. Mounted directly on the fan coil (for FCX AS and U).
- PXAR:** Electronic thermostat for fan coils installed in 2-pipe systems, 2-pipe systems with electric heater or 4-pipe systems (without electric heater). Simplified controls with only 2 selectors for adjusting temperature and fan speed (3 speeds, manual or automatic control).
- PTI:** Control panel with electronic room temperature thermostat to be mounted directly on the fan coil (for FCX AS and U). Mounting on the fan coil.
- PX:** Control panel with switch. Wall installation.
- PX2:** Control panel with switch. Wall installation or mounted directly on the FCX AS and U.
- TF1:** Room temperature thermostat with switch. Wall installation.
- WMT05:** Electronic thermostat for fan coils installed in 2-pipe systems. The panel is electrically protected by an internal fuse. Wall installation.
- WMT10:** Electromechanical thermostat for fan coils installed in 4-pipe and 2-pipe systems and in 2-pipe systems with electric heater; can be connected to two On/Off valves for closing coil water supply. The panel is electrically protected by an internal fuse. Continuous or thermostated ventilation. Wall installation.
- PXML:** Control panel for louvre adjustment motor (only for FCX 17-50U). Wall installation.

	PXAE	PXAI	PXAR	PXBI	PTI	PXLM	FMT10	RMT20AW	WMT05	WMT10	KTLM	KTLP	TF1	PX	PX2	PCT2
Features																
Electronic thermostat	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			
Electromechanical thermostat																
Switch									✓					✓	✓	✓
Change over																
Automatic	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			
Manual				✓												
Standard equipment																
Internal air sensor	✓	✓	✓	✓			✓	✓	✓	✓	✓*	✓*	✓			✓
External air sensor	✓	✓2,3m	✓2,3m	✓2,3m	✓2,3m	✓8m	✓6m				✓*	✓*				
Water sensor	✓	✓2,5m	✓2,5m	✓2,5m	✓2,5m	✓2,5m										
Installation																
Wall installation	✓		✓	✓	✓	✓			✓	✓	✓	✓	✓	✓	✓	✓
On board installation		✓	✓	✓	✓											
Recessed installation (503)							✓	✓			✓	✓				
IR remote control											✓	✓				
Configurations																
2-pipe system																
Without valve	✓	✓		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
VCF	✓	✓		✓	✓		✓	✓	✓	✓	✓	✓				
SW**	✓						✓6m	✓								
SA***							✓6m									
SIT	✓												✓	✓	✓	✓
SIT3	✓												✓	✓	✓	✓
SIT5	✓															
2-pipe system with electric heater																
RX																✓
RX + VF							✓	✓		✓						✓
SW**							✓	✓		✓						
SIT																
SIT3																
SIT5																
4-pipe system																
VC+VF	✓	✓					✓	✓		✓	✓	✓				
SW**	✓															
SIT	✓															
SIT3	✓															
SIT5	✓															

Important: Before choosing a control panel make sure it is compatible with the fan coil model and its accessories.

Some control panels offer more functions than the standard configuration; consult the manual for information on all the functions available

Symbols
* = Air temperature sensor selected by remote control
** = Water temperature sensor
*** = Air temperature sensor
VC = Hot water valve

VF = Cold water valve
VCF = Hot and cold water valve
RX = Electric heater
(503) = Recessed 503 module