




Photo

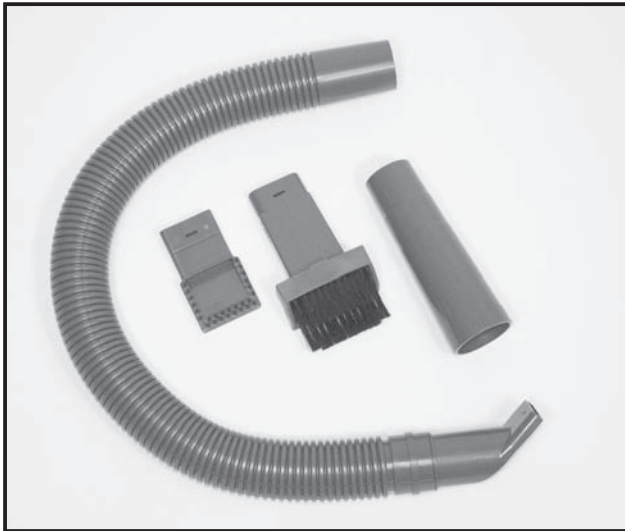

Descriptions

Quick Clean Kit can be easily connected to a household vacuum cleaner for quick, convenient cleaning of the units* .

* It is highly recommended to wear rubber gloves when cleaning the heat exchanger. Touching the heat exchanger with the bare hands can cause injury.

Applicable Models


- MSZ-FD25VA(S)
- MSZ-FD35VA(S)
- MSZ-FD50VA(S)
- MSZ-GE22VA
- MSZ-GE25VA
- MSZ-GE35VA
- MSZ-GE42VA
- MSZ-GE50VA

Specifications

Material	HEAD ASSY : ABS + nylon HOSE ASSY : ABS + PE	HEAD-2 ASSY : ABS + Plasticized PVC + nylon HOSE ASSY : ABS
Color	HEAD ASSY : gray + black HOSE ASSY : gray	HEAD-2 ASSY : gray + black HOSE ASSY : gray

Dimensions


Unit : mm

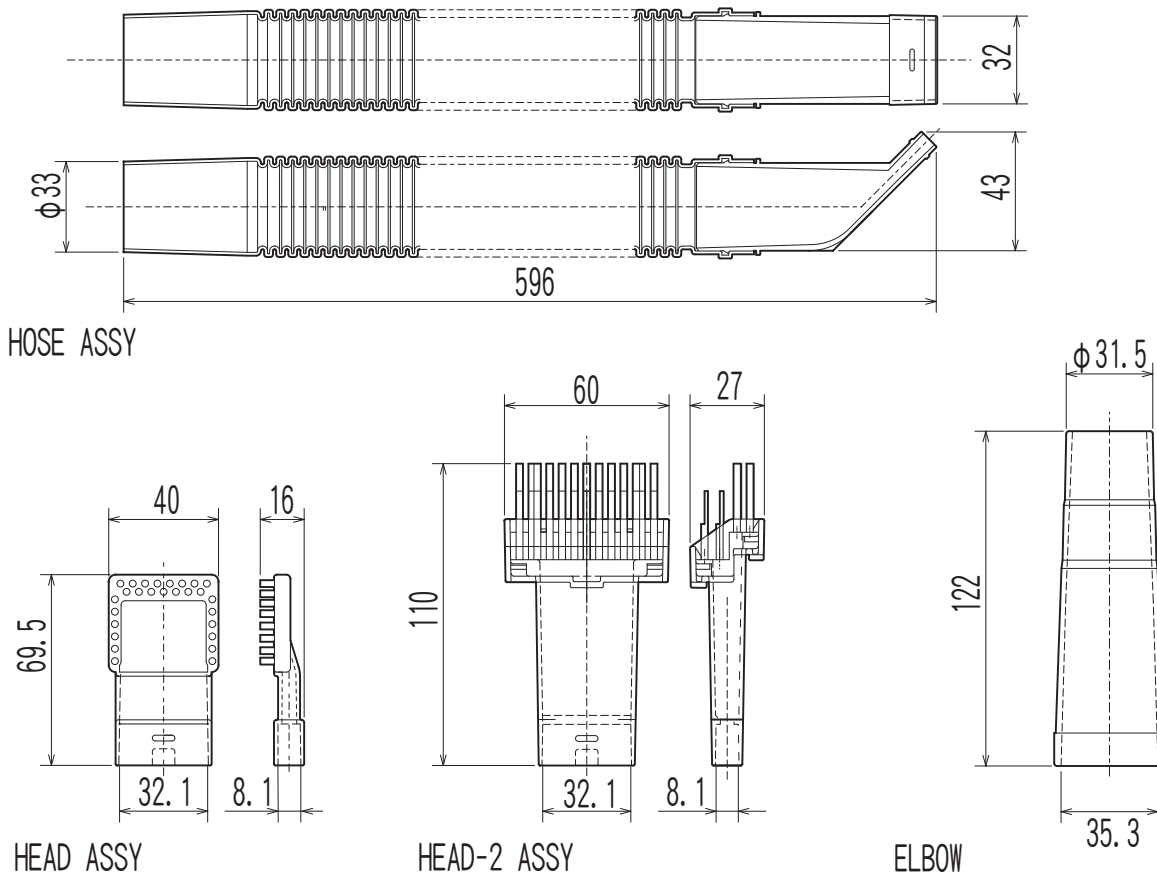

How to Use / How to Install

CLEANING USES

 
■ Front panel access models



The heat exchanger can be cleaned.

■ Quick-clean models

Example: Access to the fan is possible.

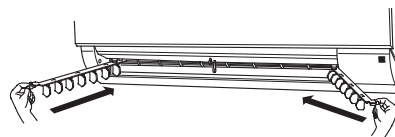

The fan can be cleaned.

CLEANING METHODS

Only available for the hose diameter of vacuum cleaner : 32 - 39 mm (inside diameter).


1. Before cleaning

Before cleaning the air conditioner, switch it off and turn off the breaker and/or remove the power supply plug to ensure safety.



2. Connection with a vacuum cleaner


- Insert the end of the connection hose into one of the special-made brushes. Use the special-made brush (large) for overall cleaning and use the special-made brush (small) to access narrow spaces.
- While twisting the connection hose, insert it securely into the vacuum cleaner tube. Use the universal adapter if necessary.

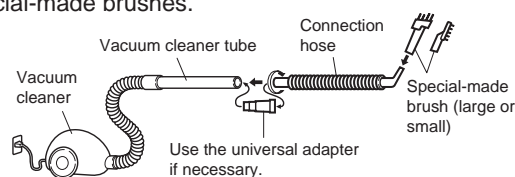


2. Cleaning of the heat exchanger

- Let the heat exchanger dry completely before cleaning it. (If the heat exchanger is wet, you may not be able to vacuum up the dust.)
- Open the front panel and remove the air filter to expose the heat exchanger. Do not touch the heat exchanger directly with your bare hands; injury may result. Wear a pair of gloves to protect your hands.
- Clean the heat exchanger vertically, moving the brush along the fins of the heat exchanger. (The heat exchanger may be damaged if it is cleaned horizontally.) Use the special-made brush (small) to clean the hard to reach, narrow spaces such as the top and bottom of the heat exchanger.

With the special-made brush (large)

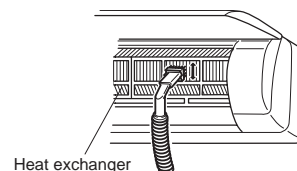


With the special-made brush (small)

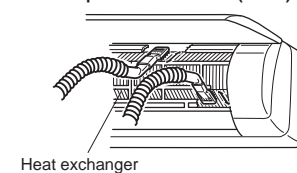

3. Cleaning of the fan

- Remove the horizontal vane and swing out the vertical vane. Clean the fan horizontally, moving the brush along the blades of the fan. (Please refer to the operating instructions about the way to remove the horizontal vane and swing out the vertical vane.)

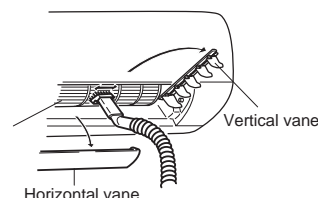

CAUTION:

- Some vacuume cleaners are equipped for overload protection devices, which might work if the airflow thought the vaccume cleaner hose is restricted. In that case, use them at the low power setting.
- If the special-made brushes become dirty, wash them with water and let them dry completely out of direct sunlight.
- When cleaning the air conditioner, do not stand on an unstable bench or chair. This may cause an injury, etc., if you fall down.
- Please refer to the operating instructions of the airconditioner for more details.