

Systemair JSR

Operation and maintenance instruction



Cleaning

The diffuser Systemair JSR can be cleaned using lukewarm water and a mild detergent.

Distribution pattern


The distribution pattern can be changed so that the airflow is concentrated or diffuse.

Loosen the nut on the side and turn the diffuser in right position, see illustration below.

Concentrated distribution pattern

Place the diffuser in the shown position to get a concentrated distribution pattern.

The air beam can even be adjusted 30° down (or up) from horizontal position.

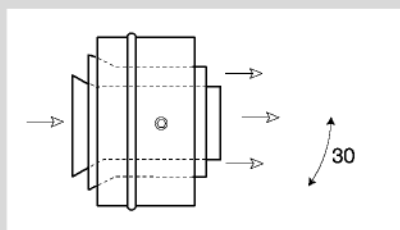

Diffused distribution pattern

Place the diffuser in the shown position to get a diffused distribution pattern.

The air beam can even be adjusted 15° down (or up) from horizontal position.

