

Photo




Descriptions

To diagnose the function of LEV, fit the manual magnet to the valve body.

Applicable Models

- PUZ-ZM series
- PUZ-M series
- PUHZ-ZRP series
- PUHZ-P series
- PUHZ-SHW series
- PU-P series

Cross Section of LEV and manual magnet looked from top

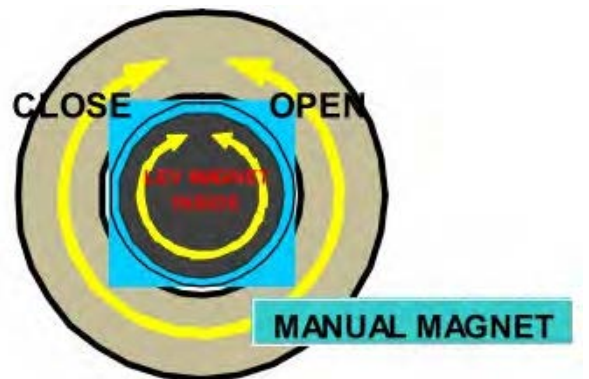

Magnet around the valve will attract the magnet inside and LEV magnet will revolve to OPEN/CLOSE the valve as you turn the manual magnet.



The valve coil can be removed by sliding it upward to reveal the valve shell as shown as above.



This is an ideal tool for the service and maintenance engineer who requires the direct acting LEV to be operated manually.