

December 2012

No. OCH413

REVISED EDITION-D

# TECHNICAL & SERVICE MANUAL

## Series PLFY Ceiling Cassettes

**R410A**

Indoor unit

**[Model names]**
**[Service Ref.]**

PLFY-P32VBM-E

PLFY-P32VBM-E.UK

 PLFY-P32VBM-E<sub>1</sub>.UK

PLFY-P32VBM-ER2.UK

PLFY-P32VBM-ER3.UK

PLFY-P40VBM-E

PLFY-P40VBM-E.UK

 PLFY-P40VBM-E<sub>1</sub>.UK

PLFY-P40VBM-ER2.UK

PLFY-P40VBM-ER3.UK

PLFY-P50VBM-E

PLFY-P50VBM-E.UK

 PLFY-P50VBM-E<sub>1</sub>.UK

PLFY-P50VBM-ER2.UK

PLFY-P50VBM-ER3.UK

PLFY-P63VBM-E

PLFY-P63VBM-E.UK

 PLFY-P63VBM-E<sub>1</sub>.UK

PLFY-P63VBM-ER2.UK

PLFY-P63VBM-ER3.UK

PLFY-P80VBM-E

PLFY-P80VBM-E.UK

 PLFY-P80VBM-E<sub>1</sub>.UK

PLFY-P80VBM-ER2.UK

PLFY-P80VBM-ER3.UK

PLFY-P100VBM-E

PLFY-P100VBM-E.UK

PLFY-P100VBM-ER2.UK

PLFY-P100VBM-ER3.UK

PLFY-P125VBM-E

PLFY-P125VBM-E.UK

PLFY-P125VBM-ER2.UK

PLFY-P125VBM-ER3.UK


**Revision:**

- PLFY-P32/40/50/63/80/100/125VBM-ER3 have been added in REVISED EDITION-D.
- Some descriptions have been modified.

- Please void OCH413 REVISED EDITION-C.

**Note:**

- This manual does not cover outdoor units. When servicing them, please refer to the outdoor unit's service manual.
- RoHS compliant products have <G> mark on the spec name plate.

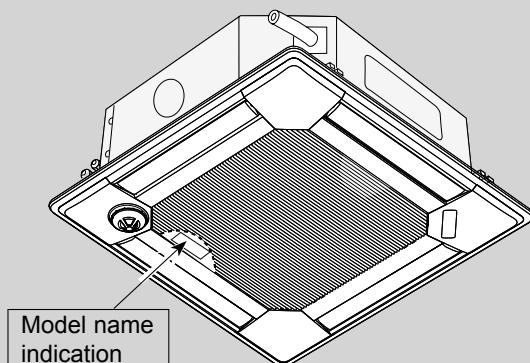

INDOOR UNIT

## CONTENTS

1. TECHNICAL CHANGES.....	2
2. SAFETY PRECAUTION.....	3
3. PART NAMES AND FUNCTIONS.....	5
4. SPECIFICATIONS.....	13
5. 4-WAY AIR FLOW SYSTEM.....	18
6. OUTLINES AND DIMENSIONS.....	21
7. WIRING DIAGRAM.....	22
8. REFRIGERANT SYSTEM DIAGRAM.....	24
9. TROUBLESHOOTING.....	25
10. SPECIAL FUNCTION.....	34
11. DISASSEMBLY PROCEDURE.....	41

**PARTS CATALOG (OCB413)**

**PLFY-P32VBM-ER2.UK → PLYY-P32VBM-ER3.UK**  
**PLFY-P40VBM-ER2.UK → PLYY-P40VBM-ER3.UK**  
**PLFY-P50VBM-ER2.UK → PLYY-P50VBM-ER3.UK**  
**PLFY-P63VBM-ER2.UK → PLYY-P63VBM-ER3.UK**  
**PLFY-P80VBM-ER2.UK → PLYY-P80VBM-ER3.UK**  
**PLFY-P100VBM-ER2.UK → PLYY-P100VBM-ER3.UK**  
**PLFY-P125VBM-ER2.UK → PLYY-P125VBM-ER3.UK**

INDOOR CONTROLLER BOARD (I.B) has been changed. (S/W version up)

#### **PLP-6BAJ (Automatic filter elevation panel, option)**

The controller board (U.B) has been changed. (only for the panel but not for the service part)

**PLFY-P32VBM-E<sub>1</sub>.UK → PLYY-P32VBM-ER2.UK**  
**PLFY-P40VBM-E<sub>1</sub>.UK → PLYY-P40VBM-ER2.UK**  
**PLFY-P50VBM-E<sub>1</sub>.UK → PLYY-P50VBM-ER2.UK**  
**PLFY-P63VBM-E<sub>1</sub>.UK → PLYY-P63VBM-ER2.UK**  
**PLFY-P80VBM-E<sub>1</sub>.UK → PLYY-P80VBM-ER2.UK**  
**PLFY-P100VBM-E<sub>1</sub>.UK → PLYY-P100VBM-ER2.UK**  
**PLFY-P125VBM-E<sub>1</sub>.UK → PLYY-P125VBM-ER2.UK**

INDOOR CONTROLLER BOARD (I.B) has been changed. (S/W version up)

**PLFY-P32VBM-E.UK → PLYY-P32VBM-E<sub>1</sub>.UK**  
**PLFY-P40VBM-E.UK → PLYY-P40VBM-E<sub>1</sub>.UK**  
**PLFY-P50VBM-E.UK → PLYY-P50VBM-E<sub>1</sub>.UK**  
**PLFY-P63VBM-E.UK → PLYY-P63VBM-E<sub>1</sub>.UK**  
**PLFY-P80VBM-E.UK → PLYY-P80VBM-E<sub>1</sub>.UK**

FAN MOTOR (MF) has been changed.

TURBO FAN, NUT and WASHER have been changed.

## Cautions for units utilizing refrigerant R410A

**Do not use the existing refrigerant piping.**

The old refrigerant and lubricant in the existing piping contains a large amount of chlorine which may cause the lubricant deterioration of the new unit.

**Use “low residual oil piping”**

If there is a large amount of residual oil (hydraulic oil, etc.) inside the piping and joints, deterioration of the lubricant will result.

**Store the piping indoors, and both ends of the piping sealed until just before brazing. (Leave elbow joints, etc. in their packaging.)**

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

**The refrigerant oil applied to flare and flange connections must be ester oil, ether oil or alkylbenzene oil in a small amount.**

If large amount of mineral oil enters, that can cause deterioration of refrigerant oil etc.

**Charge refrigerant from liquid phase of gas cylinder.**

If the refrigerant is charged from gas phase, composition change may occur in refrigerant and the efficiency will be lowered.

**Do not use refrigerant other than R410A.**

If other refrigerant (R22 etc.) is used, chlorine in refrigerant can cause deterioration of refrigerant oil etc.

**Use a vacuum pump with a reverse flow check valve.**

Vacuum pump oil may flow back into refrigerant cycle and that can cause deterioration of refrigerant oil etc.

**Use the following tools specifically designed for use with R410A refrigerant.**

The following tools are necessary to use R410A refrigerant.

Tools for R410A	
Gauge manifold	Flare tool
Charge hose	Size adjustment gauge
Gas leak detector	Vacuum pump adaptor
Torque wrench	Electronic refrigerant charging scale

**Handle tools with care.**

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

**Do not use a charging cylinder.**

If a charging cylinder is used, the composition of refrigerant will change and the efficiency will be lowered.

**Use the specified refrigerant only.****Never use any refrigerant other than that specified.**

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of. Correct refrigerant is specified in the manuals and on the spec labels provided with our products. We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

**Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.**


## [1] Cautions for service

- (1) Perform service after recovering the refrigerant left in unit completely.
  - (2) Do not release refrigerant in the air.
  - (3) After completing service, charge the cycle with specified amount of refrigerant.
  - (4) When performing service, install a filter drier simultaneously.
- Be sure to use a filter drier for new refrigerant.

## [2] Additional refrigerant charge

### When charging directly from cylinder

- Check that cylinder for R410A on the market is syphon type.
- Charging should be performed with the cylinder of syphon stood vertically. (Refrigerant is charged from liquid phase.)

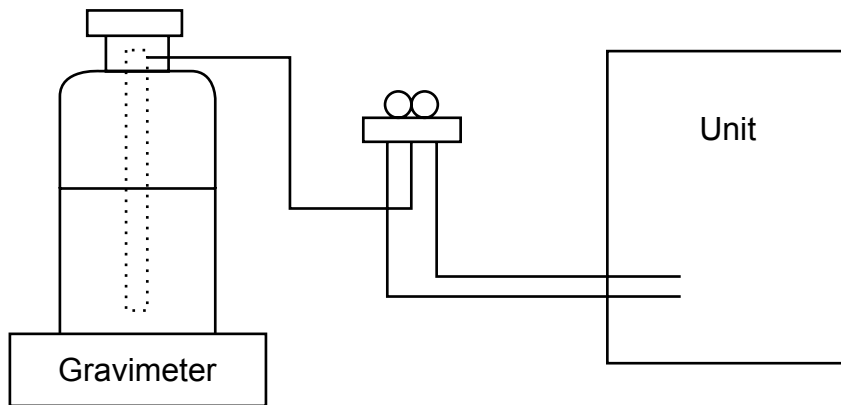


## [3] Service tools


Use the below service tools as exclusive tools for R410A refrigerant.

No.	Tool name	Specifications
①	Gauge manifold	· Only for R410A
		· Use the existing fitting specifications. (UNF1/2)
		· Use high-tension side pressure of 5.3MPa·G or over.
②	Charge hose	· Only for R410A
		· Use pressure performance of 5.09MPa·G or over.
③	Electronic scale	—
④	Gas leak detector	· Use the detector for R134a, R407C or R410A.
⑤	Adaptor for reverse flow check	· Attach on vacuum pump.
⑥	Refrigerant charge base	—
⑦	Refrigerant cylinder	· Only for R410A · Top of cylinder (Pink)
		· Cylinder with syphon
⑧	Refrigerant recovery equipment	—

## 3-1. INDOOR UNIT

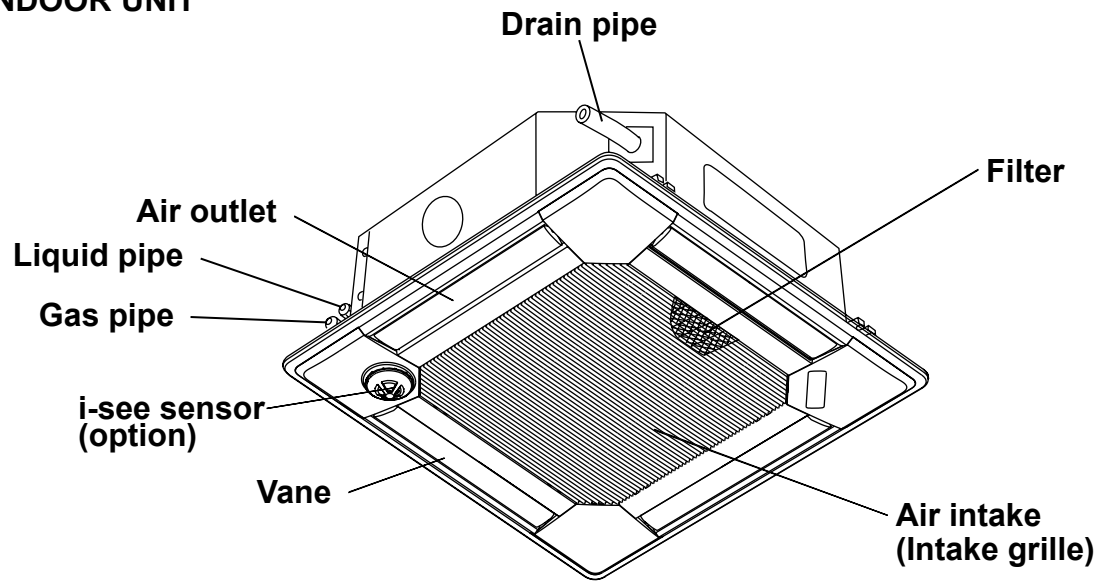

## 3-2. WIRELESS REMOTE CONTROLLER

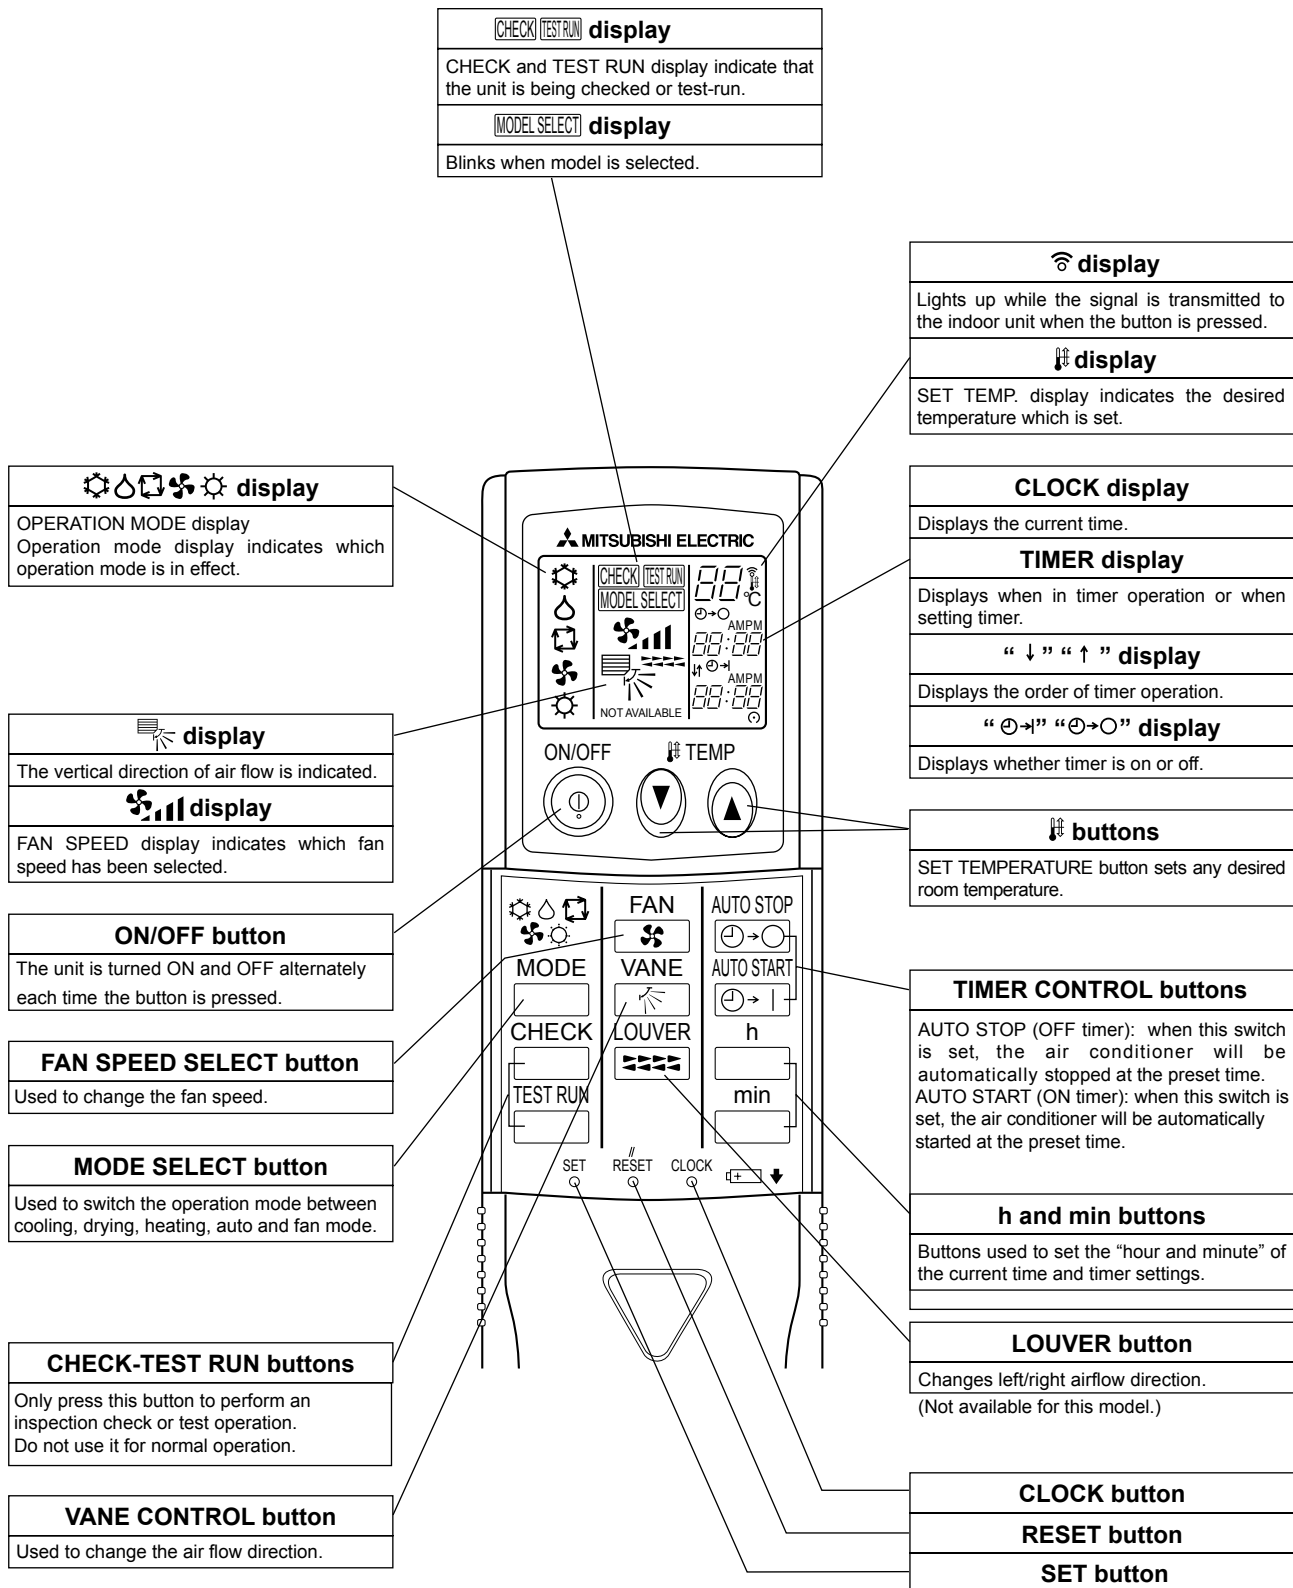


### 3-3. WIRED REMOTE CONTROLLER <PAR-30MAA/PAR-31MAA>

#### Wired remote controller function

\* The functions which can be used are restricted according to the model.

○ : Supported ✕ : Unsupported

	Function	PAR-30MAA/PAR-31MAA		PAR-21MAA
		Slim	City multi	
Body	Product size H × W × D (mm)	120 × 120 × 19		120 × 130 × 19
	LCD	Full Dot LCD		Partial Dot LCD
	Backlight	○		✕
Energy-saving	Energy-saving operation schedule	○	✕	✕
	Automatic return to the preset temperature	○		✕
Restriction	Setting the temperature range restriction	○		○
Function	Operation lock function	○		○
	Weekly timer	○		✕
	On / Off timer	○		○
	High Power	○	✕	✕
	Manual vane angle	○		○

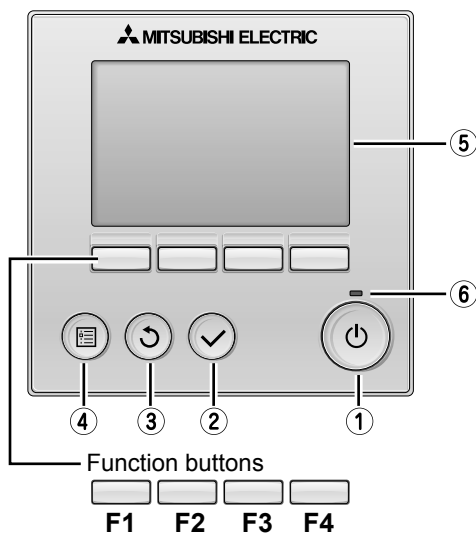

#### ① ON / OFF button

Press to turn ON/OFF the indoor unit.

#### ② SELECT button

Press to save the setting.

#### ③ RETURN button

Press to return to the previous screen.

#### ④ MENU button

Press to bring up the Main menu.


#### ⑤ Backlit LCD

Operation settings will appear. When the backlight is off, pressing any button turns the backlight on and it will stay lit for a certain period of time depending on the screen.

**When the backlight is off, pressing any button turns the backlight on and does not perform its function. (except for the (1) (ON / OFF) button)**

The functions of the function buttons change depending on the screen. Refer to the button function guide that appears at the bottom of the LCD for the functions they serve on a given screen.

When the system is centrally controlled, the button function guide that corresponds to the locked button will not appear.

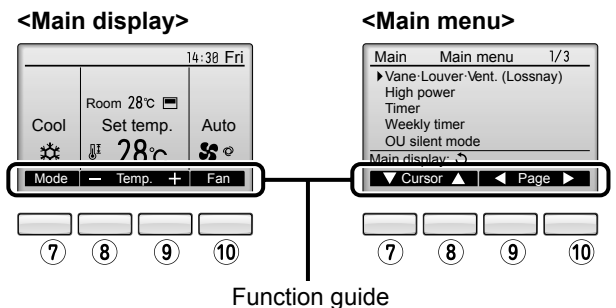

#### ⑥ ON / OFF lamp

This lamp lights up in green while the unit is in operation. It blinks while the remote controller is starting up or when there is an error.

#### ⑦ Function button F1

Main display : Press to change the operation mode.  
Main menu : Press to move the cursor down.

#### ⑧ Function button F2

Main display : Press to decrease temperature.  
Main menu : Press to move the cursor up.

#### ⑨ Function button F3

Main display : Press to increase temperature.  
Main menu : Press to go to the previous page.


#### ⑩ Function button F4

Main display : Press to change the fan speed.  
Main menu : Press to go to the next page.


The main display can be displayed in two different modes: "Full" and "Basic".  
The factory setting is "Full". To switch to the "Basic" mode, change the setting on the Main display setting.

### <Full mode>

\* All icons are displayed for explanation.

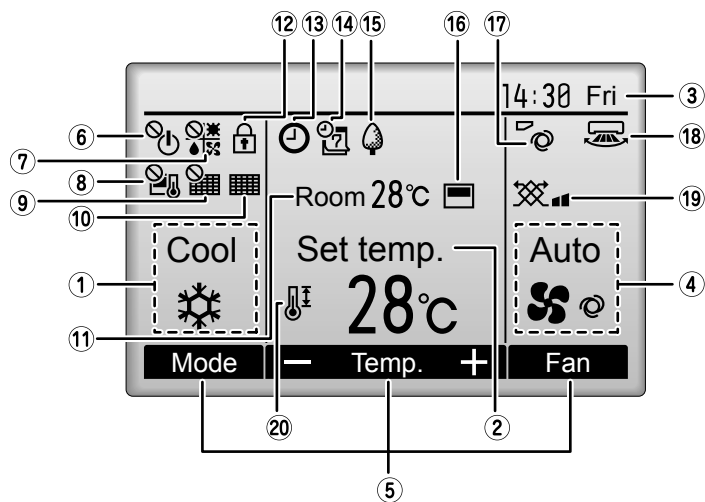

### <Basic mode>

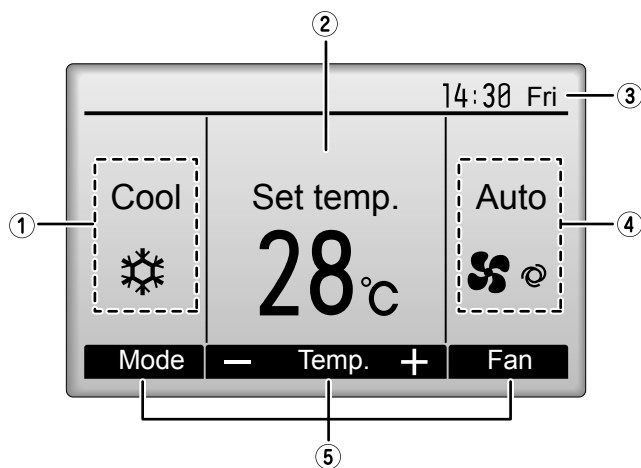

#### ① Operation mode

Indoor unit operation mode appears here.

#### ② Preset temperature

Preset temperature appears here.

#### ③ Clock (See the Installation Manual.)

Current time appears here.

#### ④ Fan speed

Fan speed setting appears here.

#### ⑤ Button function guide

Functions of the corresponding buttons appear here.



Appears when the ON/OFF operation is centrally controlled.



Appears when the operation mode is centrally controlled.



Appears when the preset temperature is centrally controlled.



Appears when the filter reset function is centrally controlled.



Indicates when filter needs maintenance.

#### ⑪ Room temperature (See the Installation Manual.)

Current room temperature appears here.



Appears when the buttons are locked.



Appears when the On/Off timer or Night setback function is enabled.



Appears when the Weekly timer is enabled.



Appears while the units are operated in the energy-save mode.



Appears when the built-in thermistor on the remote controller is activated to monitor the room temperature (a).  
[Icon] appears when the thermistor on the indoor unit is activated to monitor the room temperature.



Indicates the vane setting.



Indicates the louver setting.



Indicates the ventilation setting.




Appears when the preset temperature range is restricted.

Most settings (except ON / OFF, mode, fan speed, temperature) can be made from the Menu screen.





## Menu structure

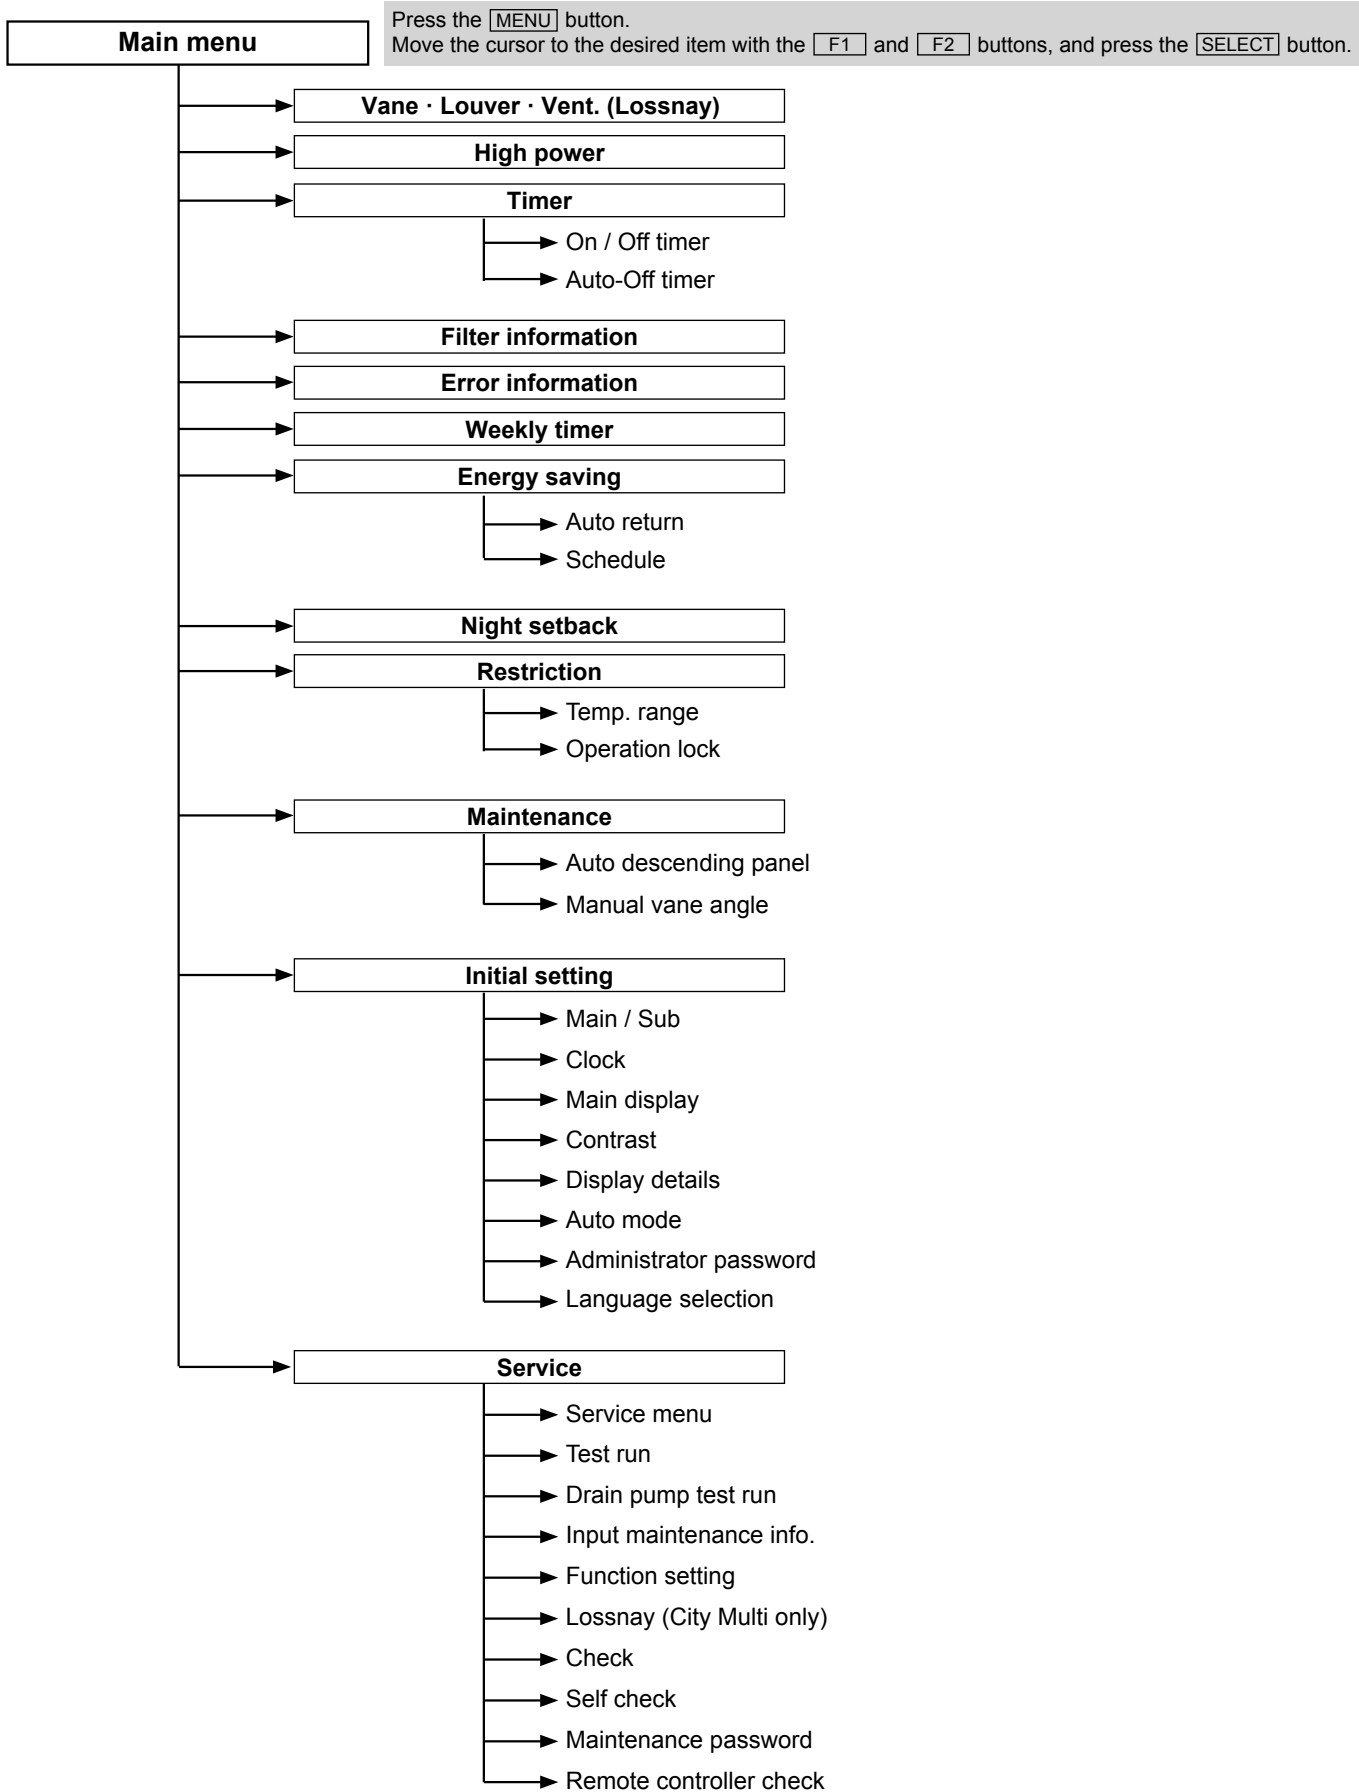

**Not all functions are available on all models of indoor units.**





## Main menu list

Setting and display items		Setting details
Vane · Louver · Vent. (Lossnay)		<p><b>Use to set the vane angle.</b></p> <ul style="list-style-type: none"> <li>• Select a desired vane setting from five different settings.</li> </ul> <p><b>Use to turn ON / OFF the louver.</b></p> <ul style="list-style-type: none"> <li>• Select a desired setting from "ON" and "OFF."</li> </ul> <p><b>Use to set the amount of ventilation.</b></p> <ul style="list-style-type: none"> <li>• Select a desired setting from "Off," "Low," and "High."</li> </ul>
High power		<p><b>Use to reach the comfortable room temperature quickly.</b></p> <ul style="list-style-type: none"> <li>• Units can be operated in the High-power mode for up to 30 minutes.</li> </ul>
Timer	On/Off timer	<p><b>Use to set the operation On/Off times.</b></p> <ul style="list-style-type: none"> <li>• Time can be set in 5-minute increments.</li> <li>* Clock setting is required.</li> </ul>
	Auto-Off timer	<p><b>Use to set the Auto-Off time.</b></p> <ul style="list-style-type: none"> <li>• Time can be set to a value from 30 to 240 in 10-minute increments.</li> </ul>
Filter information		<p><b>Use to check the filter status.</b></p> <ul style="list-style-type: none"> <li>• The filter sign can be reset.</li> </ul>
Error information		<p><b>Use to check error information when an error occurs.</b></p> <ul style="list-style-type: none"> <li>• Error code, error source, refrigerant address, unit model, manufacturing number, contact information (dealer's phone number) can be displayed.</li> <li>* The unit model, manufacturing number, and contact information need to be registered in advance to be displayed.</li> </ul>
Weekly timer		<p><b>Use to set the weekly operation On / Off times.</b></p> <ul style="list-style-type: none"> <li>• Up to eight operation patterns can be set for each day.</li> <li>* Clock setting is required.</li> <li>* Not valid when the On/Off timer is enabled.</li> </ul>
Energy saving	Auto return	<p><b>Use to get the units to operate at the preset temperature after performing energy-save operation for a specified time period.</b></p> <ul style="list-style-type: none"> <li>• Time can be set to a value from 30 and 120 in 10-minute increments.</li> <li>* This function will not be valid when the preset temperature ranges are restricted.</li> </ul>
	Schedule	<p><b>Set the start/stop times to operate the units in the energy-save mode for each day of the week, and set the energy-saving rate.</b></p> <ul style="list-style-type: none"> <li>• Up to four energy-save operation patterns can be set for each day.</li> <li>• Time can be set in 5-minute increments.</li> <li>• Energy-saving rate can be set to a value from 0% or 50 to 90% in 10% increments.</li> <li>* Clock setting is required.</li> </ul>
Night setback		<p><b>Use to make Night setback settings.</b></p> <ul style="list-style-type: none"> <li>• Select "Yes" to enable the setting, and "No" to disable the setting. The temperature range and the start/stop times can be set.</li> <li>* Clock setting is required.</li> </ul>
Restriction	Temp. range	<p><b>Use to restrict the preset temperature range.</b></p> <ul style="list-style-type: none"> <li>• Different temperature ranges can be set for different operation modes.</li> </ul>
	Operation lock	<p><b>Use to lock selected functions.</b></p> <ul style="list-style-type: none"> <li>• The locked functions cannot be operated.</li> </ul>
Maintenance	Auto descending panel	<p><b>Auto descending panel (Optional parts) Up / Down you can do.</b></p>
	Manual vane angle	<p><b>Use to set the vane angle for each vane to a fixed position.</b></p>
Initial setting	Main/Sub	<p><b>When connecting two remote controllers, one of them needs to be designated as a sub controller.</b></p>
	Clock	<p><b>Use to set the current time.</b></p>
	Main display	<p><b>Use to switch between "Full" and "Basic" modes for the Main display.</b></p> <ul style="list-style-type: none"> <li>• The default setting is "Full."</li> </ul>
	Contrast	<p><b>Use to adjust screen contrast.</b></p>



Setting and display items		Setting details
Initial setting	Display details	<p><b>Make the settings for the remote controller related items as necessary.</b></p> <p><b>Clock:</b> The factory settings are "Yes" and "24h" format.</p> <p><b>Temperature:</b> Set either Celsius (°C) or Fahrenheit (°F).</p> <p><b>Room temp. :</b> Set Show or Hide.</p> <p><b>Auto mode:</b> Set the Auto mode display or Only Auto display.</p>
	Auto mode	<p><b>Whether or not to use the AUTO mode can be selected by using the button.</b></p> <p><b>This setting is valid only when indoor units with the AUTO mode function are connected.</b></p>
	Administrator password	<p><b>The administrator password is required to make the settings for the following items.</b></p> <ul style="list-style-type: none"> <li>• Timer setting</li> <li>• Energy-save setting</li> <li>• Weekly timer setting</li> <li>• Restriction setting</li> <li>• Outdoor unit silent mode setting</li> <li>• Night set back</li> </ul>
	Language selection	<p><b>Use to select the desired language.</b></p>
Service	Test run	<p><b>Select "Test run" from the Service menu to bring up the Test run menu.</b></p> <ul style="list-style-type: none"> <li>• Test run</li> <li>• Drain pump test run</li> </ul>
	Input maintenance	<p><b>Select "Input maintenance Info." from the Service menu to bring up the Maintenance information screen.</b></p> <p><b>The following settings can be made from the Maintenance Information screen.</b></p> <ul style="list-style-type: none"> <li>• Model name input</li> <li>• Serial No. input</li> <li>• Dealer information input</li> </ul>
	Function setting	<p><b>Make the settings for the indoor unit functions via the remote controller as necessary.</b></p>
	LOSSNAY setting (City Multi only)	<p><b>This setting is required only when the operation of City Multi units is interlocked with LOSSNAY units.</b></p>
	Check	<p><b>Error history:</b> Display the error history and execute delete error history.</p> <p><b>Refrigerant leak check:</b> Refrigerant leaks can be judged.</p> <p><b>Smooth maintenance:</b> The indoor and outdoor maintenance data can be displayed.</p> <p><b>Request cord:</b> Details of the operation data including each thermistor temperature and error history can be checked.</p>
	Self check	<p><b>Error history of each unit can be checked via the remote controller.</b></p>
	Maintenance password	<p><b>Take the following steps to change the maintenance password.</b></p>
	Remote controller check	<p><b>When the remote controller does not work properly, use the remote controller checking function to troubleshoot the problem.</b></p>

### 3-4. WIRED REMOTE CONTROLLER <PAR-21MAA>

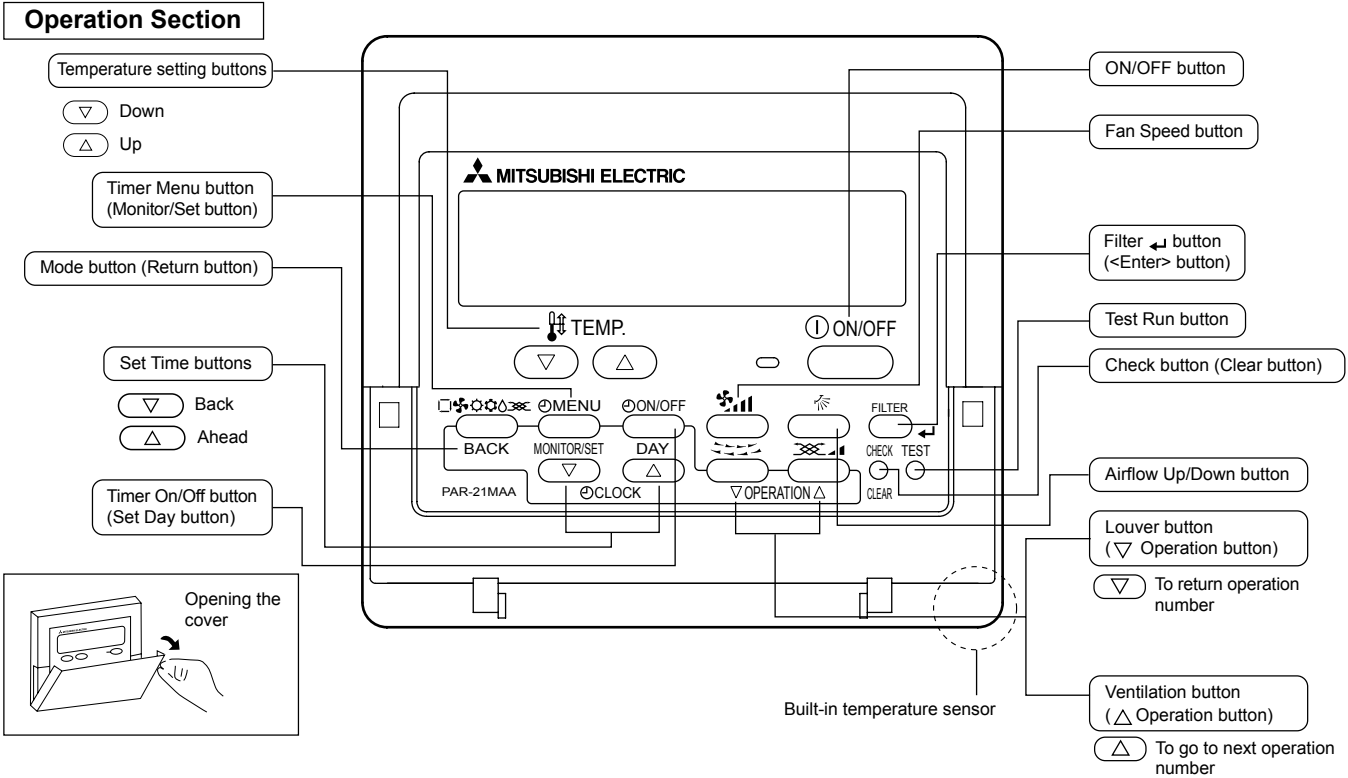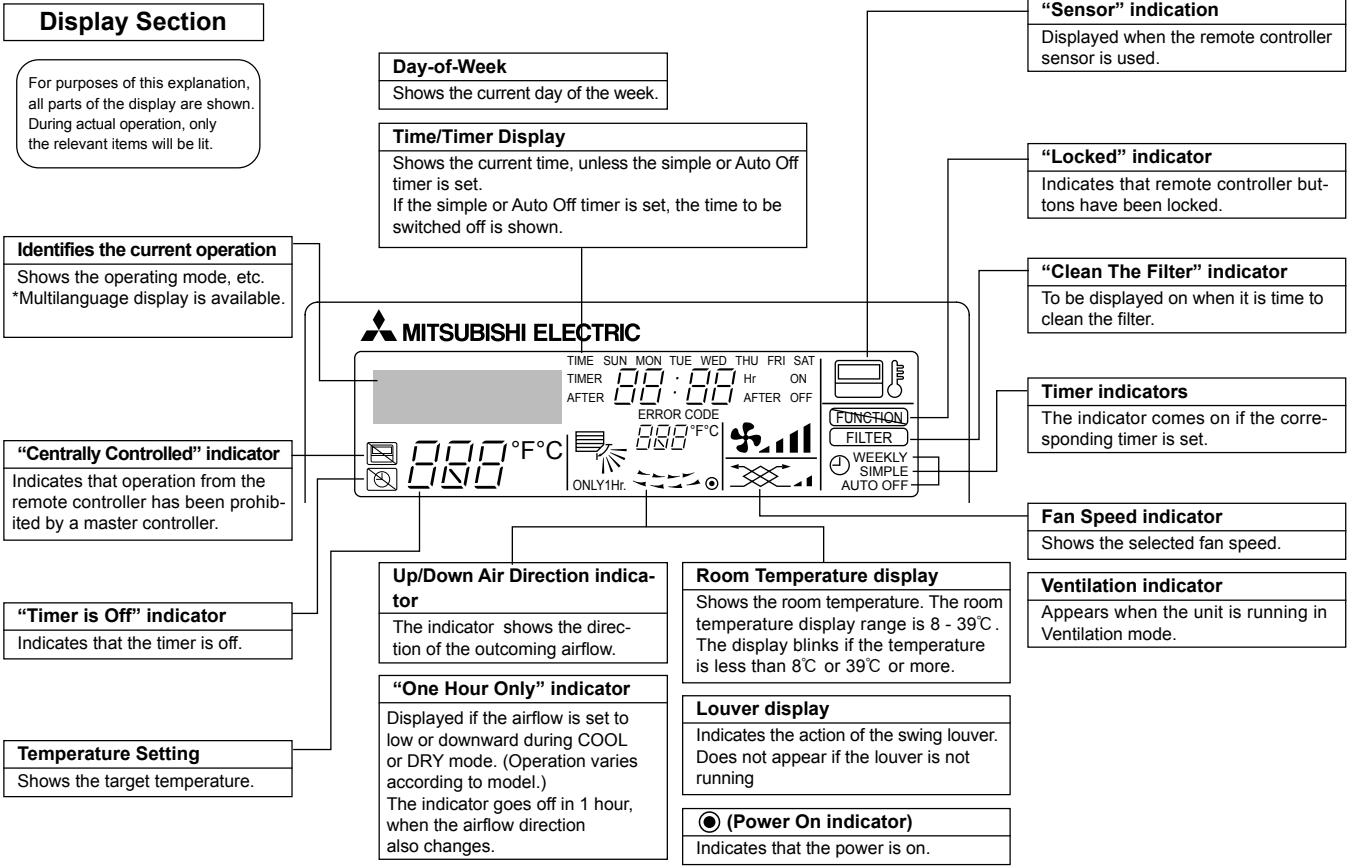

## 4

## SPECIFICATIONS

## 4-1. SPECIFICATIONS

Model			PLFY-P32VBM-E	PLFY-P40VBM-E	PLFY-P50VBM-E	PLFY-P63VBM-E	
Power source			1-phase 220-240V 50Hz, 1-phase 220V 60Hz				
Cooling capacity (Nominal)	* 1	kW	3.6	4.5	5.6	7.1	
	* 1	kcal / h	3,100	3,900	4,800	6,100	
	* 1	Btu / h	12,300	15,400	19,100	24,200	
	* 2	kcal / h	3,150	4,000	5,000	6,300	
	Power input	kW	0.03	0.04	0.04	0.05	
	Current input	A	0.22	0.29	0.29	0.36	
Heating capacity (Nominal)	* 3	kW	4.0	5.0	6.3	8.0	
	* 3	kcal / h	3,400	4,300	5,400	6,900	
	* 3	Btu / h	13,600	17,100	21,500	27,300	
	Power input	kW	0.02	0.03	0.03	0.04	
	Current input	A	0.14	0.22	0.22	0.29	
External finish			Galvanized steel sheet				
External dimension H × W × D		mm	258 x 840 x 840				
		in.	10-3/16 x 33-1/8 x 33-1/8				
Net weight		kg (lb)	22 (49)	22 (49)	22 (49)	23 (51)	
Decoration panel	Model		PLP-6BA	PLP-6BA	PLP-6BA	PLP-6BA	
	External finish		MUNSELL (6.4Y 8.9/0.4)				
	Dimension		35 x 950 x 950				
	H × W × D		1-3/8 x 37-7/16 x 37-7/16				
	Net weight		6 (13)				
Heat exchanger			Cross fin (Aluminum fin and copper tube)				
FAN	Type × Quantity		Turbo fan × 1	Turbo fan × 1	Turbo fan × 1	Turbo fan × 1	
	External static press.	Pa	0	0	0	0	
		mmHzO	0	0	0	0	
	Motor type		DC motor				
	Motor output	kW	0.050	0.050	0.050	0.050	
	Driving mechanism		Direct-drive				
	Airflow rate (Low-Mid2- Mid1-High)	m <sup>3</sup> / min	11 - 12 - 13 - 14	12 - 13 - 14 - 16	12 - 13 - 14 - 16	14 - 15 - 16 - 18	
L / s		183 - 200 - 217 - 233	200 - 217 - 233 - 267	200 - 217 - 233 - 267	233 - 250 - 267 - 300		
	cfm	388 - 424 - 459 - 494	424 - 459 - 494 - 565	424 - 459 - 494 - 565	494 - 530 - 565 - 636		
Noise level (Low-Mid2-Mid1-High) (measured in anechoic room)		dB <A>	27 - 28 - 29 - 31	27 - 28 - 30 - 31	27 - 28 - 30 - 31	28 - 29 - 30 - 32	
Insulation material			PS				
Air filter			PP honeycomb				
Protection device			Fuse				
Refrigerant control device			LEV				
Connectable outdoor unit			R410A CITY MULTI				
Diameter of refrigerant pipe	Liquid	mm (in.)	φ6.35 (φ1/4) Flare	φ6.35 (φ1/4) Flare	φ6.35 (φ1/4) Flare	φ9.52 (φ3/8) Flare	
	Gas	mm (in.)	φ12.7 (φ1/2) Flare	φ12.7 (φ1/2) Flare	φ12.7 (φ1/2) Flare	φ15.88 (φ5/8) Flare	
Field drain pipe size		mm (in.)	O.D. φ32 (VP-25)				
Standard attachment	Document		Installation Manual, Instruction Book				
	Accessory						
Remark	Optional parts						
	Decoration panel **1		PLP-6BA	PLP-6BA	PLP-6BA	PLP-6BA	
	Air outlet shutter plate		PAC-SH51SP-E	PAC-SH51SP-E	PAC-SH51SP-E	PAC-SH51SP-E	
	High efficiency filter element **2		PAC-SH59KF-E	PAC-SH59KF-E	PAC-SH59KF-E	PAC-SH59KF-E	
	Multi-function casement		PAC-SH53TM-E	PAC-SH53TM-E	PAC-SH53TM-E	PAC-SH53TM-E	
			**1. PLY-P-VBM-E should use together with PLP-6BA. **2. PAC-SH53TM-E is necessary to use with filter PAC-SH59KF-E.				
Installation		Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual.					
Note :		* 1 Nominal cooling conditions	* 2 Nominal cooling conditions	* 3 Nominal heating conditions	Unit converter		
Indoor :		27°C DB/19°C WB (81°F DB/66°F WB)	27°C DB/19.5°C WB (81°F DB/67°F WB)	20°C DB (68°F DB)	kcal/h = kW × 860		
Outdoor :		35°C DB (95°F DB)	35°C DB (95°F DB)	7°C DB/6°C WB (45°F DB/43°F WB)	Btu/h = kW × 3,412		
Pipe length :		7.5 m (24-9/16 ft)	5 m (16-3/8 ft)	7.5 m (24-9/16 ft)	cfm = m <sup>3</sup> /min × 35.31		
Level difference :		0 m (0 ft)	0 m (0 ft)	0 m (0 ft)	lb = kg / 0.4536		
		* Nominal conditions *1, *3 are subject to JIS B8615-1.				*Above specification data is subject to rounding variation.	
		* Due to continuing improvement, above specification may be subject to change without notice.					



Model		PLFY-P80VBM-E	PLFY-P100VBM-E	PLFY-P125VBM-E		
Power source		1-phase 220-240V 50Hz, 1-phase 220V 60Hz				
Cooling capacity (Nominal)	* 1 kW	9.0	11.2	14.0		
	* 1 kcal / h	7,700	9,600	12,000		
	* 1 Btu / h	30,700	38,200	47,800		
	* 2 kcal / h	8,000	10,000	12,500		
	Power input	kW	0.07	0.15	0.16	
Current input	A	0.51	1.00	1.07		
Heating capacity (Nominal )	* 3 kW	10.0	12.5	16.0		
	* 3 kcal / h	8,600	10,800	13,800		
	* 3 Btu / h	34,100	42,700	54,600		
	Power input	kW	0.06	0.14	0.15	
	Current input	A	0.43	0.94	1.00	
External finish		Galvanized steel sheet				
External dimension H × W × D		mm 258 x 840 x 840	298 x 840 x 840			
		in. 10-3/16 x 33-1/8 x 33-1/8	11-3/4 x 33-1/8 x 33-1/8			
Net weight		kg (lb)	23(51)	27(60)	27(60)	
Decoration panel	Model	PLP-6BA	PLP-6BA	PLP-6BA		
	External finish		MUNSELL (6.4Y 8.9/0.4)			
	Dimension	mm	35 x 950 x 950			
	H × W × D	in.	1-3/8 x 37-7/16 x 37-7/16			
	Net weight	kg (lb)	6(13)			
Heat exchanger		Cross fin (Aluminum fin and copper tube)				
FAN	Type × Quantity		Turbo fan x 1	Turbo fan x 1	Turbo fan x 1	
	External static press.	Pa	0	0	0	
		mmH <sub>2</sub> O	0	0	0	
	Motor type		DC motor			
	Motor output	kW	0.050	0.120	0.120	
	Driving mechanism		Direct-drive			
	Airflow rate (Low-Mid2- Mid1-High)	m <sup>3</sup> / min	16 - 18 - 20 - 22	21 - 24 - 27 - 29	22 - 25 - 28 - 30	
		L / s	267 - 300 - 333 - 367	350 - 400 - 450 - 483	367 - 417 - 467 - 500	
cfm		565 - 636 - 706 - 777	742 - 848 - 953 - 1024	777 - 883 - 989 - 1059		
Noise level (Low-Mid2-Mid1-High) (measured in anechoic room)		dB <A>	30 - 32 - 35 - 37	34 - 37 - 39- 41	35 - 38 - 41 - 43	
Insulation material		PS				
Air filter		PP honeycomb				
Protection device		Fuse				
Refrigerant control device		LEV				
Connectable outdoor unit		R410A CITY MULTI				
Diameter of refrigerant pipe	Liquid	mm (in.)	φ9.52 (φ3/8) Flare	φ9.52 (φ3/8) Flare	φ9.52 (φ3/8) Flare	
	Gas	mm (in.)	φ15.88 (φ5/8) Flare	φ15.88 (φ5/8) Flare	φ15.88 (φ5/8) Flare	
Field drain pipe size		mm (in.)	O.D. φ32 (VP-25)			
Standard attachment	Document	Installation Manual, Instruction Book				
	Accessory					
Remark	Optional parts					
	Decoration panel **1		PLP-6BA	PLP-6BA	PLP-6BA	
	Air outlet shutter plate		PAC-SH51SP-E	PAC-SH51SP-E	PAC-SH51SP-E	
	High efficiency filter element **2		PAC-SH59KF-E	PAC-SH59KF-E	PAC-SH59KF-E	
	Multi-function casement		PAC-SH53TM-E	PAC-SH53TM-E	PAC-SH53TM-E	
		**1. PLFY-P-VBM-E should use together with PLP-6BA. **2. PAC-SH53TM-E is necessary to use with filter PAC-SH59KF-E.				
Installation		Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual.				
<b>Note :</b>		* 1 Nominal cooling conditions Indoor : 27°C DB/19°C WB (81°FDB/66°FWB) Outdoor : 35°C DB (95°FDB) Pipe length : 7.5 m (24-9/16 ft) Level difference : 0 m (0 ft)	* 2 Nominal cooling conditions 27°C DB/19.5°C WB (81°FDB/67°FWB) 35°C DB (95°FDB) 5 m (16-3/8 ft) 0 m (0 ft)	* 3 Nominal heating conditions 20°C DB (68°FDB) 7°C DB/6°CWB (45°FDB/43°FWB) 7.5 m (24-9/16 ft) 0 m (0 ft)	Unit converter kcal/h = kW × 860 Btu/h = kW × 3,412 cfm = m <sup>3</sup> /min × 35.31 lb = kg / 0.4536	
* Nominal conditions *1,*3 are subject to JIS B8615-1. * Due to continuing improvement, above specification may be subject to change without notice.					*Above specification data is subject to rounding variation.	

## 4-2. ELECTRICAL PARTS SPECIFICATIONS

Service Ref. Parts name	Symbol	PLFY-P32VBM-E.UK	PLFY-P40VBM-E.UK	PLFY-P50VBM-E.UK	PLFY-P63VBM-E.UK
		PLFY-P32VBM-E1.UK	PLFY-P40VBM-E1.UK	PLFY-P50VBM-E1.UK	PLFY-P63VBM-E1.UK
		PLFY-P32VBM-ER2.UK	PLFY-P40VBM-ER2.UK	PLFY-P50VBM-ER2.UK	PLFY-P63VBM-ER2.UK
		PLFY-P32VBM-ER3.UK	PLFY-P40VBM-ER3.UK	PLFY-P50VBM-ER3.UK	PLFY-P63VBM-ER3.UK
Room temperature thermistor	TH21	Resistance 0°C /15kΩ, 10°C /9.6kΩ, 20°C /6.3kΩ, 25°C /5.4kΩ, 30°C /4.3kΩ, 40°C /3.0kΩ			
Liquid pipe thermistor	TH22	Resistance 0°C /15kΩ, 10°C /9.6kΩ, 20°C /6.3kΩ, 25°C /5.4kΩ, 30°C /4.3kΩ, 40°C /3.0kΩ			
Gas pipe thermistor	TH23	Resistance 0°C /15kΩ, 10°C /9.6kΩ, 20°C /6.3kΩ, 25°C /5.4kΩ, 30°C /4.3kΩ, 40°C /3.0kΩ			
Fuse (Indoor controller board)	FUSE	250V 6.3A			
Fan motor	MF	8-pole OUTPUT 50W			
Vane motor	MV	MSBPC20M04 DC12V 300Ω/phase			
Drain pump	DP	PLD-12230ME-1 INPUT 12/10.8W 24 ℓ /Hr			
Drain float switch	FS	open/short detection			
Linear expansion valve	LEV	DC12V Stepping motor drive port dimension ϕ5.2 (0~2000pulse) EDM-40YGME			
Power supply terminal block	TB2	(L, N, ⊕) Rated to 330V 30A *			
Transmission terminal block	TB5	(M1, M2, S) Rated to 250V 20A *			
MA remote controller terminal block	TB15	(1, 2) Rated to 250V 10A *			

\* Note: Refer to WIRING DIAGRAM for the supplied voltage.




Service Ref.	Symbol	PLFY-P80VBM-E.UK PLFY-P80VBM-E1.UK PLFY-P80VBM-ER2.UK PLFY-P80VBM-ER3.UK	PLFY-P100VBM-E.UK PLFY-P100VBM-ER2.UK PLFY-P100VBM-ER3.UK	PLFY-P125VBM-E.UK PLFY-P125VBM-ER2.UK PLFY-P125VBM-ER3.UK
Room temperature thermistor	TH21	Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ		
Liquid pipe thermistor	TH22	Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ		
Gas pipe thermistor	TH23	Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ		
Fuse (Indoor controller board)	FUSE	250V 6.3A		
Fan motor	MF	8-pole OUTPUT 50W	8-pole OUTPUT 120W	
Vane motor	MV	MSBPC20M04 DC12V 300Ω/phase		
Drain pump	DP	PLD-12230ME-1 INPUT 12/10.8W 24 ℓ /Hr		
Drain float switch	FS	open/short detection		
Linear expansion valve	LEV	DC12V Stepping motor drive port dimension ϕ5.2 (0~2000pulse) EDM-80YGME		
Power supply terminal block	TB2	(L, N, ⊕) Rated to 330V 30A *		
Transmission terminal block	TB5	(M1, M2, S) Rated to 250V 20A *		
MA remote controller terminal block	TB15	(1, 2) Rated to 250V 10A *		

\* Note: Refer to WIRING DIAGRAM for the supplied voltage.

### 4-3. SOUND LEVEL

#### PLFY-P-VBM-E

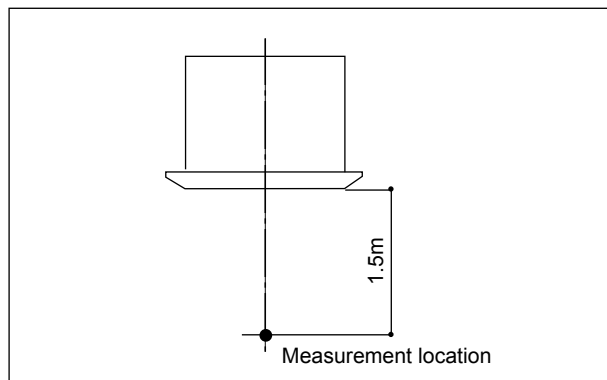








\* Measured in anechoic room.

Sound level at anechoic room : Low-Mid2-Mid1-High

Service Ref.	Sound level dB (A)
PLFY-P32VBM-E(1).UK PLFY-P32VBM-ER2.UK PLFY-P32VBM-ER3.UK	27-28-29-31
PLFY-P40VBM-E(1).UK PLFY-P40VBM-ER2.UK PLFY-P40VBM-ER3.UK PLFY-P50VBM-E(1).UK PLFY-P50VBM-ER2.UK PLFY-P50VBM-ER3.UK	27-28-30-31
PLFY-P63VBM-E(1).UK PLFY-P63VBM-ER2.UK PLFY-P63VBM-ER3.UK	28-29-30-32
PLFY-P80VBM-E(1).UK PLFY-P80VBM-ER2.UK PLFY-P80VBM-ER3.UK	30-32-35-37
PLFY-P100VBM-E.UK PLFY-P100VBM-ER2.UK PLFY-P100VBM-ER3.UK	34-37-39-41
PLFY-P125VBM-E.UK PLFY-P125VBM-ER2.UK PLFY-P125VBM-ER3.UK	35-38-41-43



## 4-4. NC CURVES

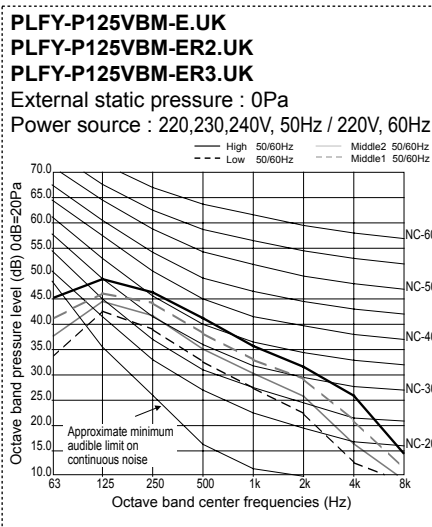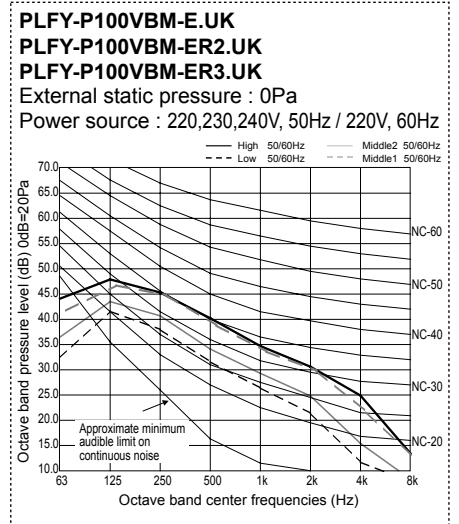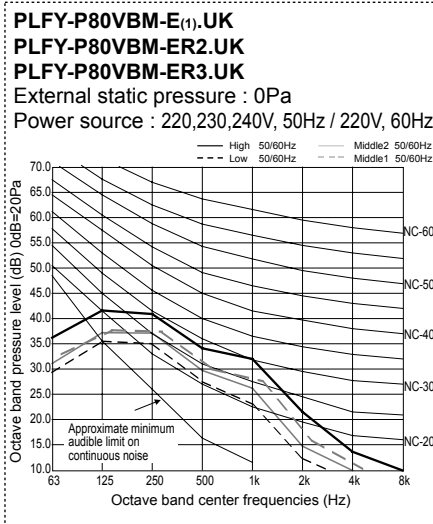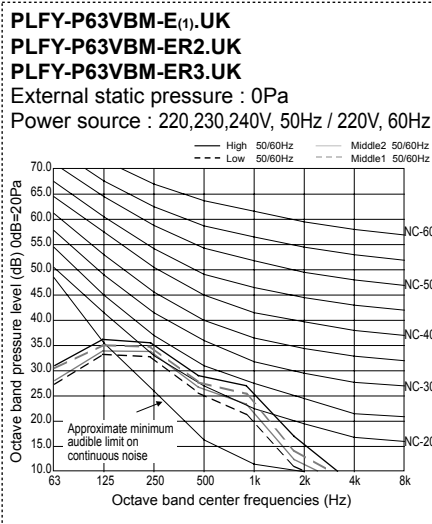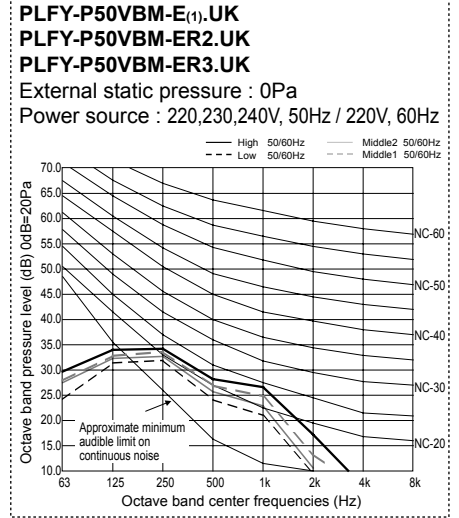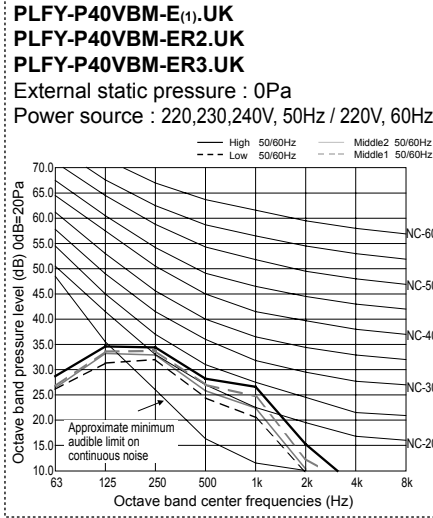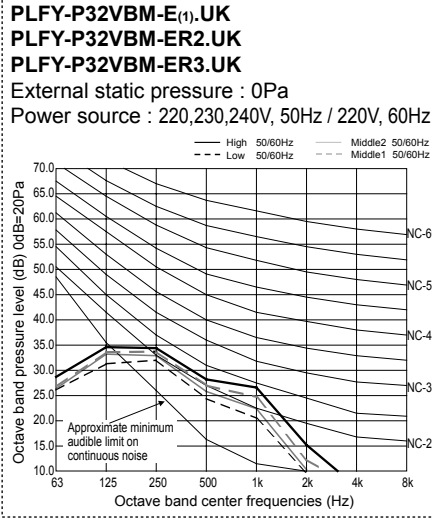




5-1. PLACEMENT OF THE AIR OUTLETS

• For this grille, the blowout direction comes in 11 patterns.

Also, by setting the remote controller to the appropriate settings, you can adjust the airflow and speed. Select the settings from Table1 according to the location in which you want to install the unit.

1) Decide on the pattern of the airflow direction.


<Table 1>

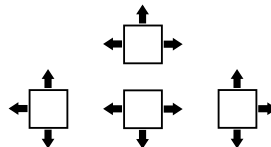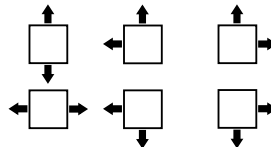	4-direction	3-direction	2-direction
Blowout direction pattern	<p>Pattern 1 Initial setting</p> 	<p>Pattern 4 1 air outlet fully closed</p> 	<p>Pattern 6 2 air outlet fully closed</p> 

Note1.  
For 3 and 2-direction settings, please use the air outlet shutter plate (option).

2) According to the number of air outlets and height of the ceiling to install the unit, be sure to set up the switches (SWA, SWB) on the circuit board to the appropriate setting.

• Correspondence of ceiling heights to numbers of air outlets

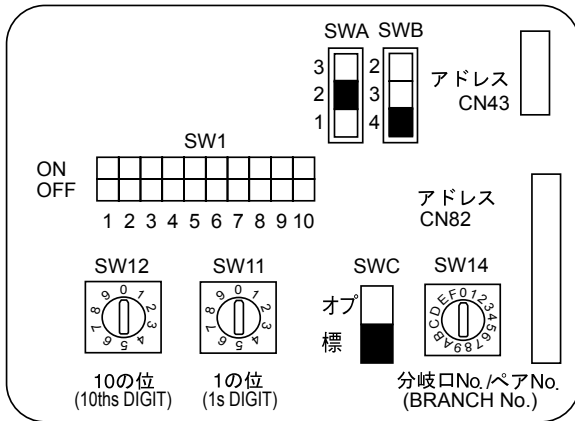

PLFY-P32/40/50/63/80VBM-E.UK  
PLFY-P32/40/50/63/80VBM-E1.UK  
PLFY-P32/40/50/63/80VBM-ER2.UK  
PLFY-P32/40/50/63/80VBM-ER3.UK

		SWA	①	②	③
		SWB	Silent	Standard	High ceiling
④	4 direction		2.5m	2.7m	3.5m
③	3 direction		2.7m	3.0m	3.5m
②	2 direction		3.0m	3.3m	3.5m

PLFY-P100/125VBM-E.UK  
PLFY-P100/125VBM-ER2.UK  
PLFY-P100/125VBM-ER3.UK

		SWA	①	②	③
		SWB	Silent	Standard	High ceiling
④	4 direction		2.7m	3.2m	4.5m
③	3 direction		3.0m	3.6m	4.5m
②	2 direction		3.3m	4.0m	4.5m

## 5-2. BRANCH DUCT HOLE AND FRESH AIR INTAKE HOLE

At the time of installation, use the duct holes (cut out) located at the positions shown in following diagram, as and when required.

- A fresh air intake hole for the optional multi function casement can also be made.


Note:

The figures marked with \* in the drawing below represent the dimensions of the main unit excluding those of the optional multi function casement.

When installing the optional multi function casement, add 135 mm to the dimensions marked on the figure.


When installing the branch ducts, be sure to insulate adequately.

Otherwise, condensation and dripping may occur.

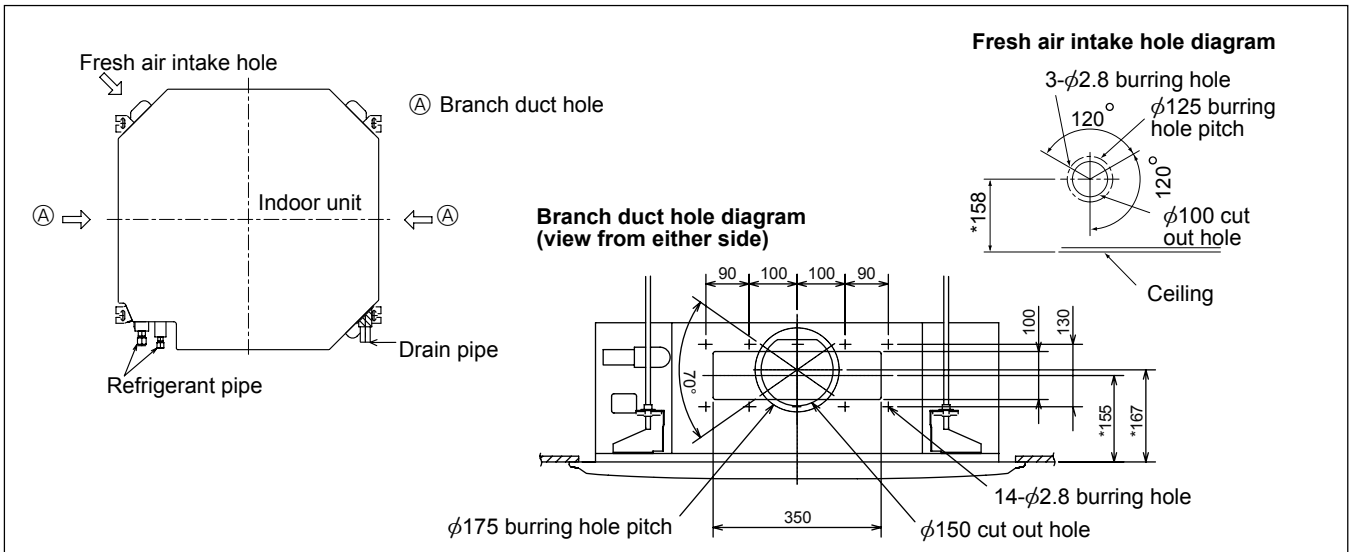

## 5-3. OPERATION IN CONJUNCTION WITH DUCT FAN (Booster fan)


- Whenever the indoor unit is operating, the duct fan also operates.
    - (1) Connect the optional multiple remote controller adapter (PAC-SA88HA-E) to the connector CN51 on the indoor controller board.
    - (2) Drive the relay after connecting the 12V DC relay between the Yellow and Orange connector wires.
- MB: Electromagnetic switch power relay for duct fan.  
 X: Auxiliary relay (For DC 12V, coil rating : 1.0W or below)

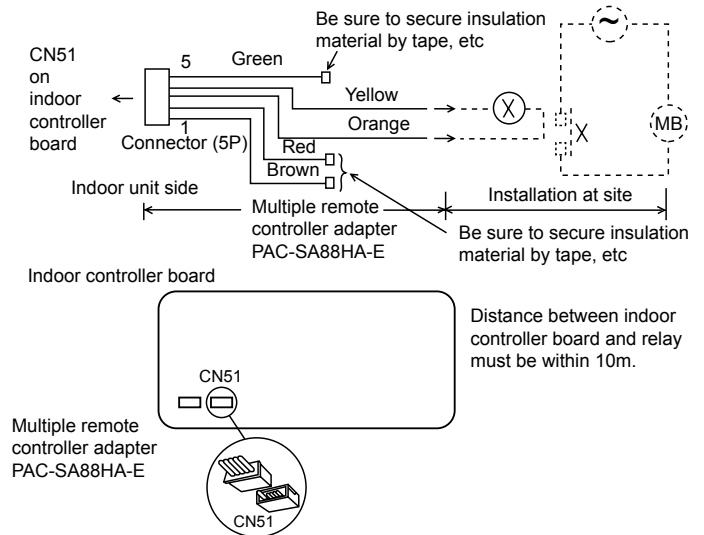


## 5-4. FRESH AIR INTAKE AMOUNT & STATIC PRESSURE CHARACTERISTICS

- 1 PLFY-P32/40/50/63/80VBM-E.UK
- PLFY-P32/40/50/63/80VBM-E1.UK
- PLFY-P32/40/50/63/80VBM-ER2.UK
- PLFY-P32/40/50/63/80VBM-ER3.UK


### Multi function casement + Standard filter

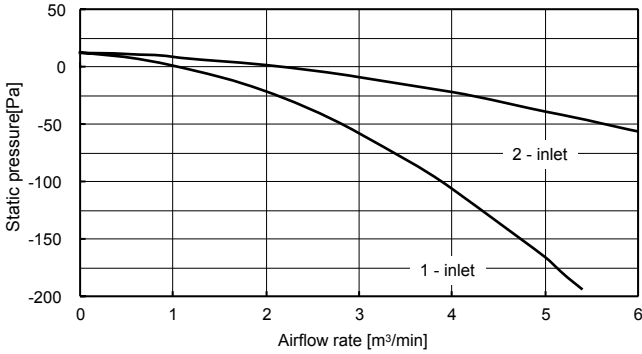


### Multi function casement + High efficiency filter

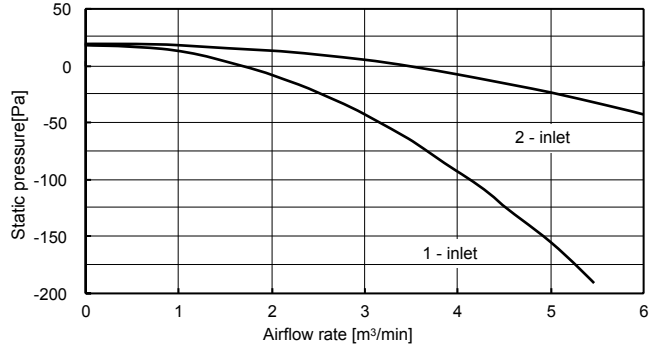

### Taking air into the unit

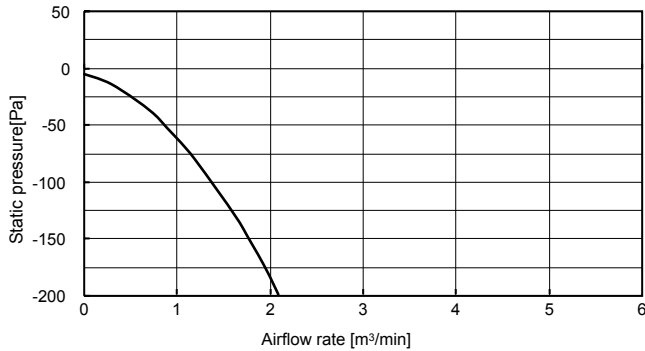


### How to read curves

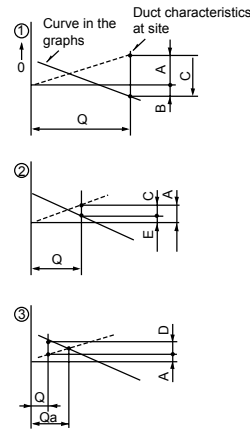


- Q...Planned amount of fresh air intake <math>\langle m^3/min \rangle</math>
- A...Static pressure loss of fresh air intake duct system with airflow amount Q <math>\langle Pa \rangle</math>
- B...Forced static pressure at air conditioner inlet with airflow amount Q <math>\langle Pa \rangle</math>
- C...Static pressure of booster fan with airflow amount Q <math>\langle Pa \rangle</math>
- D...Static pressure loss increase amount of fresh air intake duct system for airflow amount Q <math>\langle Pa \rangle</math>
- E...Static pressure of indoor unit with airflow amount Q <math>\langle Pa \rangle</math>
- Qa...Estimated amount of fresh air intake without D <math>\langle m^3/min \rangle</math>

- 2 PLFY-P100/125VBM-E.UK
- PLFY-P100/125VBM-ER2.UK
- PLFY-P100/125VBM-ER3.UK

### Multi function casement + Standard filter

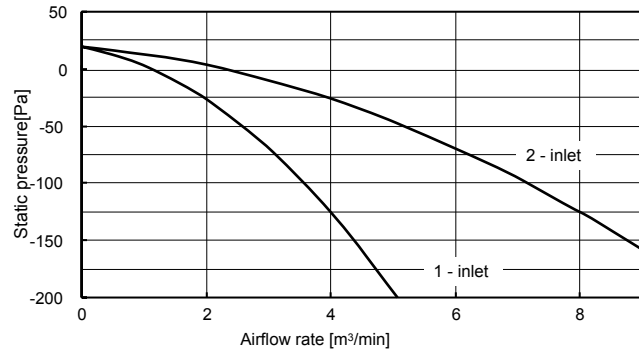

### Multi function casement + High efficiency filter




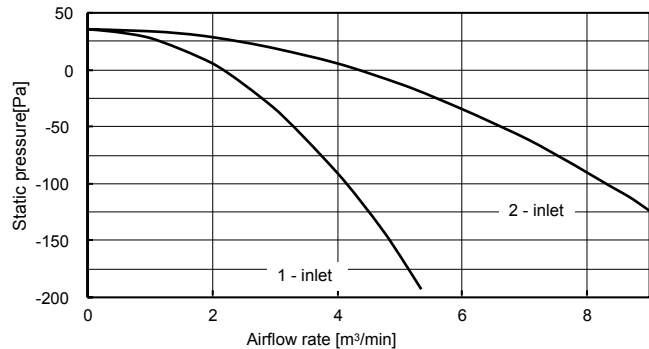


### Taking air into the unit




PLFY-P32/40/50/63/80/100/125VBM-E.UK  
 PLYF-P32/40/50/63/80VBM-E1.UK  
 PLYF-P32/40/50/63/80/100/125VBM-ER2.UK  
 PLYF-P32/40/50/63/80/100/125VBM-ER3.UK


Unit : mm

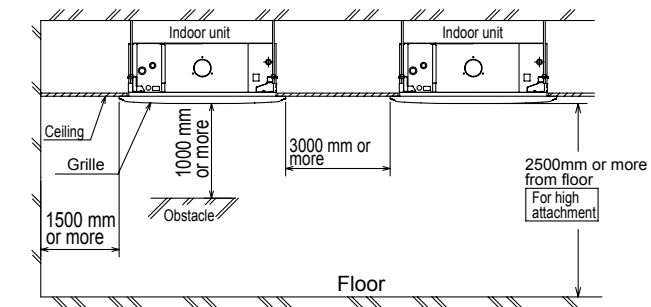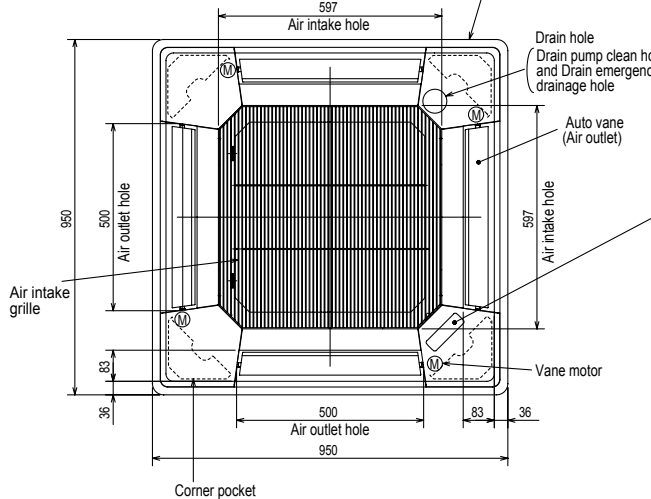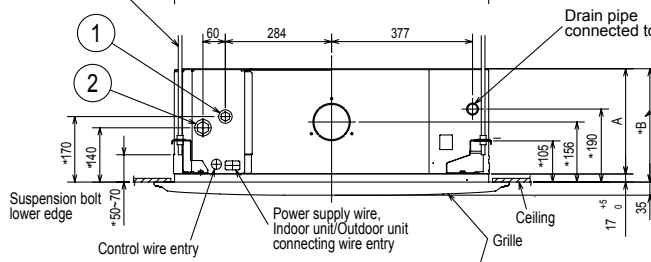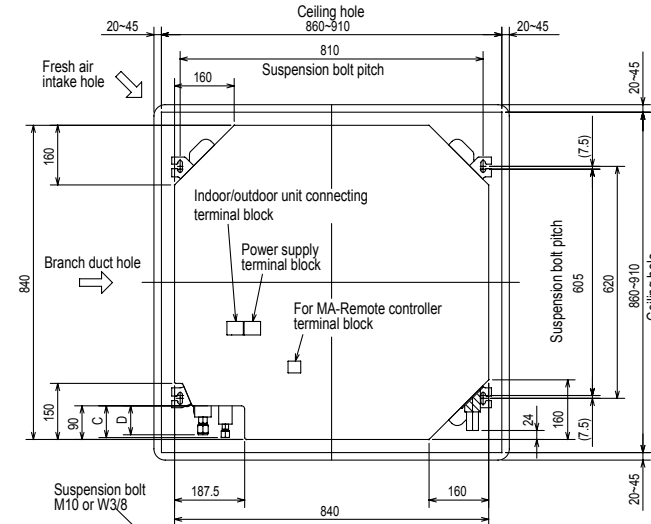

Detail connecting of branch duct(Both aspects)

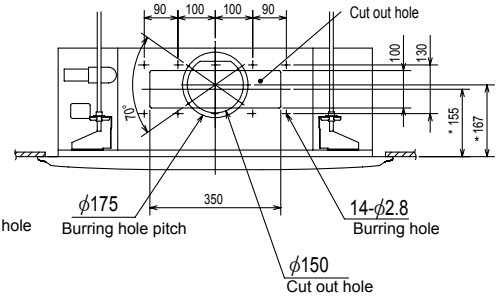

Detail drawing of fresh air intake hole

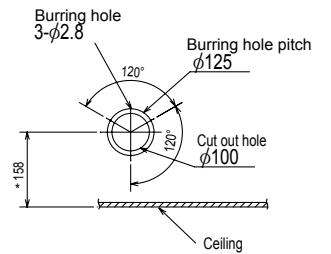

( Connected the attached flexible pipe or socket. )

Keep approximately 10 to 15 mm space between unit ceiling and ceiling slab.

In case of standard grille : PLP-6BA/PLP-6BAMD




In case of auto-grille : PLP-6BAJ


In case of wireless remote controller : PLP-6BALM

Emergency operation switch<Cooling> and Emergency Up/Down switch<Up>

Emergency operation switch<Heating>and Emergency Up/Down switch<Down>

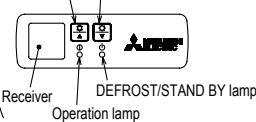

Auto-grille  
Air intake grille up/down distance

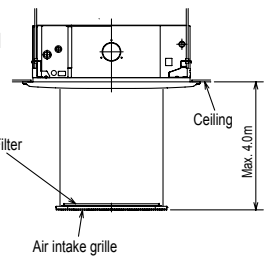


- Note
1. Please choose the grille from a standard grille, auto-grille.
  2. As for drain pipe, please use VP-25 (O.D. φ32 PVC TUBE). Drain pump is included. Max. lifting height is 850mm from the ceiling.
  3. As for suspension bolt, please use M10 or W3/8. (Procured at local site)
  4. Electrical box may be removed for the service purpose. Make sure to slack the electrical wire little bit for control/power wires connection.
  5. The height of the indoor unit is able to be adjusted with the grille attached.
  6. For the installation of the optional high efficiency filter or optional multi-functional casement.
    - 1) Requires E or more space between transom and ceiling for the installation.
    - 2) Add 135 mm to the dimensions \* marked on the figure.
    - 3) The optional high efficiency filter must be used jointly with optional multi-functional casement.
  7. When installing the branch ducts, be sure to insulate adequately. Otherwise condensation and dripping may occur. (It becomes the cause of dew drops/water dew.)
  8. As for necessary installation/service space, please refer to the left figure.
- Accessory ... Drain socket (I.D. 32)

Models	①	②	A	B	C	D	E
PLFY-P32,40, 50VBM-E	Refrigerant pipe ·φ6.35 Flared connection···1/4inch	Refrigerant pipe ·φ12.7 Flared connection···1/2inch	241	258	80	74	400
PLFY-P63,80VBM-E	Refrigerant pipe ·φ9.52 Flared connection···3/8inch	Refrigerant pipe ·φ15.88 Flared connection···5/8inch	281	298	85	77	440
PLFY-P100,125VBM-E							

PLFY-P32/40/50/63/80/100/125VBM-E.UK  
 PLYF-P32/40/50/63/80VBM-E1.UK  
 PLYF-P32/40/50/63/80/100/125VBM-ER2.UK

[LEGEND]

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
I. B	INDOOR CONTROLLER BOARD	TB2	TERMINAL BLOCK	OPTION PART	
CN27	CONNECTOR	TB5	TERMINAL BLOCK	W.B	PCB FOR WIRELESS REMOTE CONTROLLER
CN32	DAMPER	TB15	TERMINAL BLOCK	BZ	BUZZER
CN51	CENTRALLY CONTROL	TH21	THERMISTOR	LED1	LED (OPERATION INDICATION : GREEN)
CN52	REMOTE INDICATION	TH22	THERMISTOR	LED2	LED (PREPARATION FOR HEATING : ORANGE)
FUSE	FUSE (T6.3AL250V)	TH23	THERMISTOR	RU	RECEIVING UNIT
LED1	POWER SUPPLY (I. B)			SW1	EMERGENCY OPERATION (HEAT / DOWN)
LED2	POWER SUPPLY (I. B)			SW2	EMERGENCY OPERATION (COOL / UP)
SW2	SWITCH	A. B	ADDRESS BOARD		
SW3	MODE SELECTION	SWA	SWITCH		
SW4	MODEL SELECTION	SWB	SWITCH		
SWE	DRAIN PUMP (TEST MODE)	SWC	SWITCH		
X1	AUX. RELAY	SW1	SWITCH		
DP	DRAIN PUMP	SW11	SWITCH		
FS	DRAIN FLOAT SWITCH	SW12	SWITCH		
LEV	LINEAR EXPANSION VALVE	SW14	SWITCH		
MF	FAN MOTOR				
MV	VANE MOTOR				

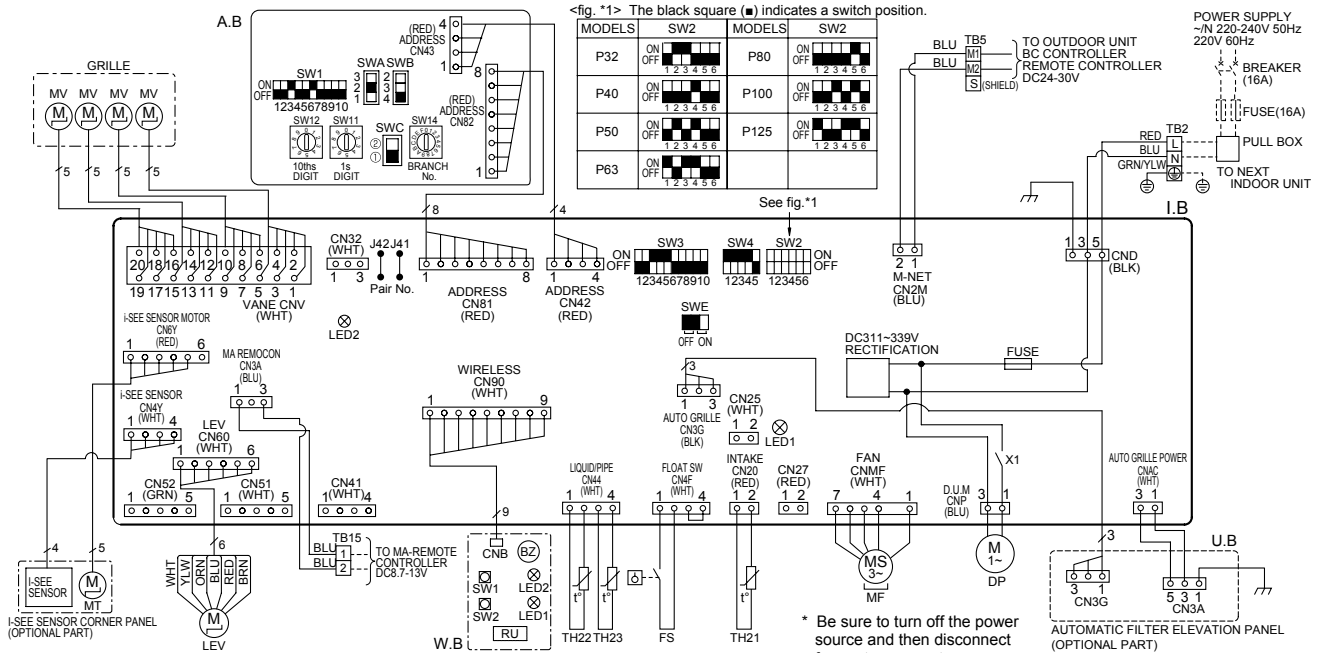

NOTES:

1. At servicing for outdoor unit, always follow the wiring diagram of outdoor unit.
2. In case of using MA-Remote controller, please connect to TB15.  
(Remote controller wire is non-polar.)
3. In case of using M-NET, please connect to TB5. (Transmission line is non-polar.)
4. Symbol [S] of TB5 is the shield wire connection.
5. Symbols used in wiring diagram above are, □□□: terminal block, ○○○○: connector.
6. The setting of the SW2 dip switches differs in the capacity. For the detail, refer to fig \*1.

LED on indoor board for service

Mark	Meaning	Function
LED1	Main power supply	Main Power supply (Indoor unit:220-240V) power on – Lamp is lit.
LED2	Power supply for MA-Remote controller	Power supply for MA-Remote controller on – Lamp is lit.



PLFY-P32/40/50/63/80/100/125VBM-ER3.UK

[LEGEND]

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
I. B	INDOOR CONTROLLER BOARD	DP	DRAIN-UP MACHINE	A. B	ADDRESS BOARD
CN27	CONNECTOR DAMPER	FS	DRAIN FLOAT SWITCH	SWA	SWITCH CEILING HEIGHT SELECTOR
CN32	CONNECTOR REMOTE SWITCH	LEV	LINEAR EXPANSION VALVE	SWB	SWITCH DISCHARGE OUTLET NUMBER SELECTOR
CN51	CONNECTOR CENTRALLY CONTROL	MF	FAN MOTOR	SWC	SWITCH OPTION SELECTOR
CN52	CONNECTOR REMOTE INDICATION	MV	VANE MOTOR	SW1	SWITCH MODE SELECTION
CH100	IT TERMINAL	TB2	TERMINAL POWER SUPPLY	SW11	SWITCH ADDRESS SETTING 1s DIGIT
FUSE	FUSE(T6.3AL250V)	TB5	TERMINAL BLOCK TRANSMISSION	SW12	SWITCH ADDRESS SETTING 10ths DIGIT
LED1	LED(POWER SUPPLY(I. B))	TB15	TERMINAL BLOCK MA-REMOTE CONTROLLER	SW14	SWITCH CONNECTION NO.
LED2	LED(POWER SUPPLY(I. B))	TH21	THERMISTOR ROOM TEMP. DETECTION (0°C / 15kΩ, 25°C / 5.4kΩ)	OPTION PART	
SW2	SWITCH CAPACITY CODE	TH22	THERMISTOR PIPE TEMP. DETECTION / LIQUID (0°C / 15kΩ, 25°C / 5.4kΩ)	W. B	PCB FOR WIRELESS REMOTE CONTROLLER
SW3	SWITCH MODE SELECTION	TH23	THERMISTOR PIPE TEMP. DETECTION / GAS (0°C / 15kΩ, 25°C / 5.4kΩ)	BZ	BUZZER
SW4	SWITCH MODEL SELECTION			LED1	LED(OPERATION INDICATION : GREEN)
SWE	SWITCH DRAIN-UP MACHINE(TEST MODE)			LED2	LED(PREPARATION FOR HEATING : ORANGE)
X1	AUX. RELAY DRAIN WATER LIFTING-UP MACH.			RU	RECEIVING UNIT
				SW1	SWITCH EMERGENCY OPERATION(HEAT / DOWN)
				SW2	SWITCH EMERGENCY OPERATION(COOL / UP)

The black square(■)indicates a switch position.<※1>

MODELS	SW2	MODELS	SW2
P32	ON OFF 1 2 3 4 5 6	P80	ON OFF 1 2 3 4 5 6
P40	ON OFF 1 2 3 4 5 6	P100	ON OFF 1 2 3 4 5 6
P50	ON OFF 1 2 3 4 5 6	P125	ON OFF 1 2 3 4 5 6
P63	ON OFF 1 2 3 4 5 6		

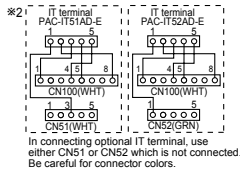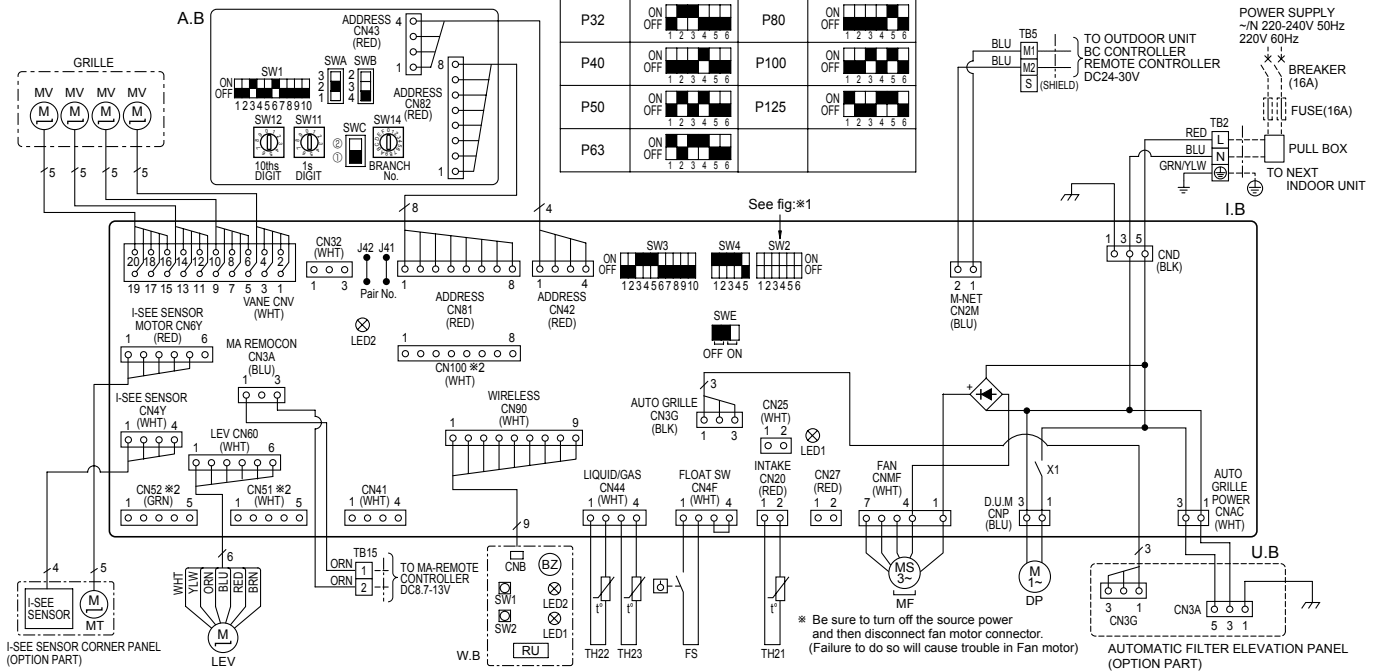


NOTES:

1. At servicing for outdoor unit, always follow the wiring diagram of outdoor unit.
2. In case of using MA-Remote controller, please connect to TB15. (Remote controller wire is non-polar.)
3. In case of using M-NET, please connect to TB5. (Transmission line is non-polar.)
4. Symbol [S] of TB5 is the shield wire connection.
5. Symbols used in wiring diagram above are, □□□: terminal block, ○○○: connector.
6. The setting of the SW2 dip switches differs in the capacity. For the detail, refer to fig<※1>.

LED on indoor board for service

Mark	Meaning	Function
LED1	Main power supply	Main Power supply(Indoor unit:220-240V) power on → lamp is lit
LED2	Power supply for MA-Remote controller	Power supply for MA-Remote controller on → lamp is lit

PLFY-P32/40/50/63/80/100/125VBM-E.UK  
 PLY-P32/40/50/63/80VBM-E<sub>1</sub>.UK  
 PLY-P32/40/50/63/80/100/125VBM-ER2.UK  
 PLY-P32/40/50/63/80/100/125VBM-ER3.UK

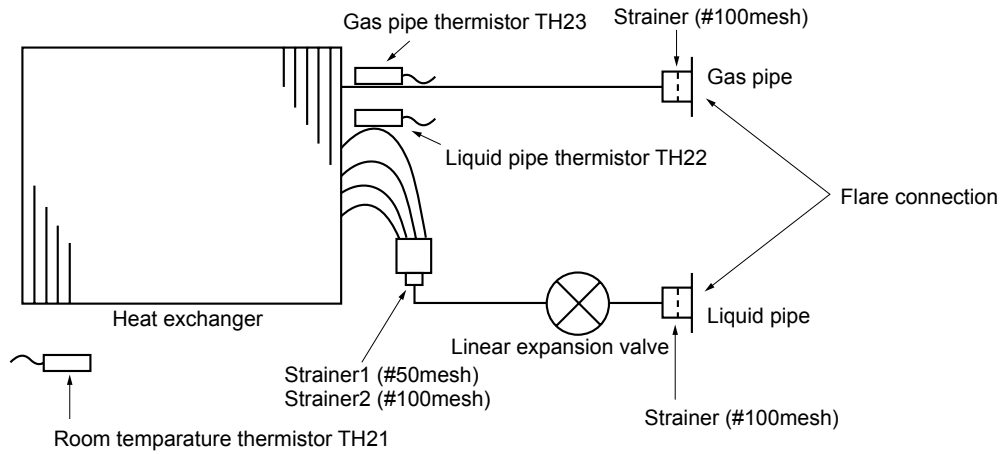

Unit : mm(inch)

Capacity	PLFY-P32/40VBM-E PLFY-P32/40VBM-E <sub>1</sub>	PLFY-P50VBM-E PLFY-P50VBM-E <sub>1</sub>	PLFY-P63/80VBM-E PLFY-P63/80VBM-E <sub>1</sub>	PLFY-P100/125VBM-E
Gas pipe	φ12.7(1/2)	φ12.7(1/2)/φ15.88(5/8)	φ15.88(5/8)	φ15.88(5/8)/φ19.05(3/4)
Liquid pipe	φ6.35(1/4)	φ6.35(1/4)/φ9.52(3/8)	φ9.52(3/8)	φ9.52(3/8)

Capacity	PLFY-P32/40/50VBM-ER2 PLFY-P32/40/50VBM-ER3	PLFY-P63/80/100/125VBM-ER2 PLFY-P63/80/100/125VBM-ER3
Gas pipe	φ12.7(1/2)	φ15.88(5/8)
Liquid pipe	φ6.35(1/4)	φ9.52(3/8)











9-1. HOW TO CHECK THE PARTS

PLFY-P32/40/50/63/80/100/125VBM-E.UK

PLFY-P32/40/50/63/80/100/125VBM-ER2.UK

PLFY-P32/40/50/63/80VBM-E1.UK

PLFY-P32/40/50/63/80/100/125VBM-ER3.UK

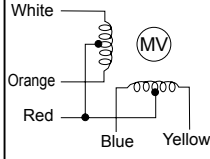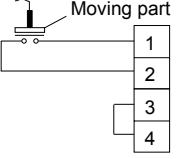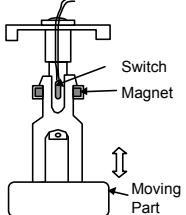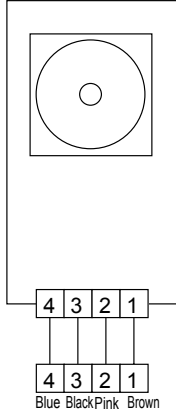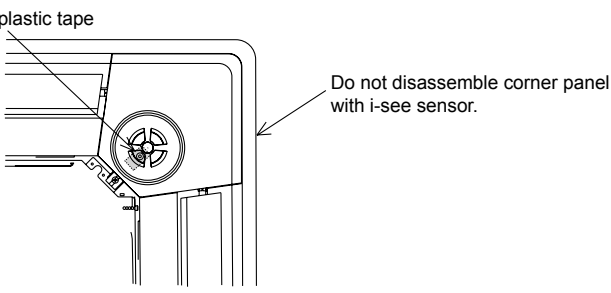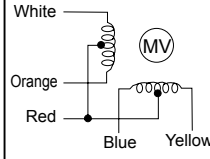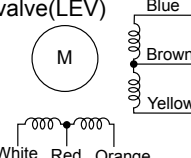Parts name	Check points																
Room temperature thermistor (TH21) Liquid pipe thermistor (TH22) Gas pipe thermistor (TH23)	Disconnect the connector then measure the resistance with a tester. (At the ambient temperature of 10°C - 30°C) <table border="1" data-bbox="395 443 852 510"> <tr> <th>Normal</th> <th>Abnormal</th> </tr> <tr> <td>4.3kΩ~9.6kΩ</td> <td>Open or short</td> </tr> </table> (Refer to Thermistor characteristic graph.)			Normal	Abnormal	4.3kΩ~9.6kΩ	Open or short										
Normal	Abnormal																
4.3kΩ~9.6kΩ	Open or short																
Vane motor (MV) 	Measure the resistance between the terminals with a tester. (At the ambient temperature of 20°C - 30°C) <table border="1" data-bbox="395 600 1337 752"> <tr> <th colspan="2">Connector</th> <th rowspan="5">Normal</th> <th rowspan="5">Abnormal</th> </tr> <tr> <td>Red - Yellow</td> <td>(5-3, 10-8, 15-13, 20-18)</td> </tr> <tr> <td>Red - Blue</td> <td>(5-1, 10-6, 15-11, 20-16)</td> </tr> <tr> <td>Red - Orange</td> <td>(5-4, 10-9, 15-14, 20-19)</td> </tr> <tr> <td>Red - White</td> <td>(5-2, 10-7, 15-12, 20-17)</td> </tr> </table>			Connector		Normal	Abnormal	Red - Yellow	(5-3, 10-8, 15-13, 20-18)	Red - Blue	(5-1, 10-6, 15-11, 20-16)	Red - Orange	(5-4, 10-9, 15-14, 20-19)	Red - White	(5-2, 10-7, 15-12, 20-17)		
Connector		Normal	Abnormal														
Red - Yellow	(5-3, 10-8, 15-13, 20-18)																
Red - Blue	(5-1, 10-6, 15-11, 20-16)																
Red - Orange	(5-4, 10-9, 15-14, 20-19)																
Red - White	(5-2, 10-7, 15-12, 20-17)																
Drain pump (DP) 	Measure the resistance between the terminals with a tester. (Winding temperature 20°C) <table border="1" data-bbox="395 835 852 902"> <tr> <th>Normal</th> <th>Abnormal</th> </tr> <tr> <td>290Ω</td> <td>Open or short</td> </tr> </table>			Normal	Abnormal	290Ω	Open or short										
Normal	Abnormal																
290Ω	Open or short																
Drain float switch (FS) 	Measure the resistance between the terminals with a tester. <table border="1" data-bbox="395 987 1040 1088"> <tr> <th>State of moving part</th> <th>Normal</th> <th>Abnormal</th> </tr> <tr> <td>UP</td> <td>Short</td> <td>Other than short</td> </tr> <tr> <td>DOWN</td> <td>Open</td> <td>Other than open</td> </tr> </table>		State of moving part	Normal	Abnormal	UP	Short	Other than short	DOWN	Open	Other than open						
State of moving part	Normal	Abnormal															
UP	Short	Other than short															
DOWN	Open	Other than open															
i-see sensor (Option) 	Turn on the indoor unit with the black plastic tape on the outside of i-see sensor controller board. With electricity being turned on, measure the power voltage between connectors with tester. i-see sensor rotates and pull out the connector of motor for i-see sensor.  i-see sensor (At the ambient temperature of 10°C - 40°C) <table border="1" data-bbox="395 1579 1209 1668"> <tr> <th>i-see sensor connector</th> <th>Normal</th> <th>Abnormal</th> </tr> <tr> <td>②(-)—④(+)</td> <td>DC 1.857V~ 3.132V</td> <td>Other than the normal</td> </tr> <tr> <td>①(+)—②(-)</td> <td>DC 0.939V~ 1.506V</td> <td>Other than the normal</td> </tr> </table> NOTE : Be careful not to discharge static electricity into electronics.			i-see sensor connector	Normal	Abnormal	②(-)—④(+)	DC 1.857V~ 3.132V	Other than the normal	①(+)—②(-)	DC 0.939V~ 1.506V	Other than the normal					
i-see sensor connector	Normal	Abnormal															
②(-)—④(+)	DC 1.857V~ 3.132V	Other than the normal															
①(+)—②(-)	DC 0.939V~ 1.506V	Other than the normal															
Vane motor for i-see sensor (Option) 	Measure the resistance between the terminals with a tester. (At the ambient temperature of 20°C - 30°C) <table border="1" data-bbox="395 1780 1061 1915"> <tr> <th>Connector</th> <th>Normal</th> <th>Abnormal</th> </tr> <tr> <td>Red - Yellow</td> <td rowspan="4">250Ω</td> <td rowspan="4">Open or short</td> </tr> <tr> <td>Red - Blue</td> </tr> <tr> <td>Red - Orange</td> </tr> <tr> <td>Red - White</td> </tr> </table>			Connector	Normal	Abnormal	Red - Yellow	250Ω	Open or short	Red - Blue	Red - Orange	Red - White					
Connector	Normal	Abnormal															
Red - Yellow	250Ω	Open or short															
Red - Blue																	
Red - Orange																	
Red - White																	
Linear expansion valve(LEV) 	Disconnect the connector then measure the resistance valve with a tester. <table border="1" data-bbox="395 1998 1168 2110"> <tr> <th colspan="4">Normal</th> <th rowspan="2">Abnormal</th> </tr> <tr> <td>White-Red</td> <td>Yellow-Brown</td> <td>Orange-Red</td> <td>Blue-Brown</td> </tr> <tr> <td colspan="4">200Ω ±10%</td> <td>Open or short</td> </tr> </table> Refer to 9-1-3.			Normal				Abnormal	White-Red	Yellow-Brown	Orange-Red	Blue-Brown	200Ω ±10%				Open or short
Normal				Abnormal													
White-Red	Yellow-Brown	Orange-Red	Blue-Brown														
200Ω ±10%				Open or short													

## 9-1-1. Thermistor

<Thermistor characteristic graph>

Thermistor for lower temperature


Room temperature thermistor (TH21)  
Liquid pipe temperature thermistor (TH22)  
Gas pipe temperature thermistor (TH23)

Thermistor  $R_0=15k\Omega \pm 3\%$

Fixed number of  $B=3480 \pm 2\%$

$$R_t = 15 \exp \left\{ 3480 \left( \frac{1}{273+t} - \frac{1}{273} \right) \right\}$$

0°C	15kΩ
10°C	9.6kΩ
20°C	6.3kΩ
25°C	5.4kΩ
30°C	4.3kΩ
40°C	3.0kΩ

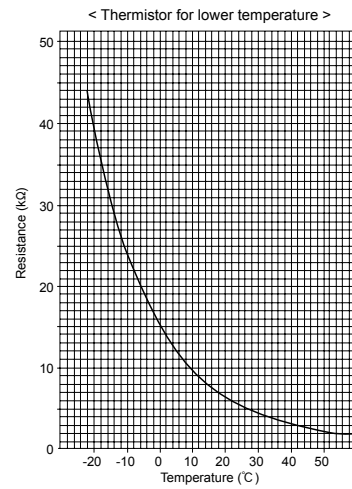


## 9-1-2. Linear expansion valve

### ① Operation summary of the linear expansion valve

- Linear expansion valves open/close through the use of a stepping motor after receiving the pulse signal from the indoor controller board.
- Valve position can be changed in proportion to the number of pulse signals.

<Connection between the indoor controller board and the linear expansion valve>

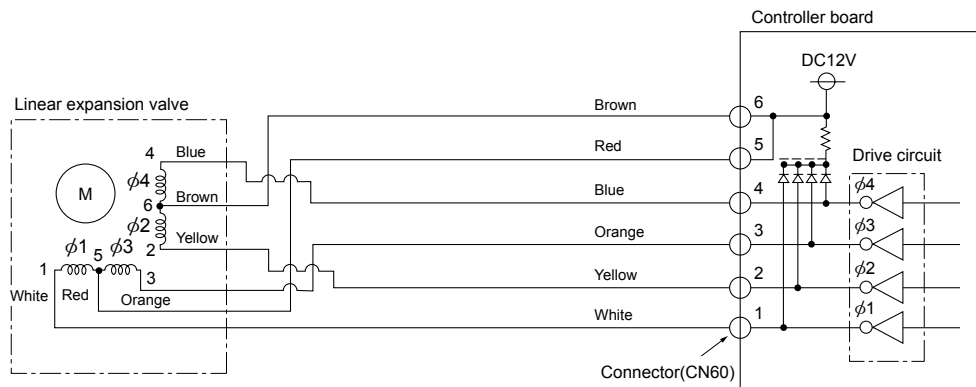

### <Output pulse signal and the valve operation>


Output (Phase)	Output			
	1	2	3	4
φ1	ON	OFF	OFF	ON
φ2	ON	ON	OFF	OFF
φ3	OFF	ON	ON	OFF
φ4	OFF	OFF	ON	ON

Closing a valve : 1 → 2 → 3 → 4 → 1  
 Opening a valve : 4 → 3 → 2 → 1 → 4

The output pulse shifts in above order.

- When linear expansion valve operation stops, all output phase become OFF.
- At phase interruption or when phase does not shift in order, motor does not rotate smoothly and motor will lock and vibrate.

#### ② Linear expansion valve operation

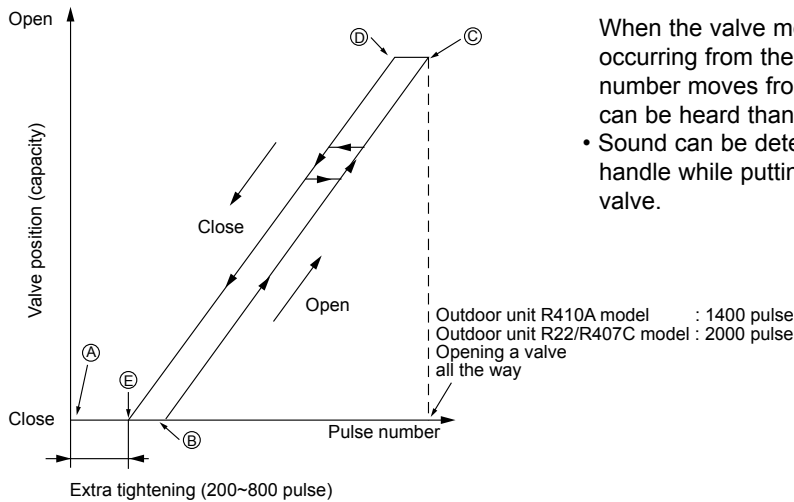

When the valve moves smoothly, there is no sound or vibration occurring from the linear expansion valves; however, when the pulse number moves from ⑤ to ④ or when the valve is locked, more sound can be heard than in a normal situation.

- Sound can be detected by placing the ear against the screw driver handle while putting the screw driver tip to the linear expansion valve.

#### ③ Troubleshooting

Symptom	Check points	Countermeasures
Operation circuit failure of the micro processor	Disconnect the connector on the controller board, then connect LED for checking.  1kΩ LED When power is turned on, pulse signals will be output for 10 seconds. There must be some defects in the operation circuit if the LED does not light while the signals are output or keeps lighting even after the signals stop.	Exchange the indoor controller board at drive circuit failure.
Linear expansion valve mechanism is locked.	Motor will idle and make a ticking noise when the motor is operated while the linear expansion valve is locked. This ticking sound is the sign of the abnormality.	Exchange the linear expansion valve.
Short or breakage of the motor coil of the linear expansion valve	Measure the resistance between each coil (white-red, yellow-brown, orange-red, blue-brown) with a tester. It is normal if the resistance is in the range of 200Ω ±10%.	Exchange the linear expansion valve.
Valve does not close completely.	To check the linear expansion valve, operate the indoor unit in fan mode and at the same time operate other indoor units in cooling mode, then check the pipe temperature <liquid pipe temperature> of the indoor unit by the outdoor multi controller board operation monitor. During fan operation, linear expansion valve is closed completely and if there is any leaking, detecting temperature of the thermistor will go lower. If the detected temperature is much lower than the temperature indicated in the remote controller, it means the valve is not closed all the way. It is not necessary to exchange the linear expansion valve, if the leakage is small and not affecting normal operation. 	If large amount of refrigerant is leaked, exchange the linear expansion valve.
Wrong connection of the connector or contact failure	Check the color of lead wire and missing terminal of the connector.	Disconnect the connector at the controller board, then check the continuity.

### 9-1-3. DC Fan motor (fan motor/indoor controller board)


Check method of indoor fan motor (fan motor/indoor controller board)

① Notes

- High voltage is applied to the connector (CNMF) for the fan motor. Pay attention to the service.
- Do not pull out the connector (CNMF) for the motor with the power supply on.  
(It causes trouble of the indoor controller board and fan motor)












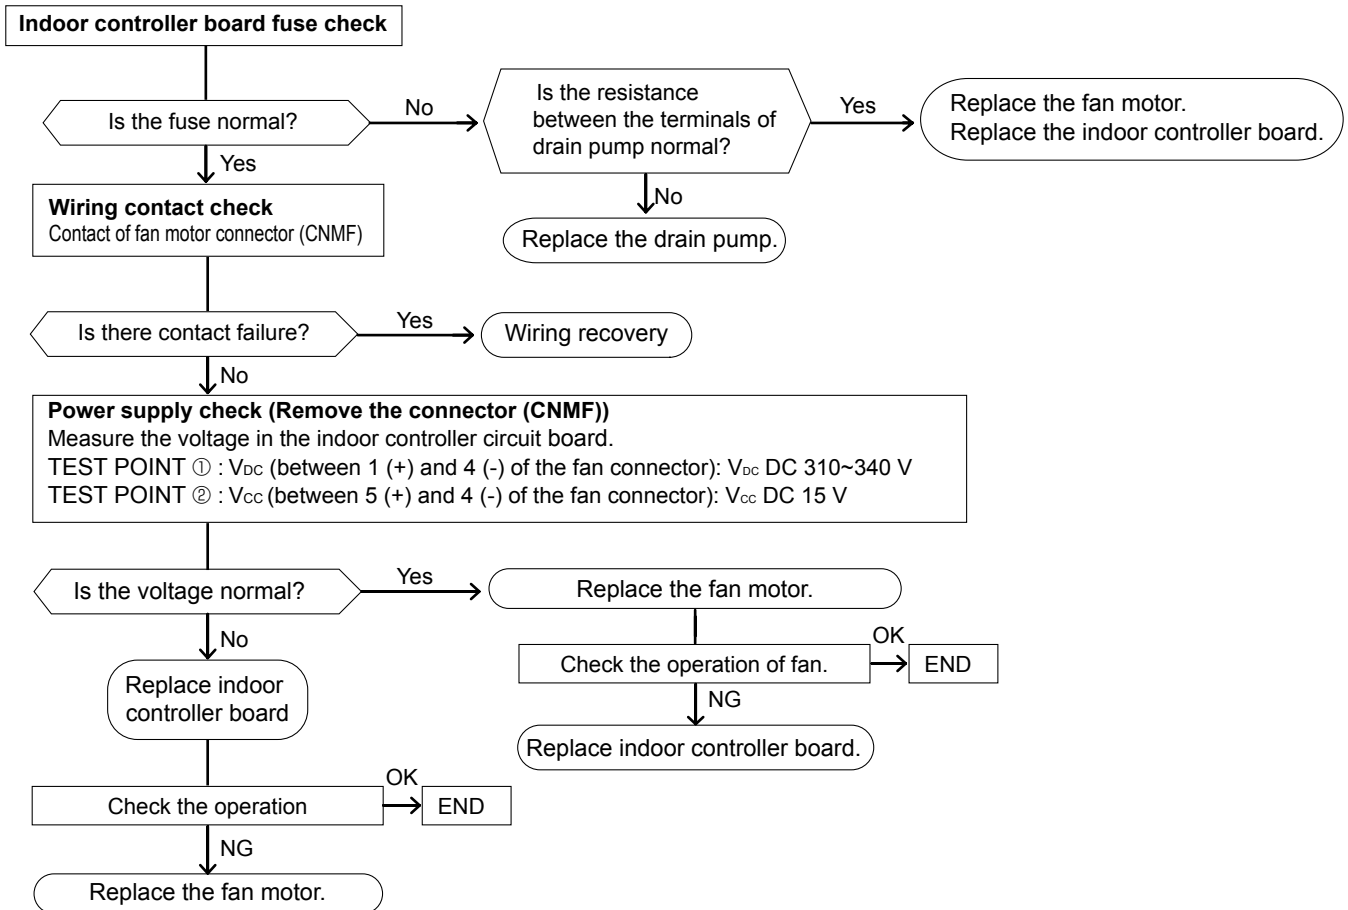








② Self check

Conditions : The indoor fan cannot turn around.



## 9-2. FUNCTION OF DIP SWITCH

The black square (■) indicates a switch position.











Switch	Pole	Function	Operation by switch		Effective timing	Remarks															
			ON	OFF																	
SW1 Function setting	1	Thermistor <Room temperature detection> position	Built-in remote controller	Indoor unit	Under suspension	<div style="border: 1px solid black; padding: 2px;">Address board</div> <div style="border: 1px solid black; padding: 2px; margin-top: 5px;">&lt;Initial setting&gt;</div> <div style="margin-top: 5px;">           ON   OFF  </div> <div style="margin-top: 5px;">Note :</div> <div style="margin-left: 20px;">*1 Fan operation at Heating mode</div> <div style="margin-left: 20px;">*2 Thermo ON operation at Heating mode</div> <div style="margin-left: 20px;">*3</div> <table border="1" style="margin-left: 20px; border-collapse: collapse; text-align: center;"> <tr> <td>SW1-7</td> <td>SW1-8</td> <td></td> </tr> <tr> <td>OFF</td> <td>OFF</td> <td>Extra low</td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>Low</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>Setting air flow</td> </tr> <tr> <td>ON</td> <td>ON</td> <td>Stop</td> </tr> </table>	SW1-7	SW1-8		OFF	OFF	Extra low	ON	OFF	Low	OFF	ON	Setting air flow	ON	ON	Stop
	SW1-7	SW1-8																			
	OFF	OFF	Extra low																		
	ON	OFF	Low																		
	OFF	ON	Setting air flow																		
	ON	ON	Stop																		
	2	Filter clogging detection	Provided	Not provided																	
	3	Filter cleaning	2,500hr	100hr																	
	4	Fresh air intake	Effective	Not effective																	
	5	Switching remote display	Thermo ON signal display	Indicating fan operation ON/OFF																	
6	Humidifier control	Always operated while the heat in ON *1	Operated depends on the condition *2																		
7	Airflow set in case of thermo OFF at heating mode	Low *3	Extra low *3																		
8		Setting air flow *3	Depends on SW1-7																		
9	Auto restart function	Effective	Not effective																		
10	Power ON/OFF by breaker	Effective	Not effective																		
SW2 Capacity code setting	1~6	Capacity	SW 2	Capacity	SW 2	Before power supply ON	<div style="border: 1px solid black; padding: 2px;">Indoor controller board</div> <div style="margin-top: 5px;">Set while the unit is off.</div> <div style="border: 1px solid black; padding: 2px; margin-top: 5px;">&lt;Initial setting&gt;</div> <div style="margin-top: 5px;">Set for each capacity.</div>														
		P32	ON  OFF 	P63	ON  OFF 			P125	ON  OFF 												
		P40	ON  OFF 	P80	ON  OFF 																
		P50	ON  OFF 	P100	ON  OFF 																
SW3 Function setting	1	Heat pump/Cooling only	Cooling only	Heat pump	Under suspension	<div style="border: 1px solid black; padding: 2px;">Indoor controller board</div> <div style="margin-top: 5px;">Set while the unit is off.</div> <div style="border: 1px solid black; padding: 2px; margin-top: 5px;">&lt;Initial setting&gt;</div> <div style="margin-top: 5px;">           ON   OFF  </div> <div style="margin-top: 5px;">Note :</div> <div style="margin-left: 20px;">*4 SW3-5, 6</div> <div style="margin-left: 20px;">*5 Please do not use SW3-9, 10 as trouble might be caused by the usage condition.</div> <div style="margin-left: 20px;">*6 SW3-2 setting Only for PLFY-P-VBM, SW is used to change whether the humidifier functions or not. (Fixed the louver function less.)</div>															
	2	Louver/humidifier *6	Available	Not available																	
	3	Vane	Available	Not available																	
	4	Vane swing function in heating (wave-flow)	Available	Not available																	
	5	Vane horizontal angle ①	Second setting *4	First setting *4																	
	6	Vane horizontal angle ②	Third setting *4	Depends on SW3-5																	
	7	Changing the opening of linear expansion valve	Effective	Not effective																	
	8	Sensible temperature correction	Not effective	Effective																	
	9	Superheat setting temperature *5	—	—																	
	10	Sub cool setting temperature *5	—	—																	
SW4 Model Selection (Setting for PLFY series)	1~5	When replacing the indoor controller board, make sure to set the switch to the initial setting, which is shown below.			Before power supply ON	<div style="border: 1px solid black; padding: 2px;">Indoor controller board</div>															
		ON  OFF 																			




Note : \*4 SW3-5,6

SW3-5	SW3-6	Vane setting	Initial setting	Setting	Vane position
OFF	OFF	Set up ①		Standard	Standard
ON	OFF	Set up ②	●	Less draft *	Upward position than the standard
OFF	ON	Set up ③		Less smudging	Downward position than the standard
ON	ON	unused		—	—

\* Be careful of smudge on ceiling.



Switch	Pole	Operation by switch	Effective timing	Remarks																
SWA Ceiling height selector	1~3	<p>(High ceiling) 3</p> <p>(Standard) 2</p> <p>(Silent) 1</p>  <p>* Ceiling height can be changed depends on SWB setting.</p> <p>PLFY-P32·P40·P50·P63·P80VBM-E</p> <table border="1"> <thead> <tr> <th>SWA \ SWB</th> <th>① Silent</th> <th>② Standard</th> <th>③ High ceiling</th> </tr> </thead> <tbody> <tr> <td>④ 4 direction</td> <td>2.5m</td> <td>2.7m</td> <td>3.5m</td> </tr> <tr> <td>③ 3 direction</td> <td>2.7m</td> <td>3.0m</td> <td>3.5m</td> </tr> <tr> <td>② 2 direction</td> <td>3.0m</td> <td>3.3m</td> <td>3.5m</td> </tr> </tbody> </table>	SWA \ SWB	① Silent	② Standard	③ High ceiling	④ 4 direction	2.5m	2.7m	3.5m	③ 3 direction	2.7m	3.0m	3.5m	② 2 direction	3.0m	3.3m	3.5m	Under operation or suspension	<p>Address board</p> <p>&lt;Initial setting&gt;</p> 
SWA \ SWB	① Silent	② Standard	③ High ceiling																	
④ 4 direction	2.5m	2.7m	3.5m																	
③ 3 direction	2.7m	3.0m	3.5m																	
② 2 direction	3.0m	3.3m	3.5m																	
SWB Discharge outlet number selector	3	<p>(2 direction) 2</p> <p>(3 direction) 3</p> <p>(4 direction) 4</p>  <p>PLFY-P100·P125VBM-E</p> <table border="1"> <thead> <tr> <th>SWA \ SWB</th> <th>① Silent</th> <th>② Standard</th> <th>③ High ceiling</th> </tr> </thead> <tbody> <tr> <td>④ 4 direction</td> <td>2.7m</td> <td>3.2m</td> <td>4.5m</td> </tr> <tr> <td>③ 3 direction</td> <td>3.0m</td> <td>3.6m</td> <td>4.5m</td> </tr> <tr> <td>② 2 direction</td> <td>3.3m</td> <td>4.0m</td> <td>4.5m</td> </tr> </tbody> </table>	SWA \ SWB	① Silent	② Standard	③ High ceiling	④ 4 direction	2.7m	3.2m	4.5m	③ 3 direction	3.0m	3.6m	4.5m	② 2 direction	3.3m	4.0m	4.5m	<p>Address board</p> <p>&lt;Initial setting&gt;</p> 	
SWA \ SWB	① Silent	② Standard	③ High ceiling																	
④ 4 direction	2.7m	3.2m	4.5m																	
③ 3 direction	3.0m	3.6m	4.5m																	
② 2 direction	3.3m	4.0m	4.5m																	
SWC Option selector	2	<p>② オブ</p> <p>① 標</p>  <p>When attaching the optional high performance filter elements (multi function casement) to the unit, be sure to attach it to ② in order to prevent the airflow reducing.</p>	<p>Address board</p> <p>&lt;Initial setting&gt;</p> <p>② オブ</p> <p>① 標</p> 																	
SW11 1s digit address setting SW12 10ths digit address setting	Rotary switch	<p>SW12 SW11</p>  <p>How to set addresses Example : If address is "3", remain SW12 (for over 10) at "0", and match SW11 (for 1 to 9) with "3".</p>	Before power supply ON	<p>Address board</p> <p>&lt;Initial setting&gt;</p> 																
SW14 Branch No. Setting	Rotary switch	<p>SW14</p>  <p>How to set branch numbers SW14 (Series R2 only) Match the indoor unit's refrigerant pipe with the BC controller's end connection number. Remain other than series R2 at "0".</p>		<p>Address board</p> <p>&lt;Initial setting&gt;</p> 																

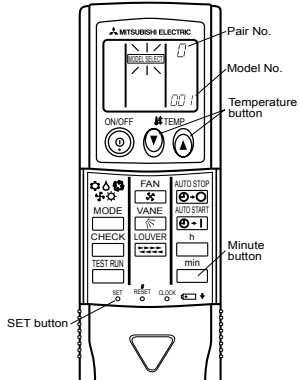
Switch	Pole	Operation by switch	Effective timing	Remarks																											
J41, J42 Wireless remote controller Pair No.	Jumper	<ul style="list-style-type: none"> <li>To operate each indoor unit by each remote controller when installed 2 indoor units or more are near, Pair No. setting is necessary.               <ol style="list-style-type: none"> <li>Pair No. setting is available with the 4 patterns (Setting patterns A to D).</li> <li>Make setting for J41, J42 of indoor controller board and the Pair No. of wireless remote controller.</li> </ol> </li> <li>You may not set it when operating it by 1 remote controller.               <ol style="list-style-type: none"> <li>Setting for indoor unit Jumper wire J41, J42 on the indoor controller board are cut according to the table below.</li> <li>Wireless remote controller pair number: Setting operation                   <ol style="list-style-type: none"> <li>Press the SET button (using a pointed implement). Check that the remote controller's display has stopped before continuing. MODEL SELECT flashes, and the model No. (3 digits) appears (steadily-lit).</li> <li>Press the MINUTE button twice. The pair number appears flashing.</li> <li>Press the temperature (TEMP) buttons to select the pair number to set.</li> <li>Press the SET button (using a pointed implement). The set pair number is displayed (steadily-lit) for 3 seconds, then disappears.</li> </ol> </li> </ol> </li> </ul> <table border="1" style="margin: 10px auto;"> <thead> <tr> <th rowspan="2">Setting pattern</th> <th colspan="2">Indoor controller Jumper wire</th> <th rowspan="2">Pair No. of wireless remote controller*</th> <th rowspan="2"></th> </tr> <tr> <th>J41</th> <th>J42</th> </tr> </thead> <tbody> <tr> <td>A</td> <td>—</td> <td>—</td> <td>0</td> <td>Factory setting</td> </tr> <tr> <td>B</td> <td>Cut</td> <td>—</td> <td>1</td> <td>—</td> </tr> <tr> <td>C</td> <td>—</td> <td>Cut</td> <td>2</td> <td>—</td> </tr> <tr> <td>D</td> <td>Cut</td> <td>Cut</td> <td>3</td> <td>—</td> </tr> </tbody> </table> <p>* Pair No.4-9 of wireless remote controller is setting pattern D.</p>	Setting pattern	Indoor controller Jumper wire		Pair No. of wireless remote controller*		J41	J42	A	—	—	0	Factory setting	B	Cut	—	1	—	C	—	Cut	2	—	D	Cut	Cut	3	—	Under operation or suspension	<p>&lt;Initial setting&gt; Pattern A</p> 
Setting pattern	Indoor controller Jumper wire			Pair No. of wireless remote controller*																											
	J41	J42																													
A	—	—	0	Factory setting																											
B	Cut	—	1	—																											
C	—	Cut	2	—																											
D	Cut	Cut	3	—																											
SWE Test run for Drain pump	Connector	<p>Drain pump and fan are activated simultaneously after the connector SWE is set to ON and turn ON the power.</p>  <p>The connector SWE is set to OFF after test run.</p>	Under operation	<p>&lt;Initial setting&gt;</p> 																											

### 9-3. TEST POINT DIAGRAM

#### 9-3-1. Indoor controller board

PLFY-P32/40/50/63/80/100/125VBM-E.UK  
 PLYF-P32/40/50/63/80/100/125VBM-ER2.UK

PLFY-P32/40/50/63/80VBM-E1.UK  
 PLYF-P32/40/50/63/80/100/125VBM-ER3.UK

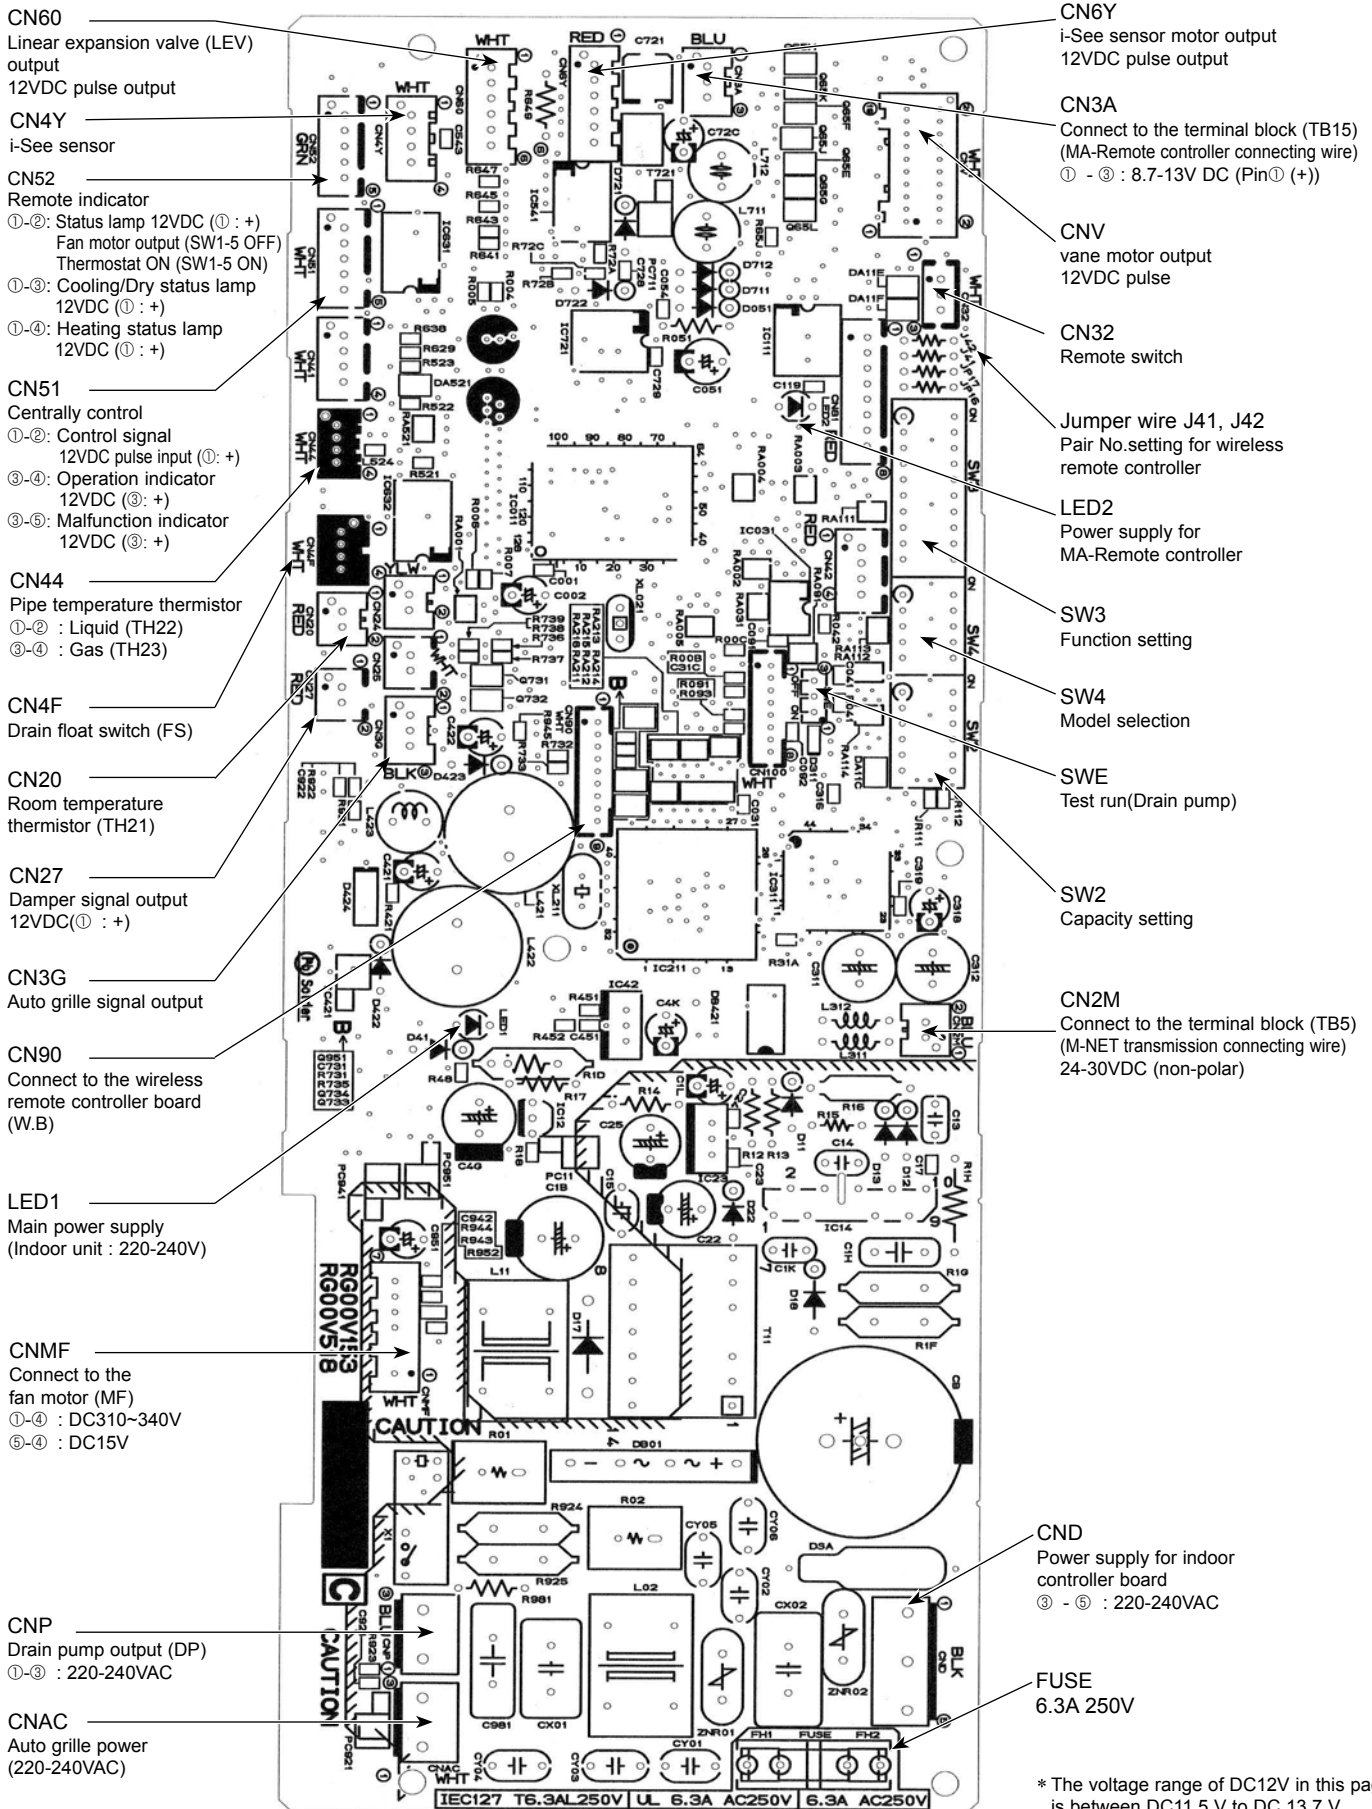

- CN60  
Linear expansion valve (LEV) output  
12VDC pulse output
- CN4Y  
i-See sensor
- CN52  
Remote indicator  
①-②: Status lamp 12VDC (① : +)  
Fan motor output (SW1-5 OFF)  
Thermostat ON (SW1-5 ON)
- ①-③: Cooling/Dry status lamp  
12VDC (① : +)
- ①-④: Heating status lamp  
12VDC (① : +)
- CN51  
Centrally control  
①-②: Control signal  
12VDC pulse input (① : +)
- ③-④: Operation indicator  
12VDC (③ : +)
- ③-⑤: Malfunction indicator  
12VDC (③ : +)
- CN44  
Pipe temperature thermistor  
①-② : Liquid (TH22)  
③-④ : Gas (TH23)
- CN4F  
Drain float switch (FS)
- CN20  
Room temperature thermistor (TH21)
- CN27  
Damper signal output  
12VDC(① : +)
- CN3G  
Auto grille signal output
- CN90  
Connect to the wireless remote controller board (W.B)
- LED1  
Main power supply  
(Indoor unit : 220-240V)
- CNMF  
Connect to the fan motor (MF)  
①-④ : DC310-340V  
⑤-④ : DC15V
- CNP  
Drain pump output (DP)  
①-③ : 220-240VAC
- CNAC  
Auto grille power  
(220-240VAC)

- CN6Y  
i-See sensor motor output  
12VDC pulse output
- CN3A  
Connect to the terminal block (TB15)  
(MA-Remote controller connecting wire)  
① - ③ : 8.7-13V DC (Pin① (+))
- CNV  
vane motor output  
12VDC pulse
- CN32  
Remote switch
- Jumper wire J41, J42  
Pair No.setting for wireless remote controller
- LED2  
Power supply for MA-Remote controller
- SW3  
Function setting
- SW4  
Model selection
- SWE  
Test run(Drain pump)
- SW2  
Capacity setting
- CN2M  
Connect to the terminal block (TB5)  
(M-NET transmission connecting wire)  
24-30VDC (non-polar)

- CND  
Power supply for indoor controller board  
③ - ⑤ : 220-240VAC
- FUSE  
6.3A 250V


\* The voltage range of DC12V in this page is between DC11.5 V to DC 13.7 V.



9-3-2. Address board

PLFY-P32/40/50/63/80/100/125VBM-E.UK  
 PLY-P32/40/50/63/80/100/125VBM-ER2.UK

PLFY-P32/40/50/63/80VBM-E1.UK  
 PLY-P32/40/50/63/80/100/125VBM-ER3.UK

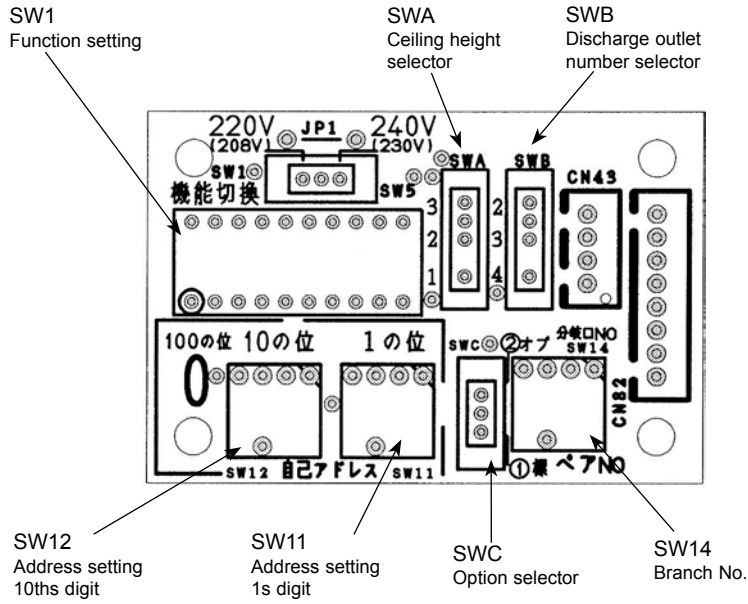


10-1. HOW TO PERFORM THE UP/DOWN OPERATION OF THE AIR INTAKE GRILLE

10-1-1. Setting up the lowering distance of air intake grille


You can set up 8 different stages of lowering distance for the air intake grille according to the set up location if desired.

\* As a factory default, the decorative panel will automatically stop at 1.6 m from the ceiling surface. The distance is a rough indication, check by actually lowering it.


- 1) Take the cover off the electric box of the decorative panel. (2 screws)
- 2) Set up the dip switches of SW22 or SW2 on the control board of the decorative panel as followed.

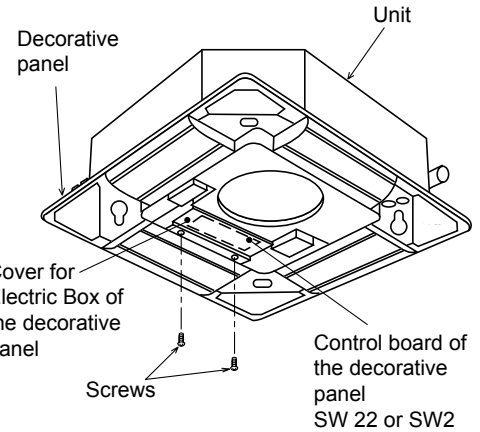

Dip SW 22

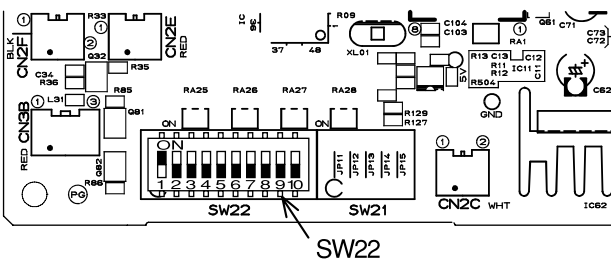

Dip SW 2

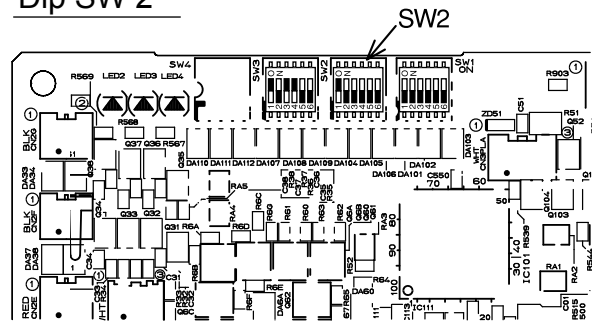

The black square (■) indicates a switch position.

Lowering distance (Rough indication of the ceiling height)	SW22 (Lowering distance)	Lowering distance (Rough indication of the ceiling height)	SW22 (Lowering distance)
1.2m (~ 2.4m)	ON OFF [Diagram: 10 switches, 1-9 ON, 10 OFF]	1.6m (2.4m ~ 2.8m)	Initial setting ON OFF [Diagram: 10 switches, 1-9 ON, 10 OFF]
2.0m (2.8m ~ 3.2m)	ON OFF [Diagram: 10 switches, 1-9 ON, 10 OFF]	2.4m (3.2m ~ 3.6m)	ON OFF [Diagram: 10 switches, 1-9 ON, 10 OFF]
2.8m (3.6m ~ 4.0m)	ON OFF [Diagram: 10 switches, 1-9 ON, 10 OFF]	3.2m (4.0m ~ 4.4m)	ON OFF [Diagram: 10 switches, 1-9 ON, 10 OFF]
3.6m (4.4m ~ 4.8m)	ON OFF [Diagram: 10 switches, 1-9 ON, 10 OFF]	4.0m (4.8m ~ 5.2m)	ON OFF [Diagram: 10 switches, 1-9 ON, 10 OFF]

\* Airflow outreach distance is different depending on indoor units and air volume (ceiling height), so airflow may not reach the indicated ceiling height as shown in the above table.

The black square (■) indicates a switch position.

Lowering distance (Rough indication of the ceiling height)	SW2 (Lowering distance)	Lowering distance (Rough indication of the ceiling height)	SW2 (Lowering distance)
1.2m (~ 2.4m)	ON OFF [Diagram: 6 switches, 1-5 ON, 6 OFF]	1.6m (2.4m ~ 2.8m)	Initial setting ON OFF [Diagram: 6 switches, 1-5 ON, 6 OFF]
2.0m (2.8m ~ 3.2m)	ON OFF [Diagram: 6 switches, 1-5 ON, 6 OFF]	2.4m (3.2m ~ 3.6m)	ON OFF [Diagram: 6 switches, 1-5 ON, 6 OFF]
2.8m (3.6m ~ 4.0m)	ON OFF [Diagram: 6 switches, 1-5 ON, 6 OFF]	3.2m (4.0m ~ 4.4m)	ON OFF [Diagram: 6 switches, 1-5 ON, 6 OFF]
3.6m (4.4m ~ 4.8m)	ON OFF [Diagram: 6 switches, 1-5 ON, 6 OFF]	4.0m (4.8m ~ 5.2m)	ON OFF [Diagram: 6 switches, 1-5 ON, 6 OFF]

\* Airflow outreach distance is different depending on indoor units and air volume (ceiling height), so airflow may not reach the indicated ceiling height as shown in the above table.

- 3) Put the cover back on the electric box of the decorative panel.

10-1-2. How to perform the up/down operation using wireless remote controller

**Warning:** Ensure that the air-conditioner is not running. • Otherwise, it may cause an injury or a failure.

- 1) Ensure that the air-conditioner is not running.

- 2) Press the "Down" button to lower the air intake grille.

\* By default, the air intake grille will automatically stop at a lowering distance of 1.6 m from the ceiling level. The distance can be changed to 1.2 m, 2.0 m, 2.4 m, 2.8 m, 3.2 m, 3.6 m and 4.0 m. These should be used only as a guide. You should lower the air intake grille yourself to check the exact distance.


\* When you want to stop the air intake grille while it is lowering, press the "Stop" or "Up" button on the remote controller to stop at that position.

- 3) Remove the filter or air intake grille and clean them.

- 4) Press the "Up" button on the remote controller to put the air intake grille in place.

\* If the air intake grille is not placed in the correct position at a time, the operation is automatically retried.


\* When you want to stop the air intake grille while it is rising, press the "Stop" or "Down" button on the remote controller to stop at that position.



Wireless remote controller for Automatic Filter Elevation Panel


### 10-1-3. How to perform the up/down operation using wired remote controller (PAR-30MAA / PAR-31MAA)

① Select "Maintenance" from the Main menu, and press the button.

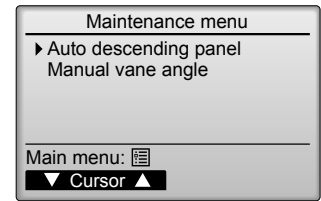


Select "Auto descending panel" with the **F1** or **F2** button, and press the button.

\* When using the auto descending panel, always set the "Address" and "Unit No." with "Service" – "Function setting".

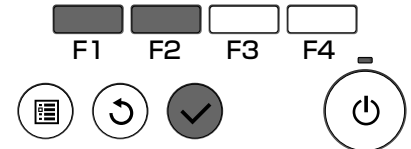


② Move the cursor to "Ref. address", "Unit No." or "Operation" with the **F1** button to select.

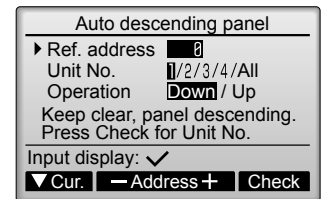

Select the refrigerant address and the unit number for the units to whose falls panel, with the **F2** or **F3** button, and press the button.

- Ref. address: Refrigerant address
- Unit No.: 1, 2, 3, 4, All
- Operation: Down / Up

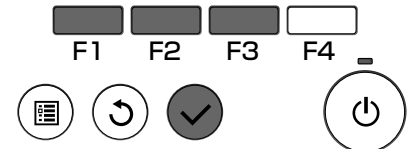


Press the **F4** button to confirm the unit.



<Confirmation of target unit>


If the unit being set is unknown, make the setting and then press the **F4** button to confirm.

The air conditioner which is blowing downward is the target air conditioner.

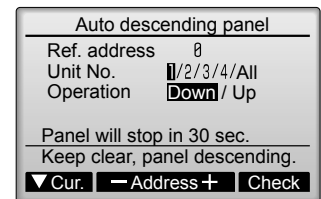

**Navigating through the screens**

- To go back to the Main menu ..... button
- To return to the previous screen..... button

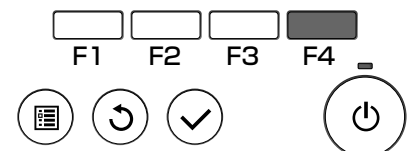

### 10-1-4. How to perform the up/down operation using wired remote controller (PAR-21MAA)

#### ■ General Operation

\* Raise or lower all the air intake grilles managed by the remote controller at the same time.

Install the remote controller in a place where you can observe all the air-conditioners. Otherwise, the lowering grille may make contact with something and cause damage to it.

#### 1) Ensure that the air-conditioner is not running.

\* The up/down operation mode is only available when the air-conditioner is "OFF".

**Warning:** Ensure that the air-conditioner is not running.  
• Otherwise, it may cause an injury or a failure.


#### 2) Press both the "FILTER" and "Ventilation" buttons simultaneously for 2 seconds or more to enter the up/down operation mode.

"Up/down operation mode" display



#### 3) Press the TEMP. (▽) button. After a while, the air intake grille will begin lowering.


"Stand by for lowering" display



"Lowering" display (blinking)



"Stopped" display (when finished lowering)




#### [ Note: ]

- You cannot stop the operation while the air intake grille is lowering.
- \* If you press the (△) button while the air intake grille is moving down, the air intake grille may stop lowering, but it will not stop immediately.
- By default, the air intake grille will automatically stop at the lowering distance of 1.6 m from the ceiling level.
- \* The distance can be changed to 1.2 m, 2.0 m, 2.4 m, 2.8 m, 3.2 m, 3.6 m, and 4.0 m. These should be used only as a guide. You should lower the air intake grille yourself to check the exact distance.

#### 4) Remove the filter and/or air intake grille to clean them.

#### 5) Press the TEMP. (△) button. After a while, the air intake grille will begin to rise and then be put back into place.


"Stand by for raising" display



"Raising" display (blinking)



"Stopped" display (when the air intake grille has been put back into place)




#### [ Note: ]

- You cannot stop the operation while the air intake grille is rising.
- \* If you press the (▽) button while the air intake grille is moving up, the air intake grille may stop rising, but it will not stop immediately.

#### 6) Exit the up/down mode either by pressing the "ON/OFF" button or by pressing both the "FILTER" and "Ventilation" buttons simultaneously for 2 seconds or more.

\* After exiting the up/down mode, wait for about 30 seconds to perform the next operation. The remote controller will not accept any operation for that period.

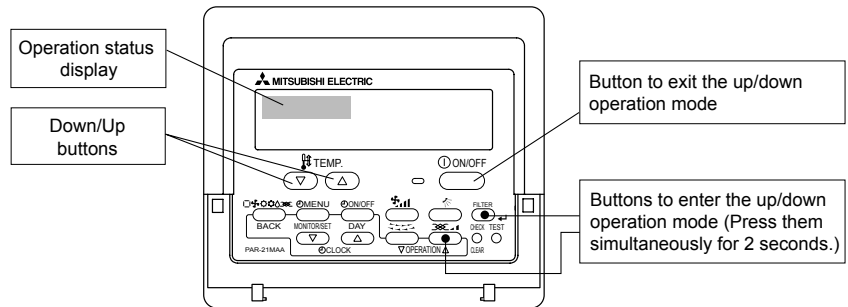


- Up/down operation with the individual specified air-conditioner (when used in combination with Mr. SLIM model)
- \* Raise or lower the air intake grille of the specific air-conditioner that you select from all that are managed by that remote controller.

- 1) Ensure that the air-conditioner is not running.  
\* The up/down operation mode is only available when the air-conditioner is "OFF".

**Warning:** Ensure that the air-conditioner is not running.  
• Otherwise, it may cause an injury or a failure.


- 2) Press both the "FILTER" and "Ventilation" buttons simultaneously for 2 seconds or more to enter the up/down operation mode.




Up/down operation mode

- 3) Press the "Ventilation" button. After a while, it will switch to the "individually-specified up/down operation mode".

Up/down operation mode



Individually-specified up/down operation mode



Unit No. Refrigerant address No.

In the upper right figure, the air-conditioner which the refrigerant address is "00" and the unit No. is "1" is currently selected.

If the number of the target air-conditioner is unknown, go to 4).

If the number of the target air-conditioner is known, go to 5).


- 4) If you press the "FILTER" button when the "Unit No." or "Refrigerant address No." is blinking, the up/down airflow direction of the displayed air-conditioner will be switched downward after a while, and the airflow direction of the other vents will all be blocked.

- In Step 5) described below, identify the target air-conditioner by changing the "Unit No." and "Refrigerant address No." and by pressing the "FILTER" button to check the up/down airflow direction.


**[Remarks:]**  
■ If "Err" is displayed when you press the "FILTER" button to check the target air-conditioner, the air-conditioner with that "Unit No." or "Refrigerant address" may not exist. Check and set that air-conditioner again.

- 5) Select the "Unit No." and "Refrigerant address No."


- "Unit No." and "Refrigerant address No." can be changed by using the "TEMP." buttons (Δ) (▽) when the panel displays (a) or (b).
- Every time you press the "Mode selection" button, the target of operation will change as illustrated below.



(a) "Unit No." selection display




(c) "Standby for up/down operation" display



(b) "Refrigerant address No." selection display


**[Remarks:]**  
■ Each pressing action changes the unit No. from "1 - 4" to "0". (Unit No. "0" means that all of 1 - 4 are targeted.)  
■ Each press changes the "Refrigerant address" from "0 to 15".

- 6) Continue to press the "Mode selection" button until "Waiting for up/down operation" is displayed.



"Waiting for up/down operation" display

The following steps are the same as steps 3) - 6) described in the "General Operation" section. Refer to that section.

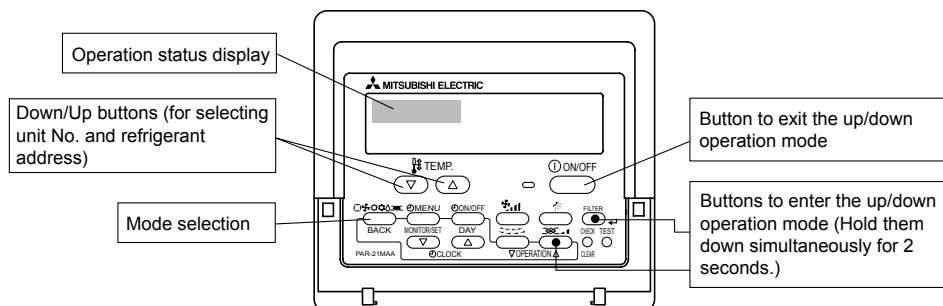

## 10-2. OPERATION (AUTO DESCENDING PANEL: PLP-6BAJ)

### (1) Normal operation

#### ① UP/DOWN

Air intake grille is raised/lowered by commands of UP and DOWN.

Air intake grille does not move under the state of no-load detection or obstacle detection.

Air intake grille stops automatically at the set lowering distance from the ceiling level.

#### ② STOP

It stops in the cases below :

- When it reaches at the set lowering distance from the ceiling level.  
It automatically stops after a predetermined period of lowering.
- When it is stored in the panel.


The air intake grille is judged to be stored in the panel when the storage detection switch is pressed for 3 seconds continuously.

- When receiving commands of STOP, DOWN while moving up or UP while moving down.  
The STOP button is only available on the automatic filter elevation panel remote controller.

When the wired remote controller is used, there will be a slight delay in stopping due to transmission speed.

- When both wire 1b and wire 2b are not loaded.

Only the wire b in each UP/DOWN Machine has a tension detection switch.

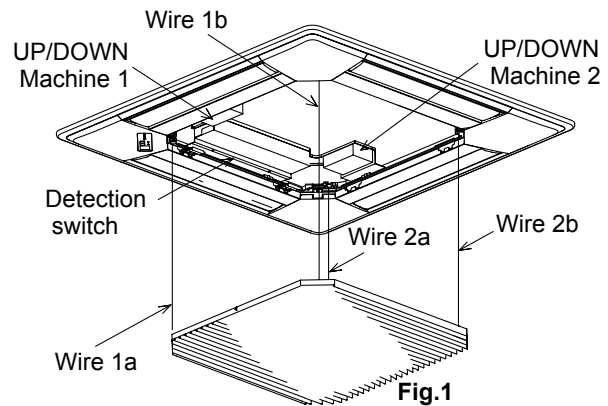

### (2) Special operation

#### ① Storage operation

Case : Obstruction of the raising grille before storage or malfunction of storage detection switch

Storage operation will be performed when the intake grille has been raised the set distance but the storage detection switch is not engaged.

In this case, the operation below will be repeated up to 4 times.

10 cm down → 30 cm up → … → 10 cm down → 30 cm up

#### ② No-load detection

Case : UP/DOWN commands with no grille suspended.

When both wire 1b and wire 2b are not loaded, the wires will not move.

#### ③ Obstacle detection


Case : Making contact with something while lowering.

Should the loads on the wire 1b and wire 2b be removed due to the grille making contact with something while lowering, the lowering operation will stop. The grille will then be raised 10 cm and stop again.


#### [Emergency operation]

- When the wireless remote controller cannot be used (in the case of battery discharge, misplacing of the wireless remote controller, malfunctioning and so on), the emergency switch on the receiver can be used as an alternative.

\* When doing this, particular caution must be taken not to fall.

To lower the air intake grille : Press the  button once.

(For emergency heating operation, press and hold this button.)

To raise the air intake grille : Press the  button once.

(For emergency cooling operation, press and hold this button.)


- To stop the air intake grille from moving, use the opposite buttons to those used to initiate movement.  
(To stop it from lowering, press the UP button; To stop it from rising, press the Down button.)

- If up/down machine is out of order, fix air intake grille temporarily and the indoor unit can be operated.

\* For details, refer to installation manual for the attachment of grille.


### 10-3. ELECTRICAL CIRCUIT (Controller board and wiring diagram (Panel))

#### 10-3-1. Dip SW 22 type

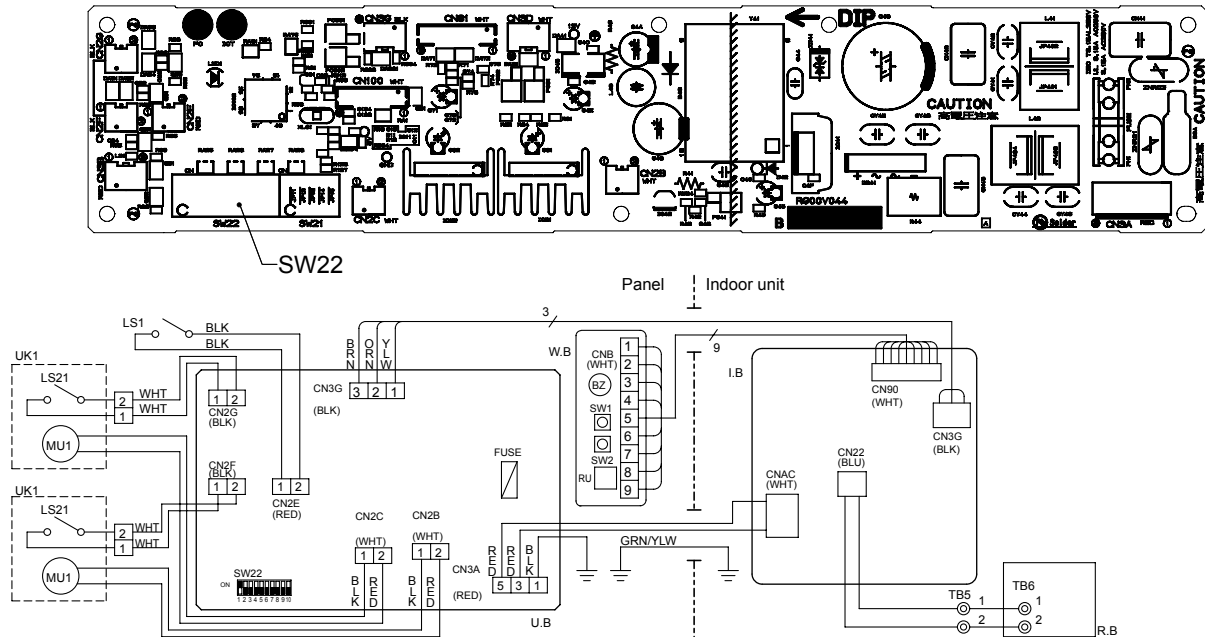

Symbol	Name	Symbol	Name
U.B	Auto grille controller board	W.B	Wireless remote controller board
FUSE	Fuse (3.15A)	BZ	Buzzer
SW22	Switch (Lowering distance set up)	RU	Receiver
UK1	Up/down machine	SW1	Emergency switch (heating/down)
MU1	Motor (Up/down)	SW2	Emergency switch (cooling/up)
LS21	Limit switch (tension detection)	LS1	Limit switch (storage detection)
I.B	Indoor controller board	R.B	Wired remote controller

#### 10-3-2. Dip SW 2 type

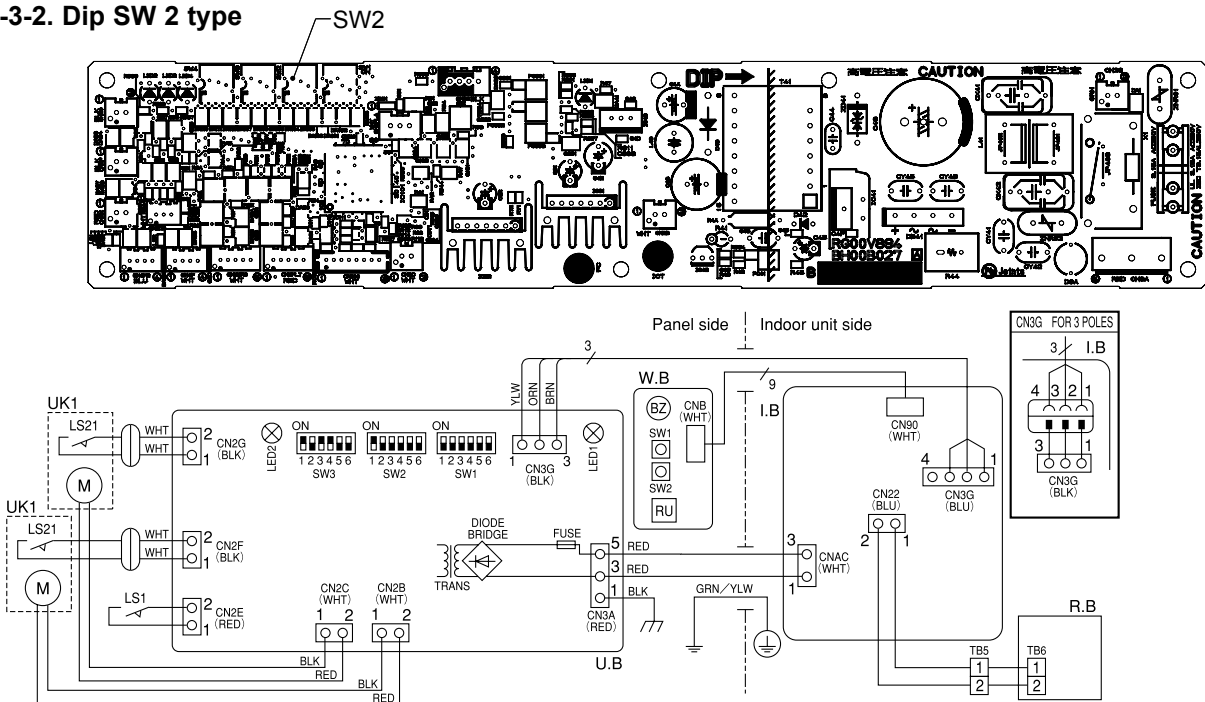

[LEGEND]

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
U.B	CONTROLLER BOARD	I.B	INDOOR UNIT CONTROLLER BOARD	UK1	UP/DOWN MACHINE
FUSE	FUSE (T3.15A/250V)	W.B	WIRELESS SIGNAL RECEIVER BOARD	M	MOTOR (FOR GRILLE UP/DOWN)
SW1	SWITCH (MODEL SELECTION)	BZ	BUZZER	LS21	LIMIT SWITCH (TENSION DETECTION)
SW2	SWITCH (LOWERING DISTANCE)	RU	RECEIVING UNIT	LS1	LIMIT SWITCH (STORAGE DETECTION)
SW3	SWITCH (SYSTEM SELECTION)	SW1	EMERGENCY HEATING LONG PRESS FOR OVER 2 SEC)	R.B.	WIRED REMOTE CONTROLLER
LED1	LED RED (MICROCOMPUTER POWER)	SW2	EMERGENCY COOLING LONG PRESS FOR OVER 2 SEC)		
LED2	LED RED (GRILLE CONDITION)				

### 10-3-3. Check point of trouble

#### <LED (SW22 type) /LED2 (SW2 type) display>

- Turn OFF : No power supply
- Blink : Storage detection switch ON (short)
- One blink : Storage detection switch OFF (open)
- Two blinks : Tension detection switch OFF (open)

#### <controller board>

Check item	Check point	Normal	Remarks
Up/down controller P.C. board supply voltage	CN3A (between 3-5)	AC 198~264 V	—
Up/down machine supply voltage	CN2B, CN2C	DC 10~12 V	Check when instructing up/down with LED blinking once.

#### <Up/down machine>

Check item	Check point	Normal	Check contents
Storage detection switch	CN2E	open or short	Check if it is short when pressing push switch.
Tension detection switch	CN2F, CN2G	open or short	Check if it is short when wire b is tensioned.
Motor	CN2B, CN2C	5~20 Ω	Check if it is not open or short.
Entwining wires	Pull wire	Retension: about 2 kgf	Check if wire is drawn out by pulling with 3 kgf.

## 10-4. TROUBLESHOOTING




- Check the following points.

Problem	Possible Reason	Corrective Action
Air intake grille does not function with operation of the wireless remote controller.	Air-conditioner is running.	Stop running the air-conditioner and try again.
	Power failure	After recovering from power failure, try again.
	Batteries are not inserted into the wireless remote controller. Or battery power is running low.	Insert or replace the battery.
	There is something on the air intake grille. Or something is stuck in the air intake grille.	Remove the objects or obstacles from the air intake grille. Or, remove the stuck object.
Air intake grille cannot be fixed in place.	There is something on the air intake grille.	Remove the objects or obstacles from the air intake grille.
	Filter is not properly installed.	Lower the air intake grille again and check whether the filter is installed in the correct position.
	Air intake grille is not hung with all 4 hooks.	Lower the air intake grille again and hook on the air intake grille.
Air intake grille stops lowering. (Air intake grille would not lower any further.)	The air intake grille has finished lowering to the auto-stop position.	This is normal.
Noises are made during up/down operation. (While air intake grille is moving up/down.)	This is the noise made when the wire is wound and unwound.	This is normal.
Noises are made while putting the air intake grille into place.	This is the operational noise for putting the air intake grille into place.	
Air intake grille repeats rising and lowering several times while being put into place.	This is the operation for putting the air intake grille into place.	
Air intake grille leans toward one side during the up/down operation.	The speeds of winding/unwinding wires are slightly different for each wire.	



PLFY-P32/40/50/63/80/100/125VBM-E.UK  
 PLYF-P32/40/50/63/80VBM-E1.UK  
 PLYF-P32/40/50/63/80/100/125VBM-ER2.UK  
 PLYF-P32/40/50/63/80/100/125VBM-ER3.UK

Be careful when removing heavy parts.

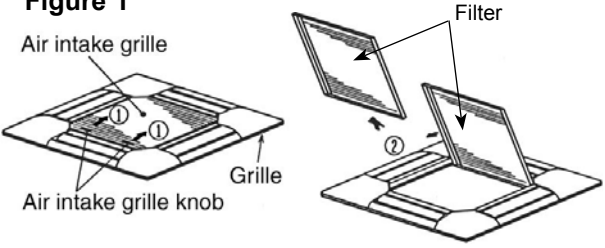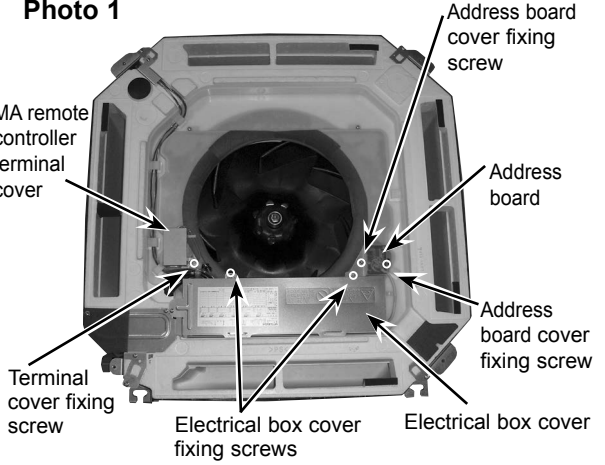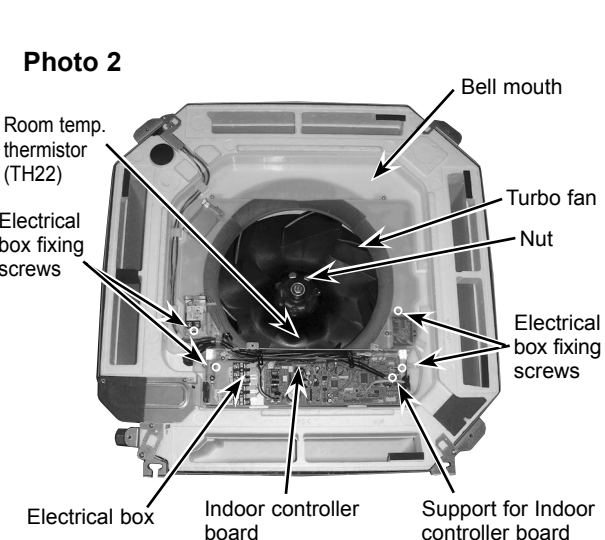
OPERATING PROCEDURE	PHOTOS & ILLUSTRATIONS																
<p><b>1. Removing the air intake grille</b></p> <ol style="list-style-type: none"> <li>(1) Slide the knob of air intake grille toward the arrow ① to open the air intake grille.</li> <li>(2) Remove drop prevention hook from the panel.</li> <li>(3) Slide the shaft in the hinge to the direction of the arrow ② and remove the air intake grille.</li> </ol>	<p><b>Figure 1</b></p>  <p>Air intake grille Air intake grille knob Grille Filter</p>																
<p><b>2. Removing the room temperature thermistor (TH21)</b></p> <ol style="list-style-type: none"> <li>(1) Remove the air intake grille and the filter. (See Figure 1)</li> <li>(2) Remove the 2 screws from the electrical box cover.</li> <li>(3) Disconnect the connector CN20 (Red) from the indoor controller board.</li> <li>(4) Remove the room temperature thermistor.</li> </ol>	<p><b>Photo 1</b></p>  <p>MA remote controller terminal cover Address board cover fixing screw Address board Address board cover fixing screw Terminal cover fixing screw Electrical box cover fixing screws Electrical box cover</p>																
<p><b>3. Removing the address board (A.B)</b></p> <ol style="list-style-type: none"> <li>(1) Remove the air intake grille and the filter. (See Figure 1)</li> <li>(2) Remove the 2 screws from the address board cover.</li> <li>(3) Disconnect the connectors CN43 (RED/4P) and CN82 (RED/8P).</li> <li>(4) Slide and remove the address board.</li> </ol>																	
<p><b>4. Removing the indoor controller board (I.B)</b></p> <ol style="list-style-type: none"> <li>(1) Remove the air intake grille and the filter. (See Figure 1)</li> <li>(2) Remove the 2 screws from the electrical box cover.</li> <li>(3) Disconnect the connectors :</li> </ol> <table border="0" style="width: 100%;"> <tr> <td>CNMF</td> <td>(White/7P) for fan motor</td> </tr> <tr> <td>CN44</td> <td>(White/4P) for thermistor (TH22/TH23)</td> </tr> <tr> <td>CNP</td> <td>(Blue/3P) for drain pump</td> </tr> <tr> <td>CN4F</td> <td>(White/4P) for float switch</td> </tr> <tr> <td>CN01</td> <td>(Black/5P) for earth and TB2</td> </tr> <tr> <td>CNV</td> <td>(White/20P) for vane motor</td> </tr> <tr> <td>CN81, CN42</td> <td>(Red/8P,4P) for address board</td> </tr> <tr> <td>CN2M</td> <td>(Blue/2P) for TB5</td> </tr> </table> <ol style="list-style-type: none"> <li>(4) Remove the 6 supports from indoor controller board.</li> <li>(5) Remove the indoor controller board.</li> </ol>	CNMF	(White/7P) for fan motor	CN44	(White/4P) for thermistor (TH22/TH23)	CNP	(Blue/3P) for drain pump	CN4F	(White/4P) for float switch	CN01	(Black/5P) for earth and TB2	CNV	(White/20P) for vane motor	CN81, CN42	(Red/8P,4P) for address board	CN2M	(Blue/2P) for TB5	<p><b>Photo 2</b></p>  <p>Room temp. thermistor (TH22) Bell mouth Turbo fan Nut Electrical box fixing screws Electrical box Indoor controller board Support for Indoor controller board Electrical box fixing screws</p>
CNMF	(White/7P) for fan motor																
CN44	(White/4P) for thermistor (TH22/TH23)																
CNP	(Blue/3P) for drain pump																
CN4F	(White/4P) for float switch																
CN01	(Black/5P) for earth and TB2																
CNV	(White/20P) for vane motor																
CN81, CN42	(Red/8P,4P) for address board																
CN2M	(Blue/2P) for TB5																
<p><b>5. Removing the electrical box</b></p> <ol style="list-style-type: none"> <li>(1) Remove the air intake grille and the filter. (See Figure 1)</li> <li>(2) Remove the 3 screws from the electrical box cover.</li> <li>(3) Disconnect the connectors. (Refer to procedure 4)</li> <li>(4) Remove 4 electrical box fixing screws and remove 2 hooks.</li> <li>(5) Pull the electrical box.</li> </ol> <p>&lt;Electrical parts in the electrical box&gt;</p> <ul style="list-style-type: none"> <li>Indoor controller board</li> <li>Terminal block (TB2) (TB5)</li> </ul>																	



**OPERATING PROCEDURE**

**6. Removing the fan and fan motor (MF)**

- (1) Remove the electrical box. (See Photo 2)
- (2) Remove the bell mouth (3 screws). (See Photo 2)
- (3) Remove the turbo fan nut.
- (4) Pull out the turbo fan.
- (5) Remove the wire cover (3 screws).
- (6) Remove 2 wiring clamps.
- (7) Disconnect the connector of the fan motor (CNMF).
- (8) Remove the 3 nuts and washers and rubber mounts of the fan motor.

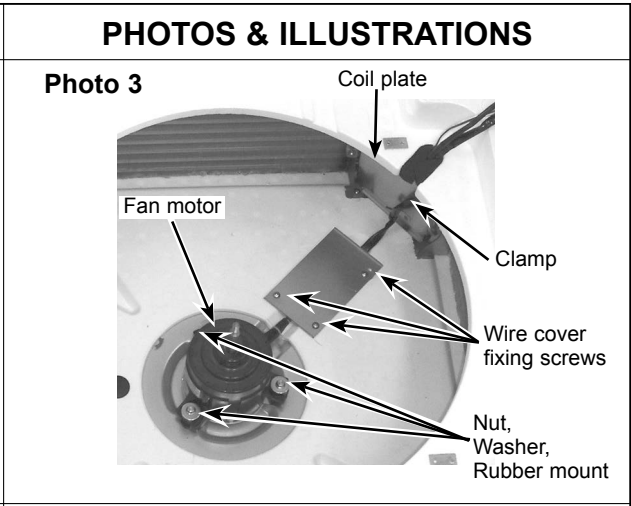

**7. Removing the panel**


- (1) Remove the air intake grille and the filter. (See Figure 1)
- (2) Disconnect the connector CNV (White/20P).

**Corner panel (See Figure 2)**

- (3) Remove the corner screw.
- (4) Slide the corner panel to the direction of the arrow ①, and remove the corner panel.

**Panel (See Photos 4, 5)**


- (5) Remove the 2 screws from the panel which fix to the oval holes.
- (6) Rotate the panel a little to come to the bell shaped hole where the screw is large and remove the panel.

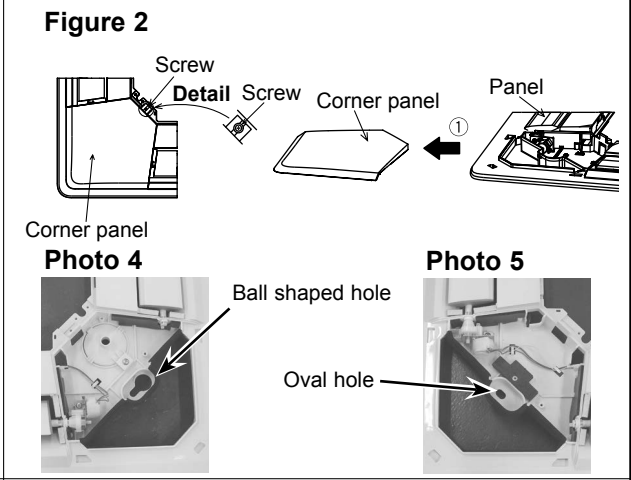

**8. Removing the drain pan**


- (1) Remove the air intake grille and the filter. (See Figure 1)
- (2) Remove the 2 screws from the electrical box cover.
- (3) Disconnect the connectors. (Refer to procedure 4)
- (4) Remove the panel. (See Photos 4, 5)
- (5) Remove the electrical wiring service panel (3 screws).
- (6) Remove the drain pump wire cover (1 screw).
- (7) Remove the electrical box. (See Photo 2)
- (8) Remove the bell mouth. (See Photo 2)
- (9) Remove the 4 screws and pull out the drain pan.

\* Pull out the left and right of the pan gradually.  
Be careful not to crack or damage the pan.

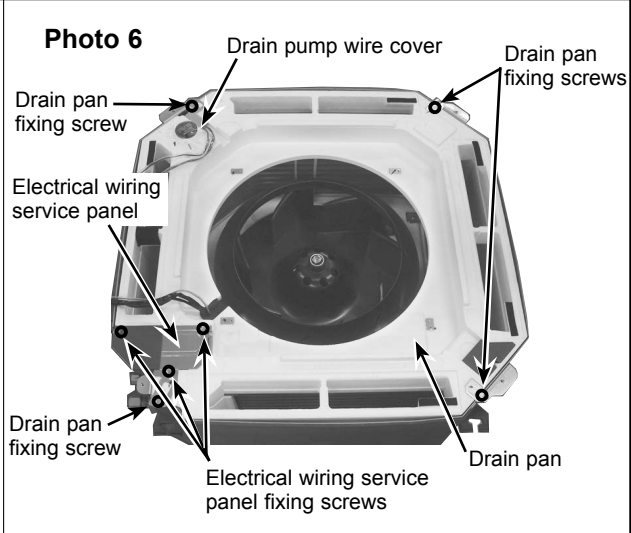

**9. Removing the liquid pipe temperature thermistor (TH22) and gas pipe temperature thermistor (TH23)**

- (1) Remove the drain pan. (See Photo 6)
- (2) Remove the turbo fan. (See Photo 3)
- (3) Remove the 2 wiring clamps. (See Photo 3)
- (4) Remove the coil plate (2 screws).
- (5) Remove the thermistors which are inserted into the holders installed to the thin copper pipe.
- (6) Disconnect the 4-pin white connector (CN44).

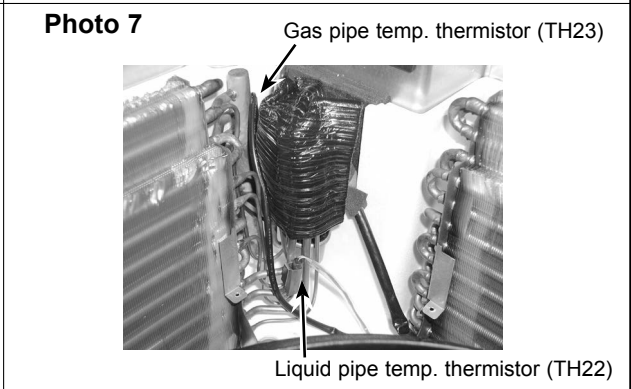

## OPERATING PROCEDURE

### 10 Removing the drain pump (DP) and float switch (FS)

- (1) Remove the drain pan. (See Photo 6)
- (2) Cut the hose band and remove the hose.
- (3) Remove the drain pump assembly (3 screws and 2 hooks).
- (4) Remove the drain pump (3 screws).
- (5) Remove the float switch (2 screws).

## PHOTOS & ILLUSTRATIONS

Photo 8


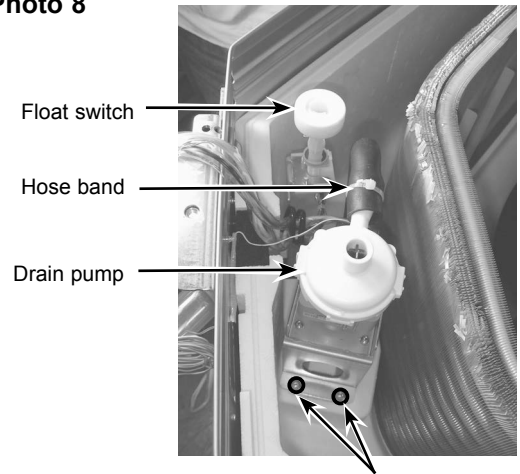



Photo 9

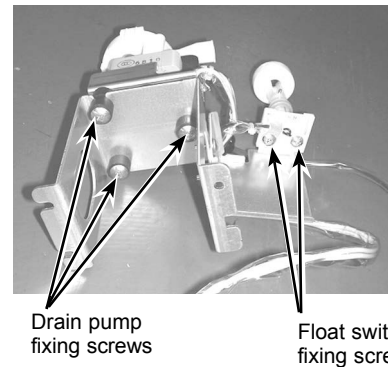

### 11. Removing the heat exchanger

- (1) Remove the drain pan. (See Photo 6)
- (2) Remove the 3 screws of the piping cover, and pull out piping cover.
- (3) Remove the 2 screws of coil plate.
- (4) Remove the 2 screws of the coil.
- (5) Remove the screw of the coil support.
- (6) Pull out the heat exchanger.

Photo 10

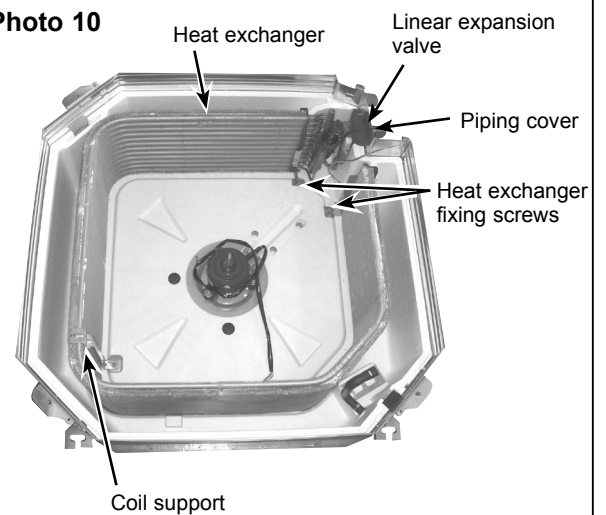

# CITY MULTI

## MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU TOKYO 100-8310, JAPAN

---

©Copyright 2007 MITSUBISHI ELECTRIC CORPORATION  
Distributed in Dec. 2012 No. OCH413 REVISED EDITION-D  
Distributed in Aug. 2009 No. OCH413 REVISED EDITION-C PDF 6  
Distributed in Feb. 2009 No. OCH413 REVISED EDITION-B PDF 6  
Distributed in Oct. 2007 No. OCH413 REVISED EDITION-A PDF 7  
Distributed in Mar. 2007 No. OCH413 PDF 7  
Made in Japan

New publication, effective Dec. 2012  
Specifications are subject to change without notice.