

Technical data sheet

LH230A..

Linear actuators for operating air control dampers and slide valves in ventilation and air-conditioning systems

- For air control dampers up to approx. 1 m²
- Actuating force 150 N
- Nominal voltage AC 100 ... 240 V
- Control: Open-close or 3-point
- Lenght of stroke up to max. 60, 100, 200 or 300 mm, adjustable in steps of 20 mm



Overview of types


Туре	Stroke	Weight	
LH230A60	Up to max. 60 mm, adjustable in steps of 20 mm	450 g	
LH230A100	Up to max. 100 mm, adjustable in steps of 20 mm	495 g	
LH230A200	Up to max. 200 mm, adjustable in steps of 20 mm	530 g	
LH230A300	Up to max. 300 mm, adjustable in steps of 20 mm	565 g	

Technical data

Electrical data	Nominal voltage	AC 100 240 V, 50/60 Hz
	Power supply range	AC 85 265 V
	Power consumption In operation	1.5 W @ nominal force
	At rest	1 W
	For wire sizing	5 VA
	Connection	Cable 1 m, 3 x 0.75 mm ²
Functional data	Actuating force	150 N @ nominal voltage
	Stroke	See «Overview of types»
	Direction of stroke	Reversible with switch 1 ₹resp. 0 ±
	Running time LH230A60	90 s / 60 mm
	LH230A100/200/300	150 s / 100 mm
	Sound power level	<35 dB (A)
Safety	Protection class	II Totally insulated
	Degree of protection	IP54 in any mounting position
EMC		CE according to 89/336/EEC
	Low voltage directive	CE according to 73/23/EEC
	Mode of operation	Type 1 (to EN 60730-1)
	Rated impulse voltage	4 kV (to EN 60730-1)
	Control pollution degree	3 (to EN 60730-1)
	Ambient temperature range	–30 +50°C
	Non-operating temperature	-40 +80°C
	Ambient humidity range	95% r.H., non-condensating (to EN 60730-1)
	Maintenance	Maintenance-free
Dimensions / Weight	Dimensions	See «Dimensions» on page 3
	Weight	See «Overview of types»




Safety notes						
	 The actuator is not allowed to be used outside the specified field not in aircraft or any other form of air transport. Caution: Power supply voltage ! Assembly must be carried out by trained personnel. Any legal regissued by authorities must be observed during assembly. The device may only be opened at the manufacturer's site. It does that can be replaced or repaired by the user. The rotary supports and coupling pieces available as accessories lateral forces are likely. In addition, the actuator must not be tightly bolted to the applicat movable via the rotary support (refer to «Assembly notes»). If the linear actuator is exposed to severely contaminated atmosp precautions must be taken on the system side. Excessive deposit prevent the gear rack from being extended and retracted correctly. If not installed horizontally, the gear disengagement pushbutton there is no pressure on the gear rod When calculating the required actuating force, the specifications or slide valve manufacturers (cross section, design, installation s conditions must be observed. If a rotary support and/or coupling piece is used, losses in the ac expected. The device contains electrical and electronic components and is of as household refuse. All locally valid regulations and requirement of the section. 	gulations or regulations s not contain any parts s must always be used if ion. It must remain where, appropriate ts of dust, soot etc. can y, may only be actuated when supplied by the damper site), and the air flow tuation force are to be not allowed to be disposed				
Product features						
Manual override	Manual operation is possible with the pushbutton (the gearing latch as the pushbutton is pressed or detented).	remains disengaged as long				
Stroke adjustment	The stroke of the gear rack can be adjusted on both sides in increme mechanical end stops.	oke of the gear rack can be adjusted on both sides in increments of 20 mm by means of nical end stops.				
High functional reliability	The actuator is overload-proof, requires no limit switches and automatically stops when the end stop is reached.					
Accessories						
	Description	Data sheet				
Mechanical accessories	Rotary support to compensate lateral forces, type Z-DS1	T2 - Z-LHA				
	Coupling piece, type Z-KS2	T2 - Z-LHA				
	Mechanical limiter set, Typ Z-AS2	T2 - Z-LHA				
Electrical installation						

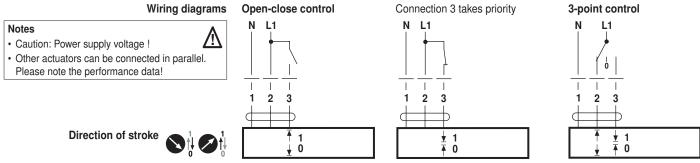



Dimensions [mm]

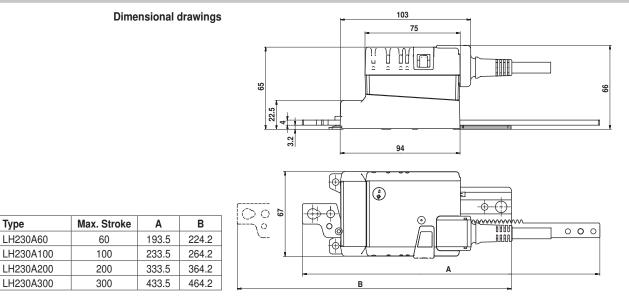

Assembly notes

expected.

Application without lateral forces

Application with lateral forces

Caution If a rotary support and/or coupling piece is used, losses in the actuation force are to be




The linear actuator is screwed directly to the housing at three points. Afterwards, the head of the gear rod is fastened to the moving part of the ventilation application (e.g. damper or slide valve).

The coupling piece with the internal thread (Z-KS2) is connected to the head of the gear rod. The rotary support (Z-DS1) is screwed to the ventilation application.

Afterwards, the linear actuator is screwed to the previously mounted rotary support with the enclosed screw. Afterwards, the coupling piece, which is mounted to the head of the gear rod, is attached to the moving part of the ventilation application (e.g. damper or slide valve). The transverse forces can be compensated for to a certain limit with the rotary support and/or coupling piece. The maximum permissible swivel angle of the rotary support and coupling piece is 10° , laterally and upwards.




LH..A. / LH24A-SX.. / LH24A-MF.. / LH24A-MP.. / LHV-D2-MP...

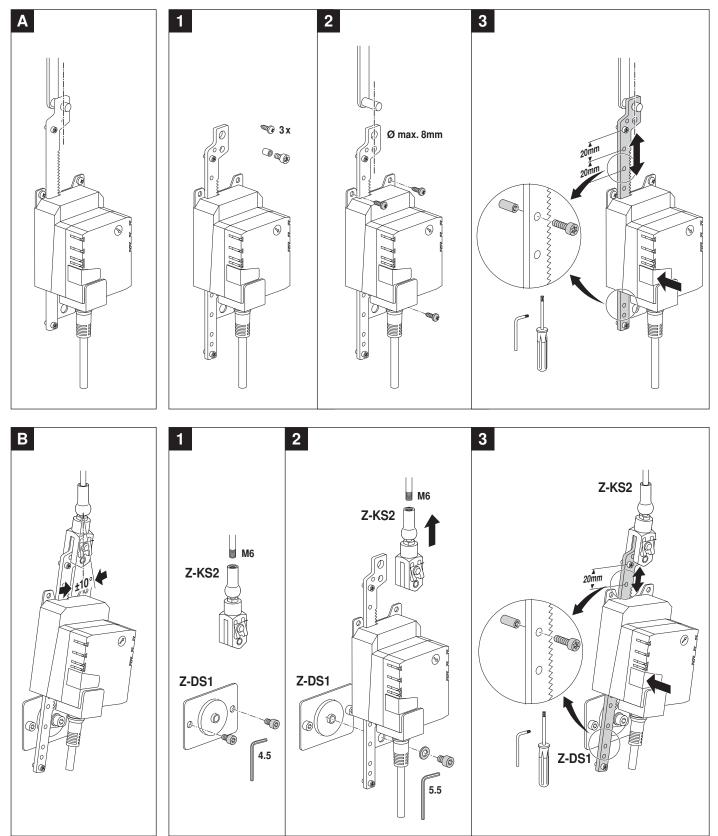




LH24A-SR. / LH230ASR..

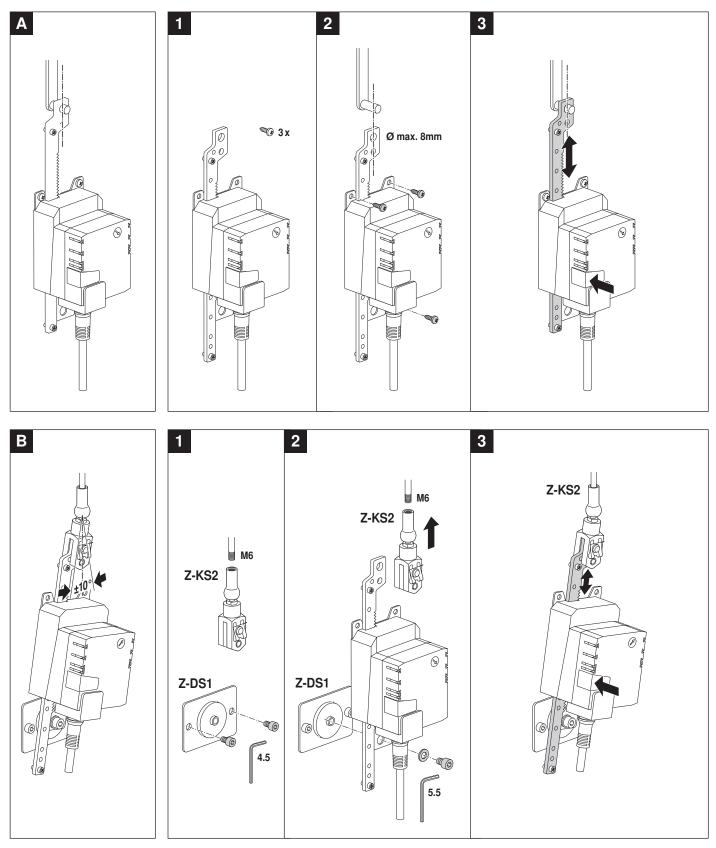




LH..A.. / LH24A-SR. / LH24A-SX.. / LH24A-MF.. / LH24A-MP.. / LHV-D2-MP.. / LH230ASR..

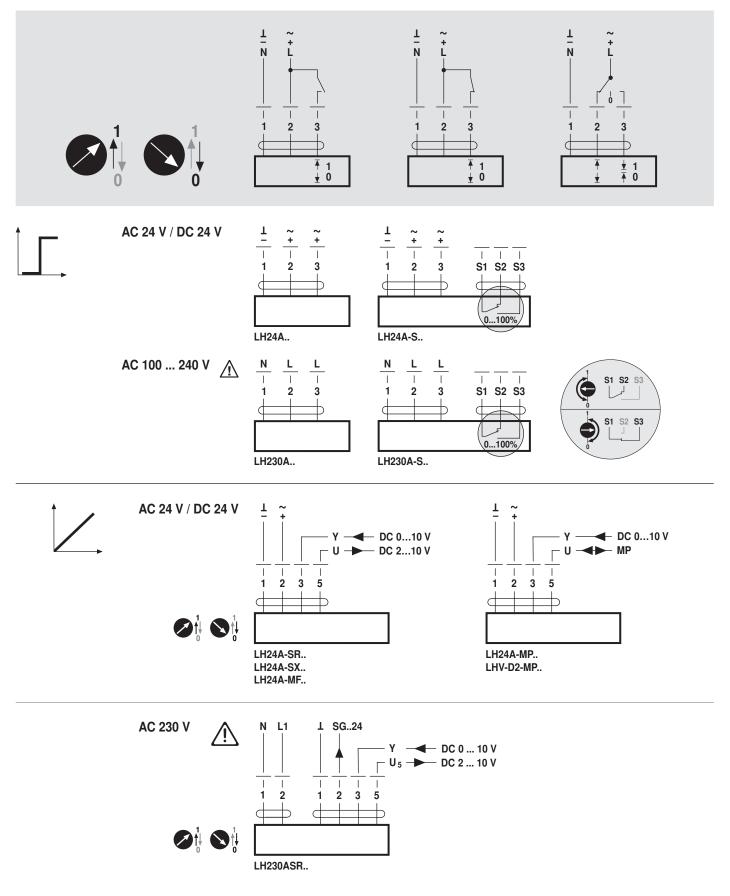

LH..A..



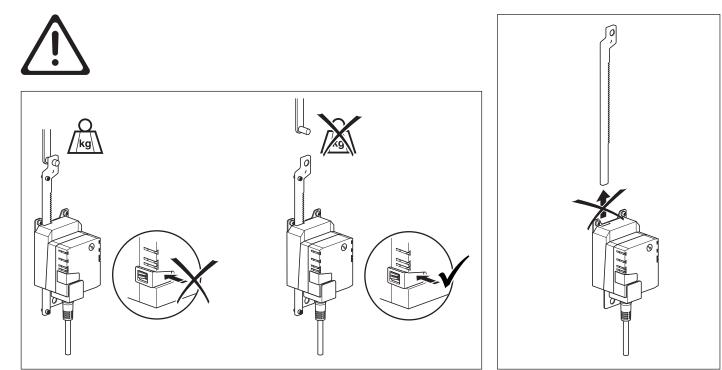

LH..A..TP

