

INSTALLATION MANUAL FOR A-M CONVERTER

For models in which this component is used, see the separate sheet.

SAFETY PRECAUTIONS

- Before starting installation, read the "Safety Precautions" described below.
- The following precautions must be observed as it describes the serious matters for safety.
- The safety precautions are described with the degree of danger.

 WARNING	When you handle wrong, it can lead to death or serious injury.
 CAUTION	When you handle wrong, it can lead to injury or damage to building and furniture.

- After installation, make test operation and confirm that it works properly, and explain the safety precautions, operation method, and maintenance to your customers.
- Tell your customers to keep this installation manual together with operation manual with them, and when they give or sell this machine to other person put this installation manual and operation manual with it.

WARNING

The installation must be done by dealer or qualified person.

- If the customers do the installation by themselves and it is not perfectly installed it can cause water leak, electric shock, or fire.

The installation must be done in accordance with this manual.

- If the installation is not perfectly done, it can cause water leak, electric shock, or fire.

Never try any modification.

- For repair, ask your dealer.
- If the machine is not modified or repaired completely, it can cause water leak, electric shock, or fire.

Never move or reinstall the machine by the customers.

- If the installation is not perfectly done, it can cause water leak, electric shock, or fire. Ask your dealer or qualified person.

The wiring must be securely done by using proper cable. The wires should be connected to the terminals not to have external force of the cable.

- Faulty connections can cause heat or fire.

The terminal cover (panel) of the unit must be installed securely.

- Faulty installation can cause fire or electric shock by dust or water.

The electric installation must be done by qualified person in accordance with this installation manual. Use the separate circuit only for this machine and use rated voltage and circuit breaker.

- If the electric circuit power is not sufficient or the wiring is not properly done, it can cause electric shock or fire.

Before electric wiring

CAUTION

Install a circuit breaker depending upon the location.

- Without a circuit breaker, it can cause electric shock.

Use standard wires which meet current capacity.

- Otherwise, it can cause short-circuit, heat, or fire.

Wires must not have tension.

- It can cause snipping, heat, or fire.

Put ground wire.

- Never ground to gas pipe, water pipe, lightning conductor, or telephone ground wire.
- Faulty ground can cause short-circuit.

Use proper fuses

- If you use larger size fuses or needle wire, it can cause failure or fire.

Before test operation

CAUTION

Turn the power on 12 hours or more before operation.

- If you start operation as soon as the power on, it can cause failure.
- Never turn the power off during season.

Never operate the machine without panel or guard off.

- It can cause serious injury being caught by rotating part or burn or electric shock by high voltage part.

Never operate the machine without air filter off.

- It can cause failure by dust.

Never operate the switches with your hand wet.

- It can cause electric shock.

Never touch refrigerant pipes while the machine running.

- The refrigerant pipes becomes high and low temperature while the machine running. If you touch the pipes by hand, it can cause chilblain or burn.

Never turn the power off as soon as the machine stops.

- Wait for 5 minutes or more. It can cause water leak or failure.

Attention for M-NET connection




Pay attention to the next points for wiring of shielded wires.

⚠ CAUTION

The shielded wires of M-NET transmission should be connected with the ground wire at any only one place of the unit to be connected.


•It can cause the transmission error due to noise.

Centralized control remote controller reads "0403" "6607" error.

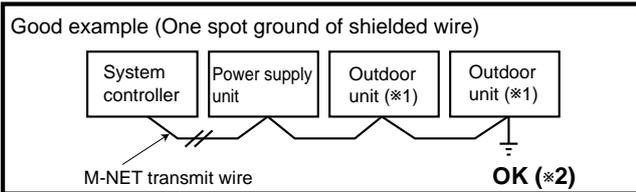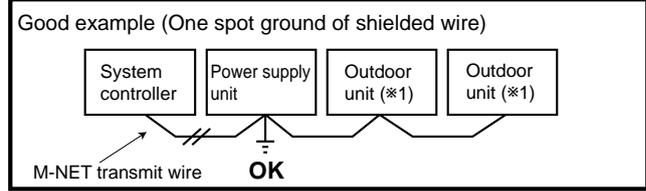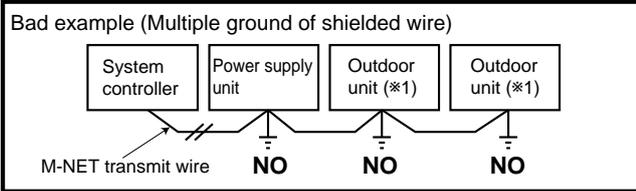

(*1) Refer to the appendix List of Models to check the applicable models.

(*2) In case that the outdoor unit is grounded, connect the ground wire supplied as accessory to the S terminal (secondary) of M-NET terminal block and M-NET Ground terminal inside of electric box with using screws supplied.

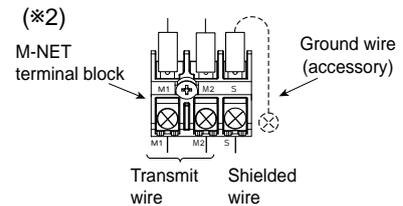

(*3) If the shield and earth are grounded in two or more locations, electrical circuit is generated through them, and a potential difference is created because of the impedance difference between or among the ground locations. This may cause noise in the shield. Ground at only one point, then no circuit is created and no noise gets in.

1. Parts List

(*1) Refer to the appendix List of Models to check the applicable models.


No.	Description	Figure	Q'ty	Applicable models	
				A	B
①	M-NET Board		1	○	○
②	Fixture		2	○	
③	Screw (M3×10)		2	○	
④	Terminal block (M-NET)		1	○	○
⑤	Terminal screw (M4×25)		1	○	○
⑥	Label		1	○	○
⑦	Lead wire-A (4 wires)		1	○	○
⑧	Lead wire-B (2 wires)		1	○	○
⑨	Ground wire and screw (M4×8)		1each	○	○
⑩	Fastener		2	○	○

2. Wiring method for M-NET

Caution for wiring

- ① Never supply voltage 208V-230VAC to the terminals for M-NET transmission. If the voltage is supplied, it can break the electronic parts on the M-NET board.
- ② Use the shielded cable (CVVS, CPEVS, MVVS) of 1.25mm² (AWG 16) with 2 wires (polarity is not a concern) for the transmission cable.
Never use transmit wires of different system with a cable which contains multi wires.
The communication of transmit signals will not work properly and it can cause wrong operation.
- ③ The power consumption coefficient^{※1} of the M-NET board is "1".

※1 "Power consumption coefficient" is a coefficient to calculate the relative power consumption of the devices that receive power through the M-NET transmission cable.

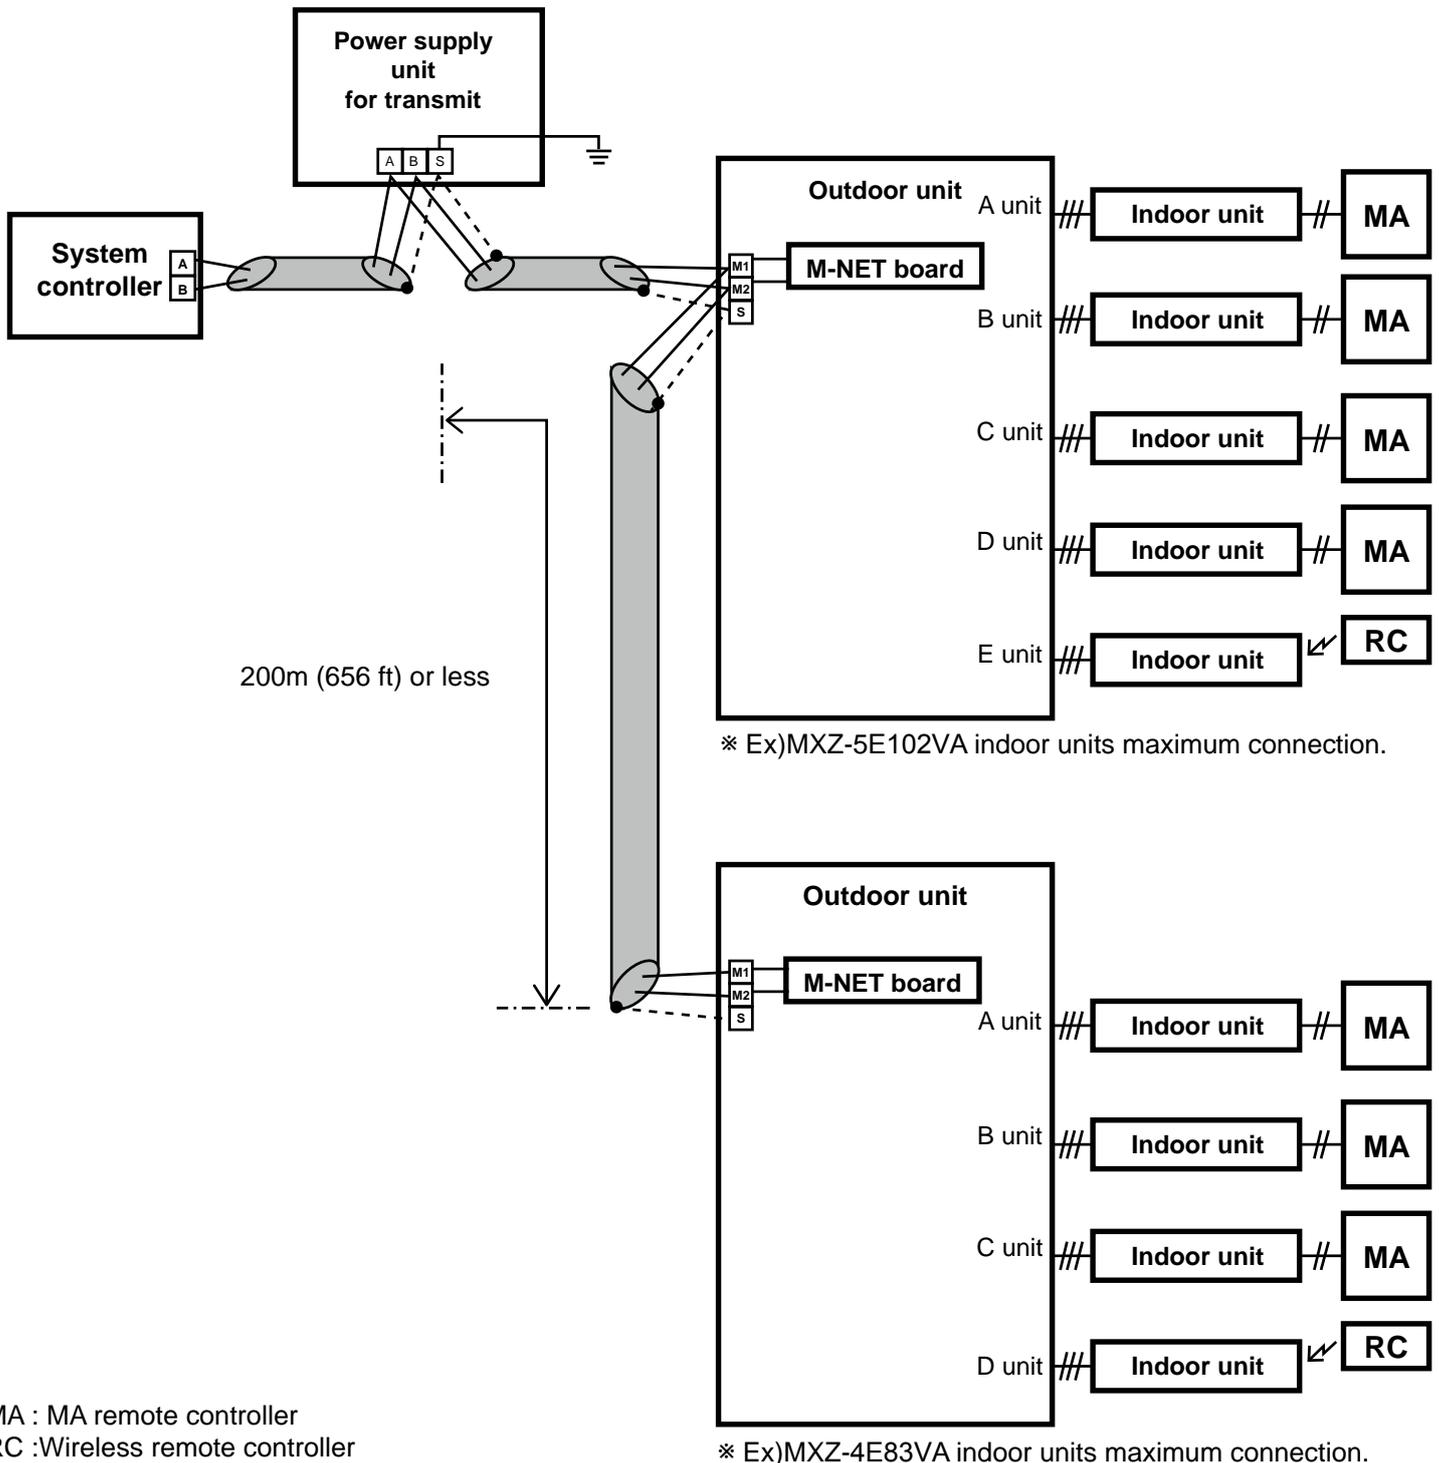

3.Switch setting


Before installation

Set M-NET address on M-NET board in advance before installing on the electrical box.

(1) M-NET head address setting

The setting should be done by rotary switches SW11 and SW12 on M-NET board. (Factory settings are all Zero)

Make sure to set M-NET address within the range of 01 to 50. When installing two or more outdoor units, do not use the same number more than once for M-NET address.

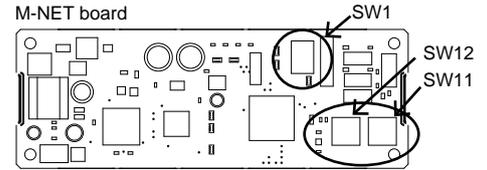

M-NET address No.	1	2	...	50
SW 11 (1 digit)			...	
SW 12 (10 digit)			...	

(2) Indoor unit connection switch setting


Set each indoor unit to ON or OFF with SW1.

◆M-NET address setting

Starting with the M-NET head address set with SW11 and SW12 (Ex 01), the M-NET address is automatically allocated in numerical order to each indoor unit which is connected (Ex 02, 03, 04, 05, 06).


Connection Setting	
Switch	
Setting	ON Indoor connect
	OFF No connection
Indoor Unit	SW1 -1 -2 -3 -4 -5 -6 (-7) (-8)
	(SW1-7,8 not use)

Ex1)

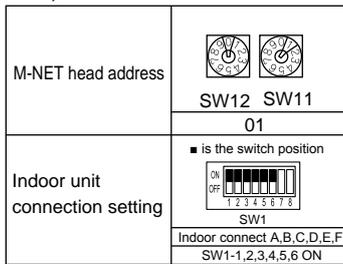


Indoor unit	A	B	C	D	E	F
M-NET address	1	2	3	4	5	6

Ex2)

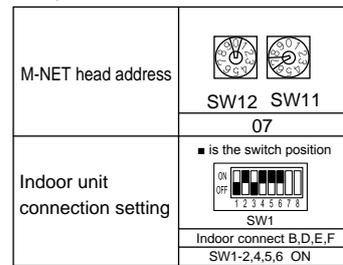

Indoor unit	A	B	C	D	E	F
M-NET address	-	7	-	8	9	10

◆An example of M-NET address setting

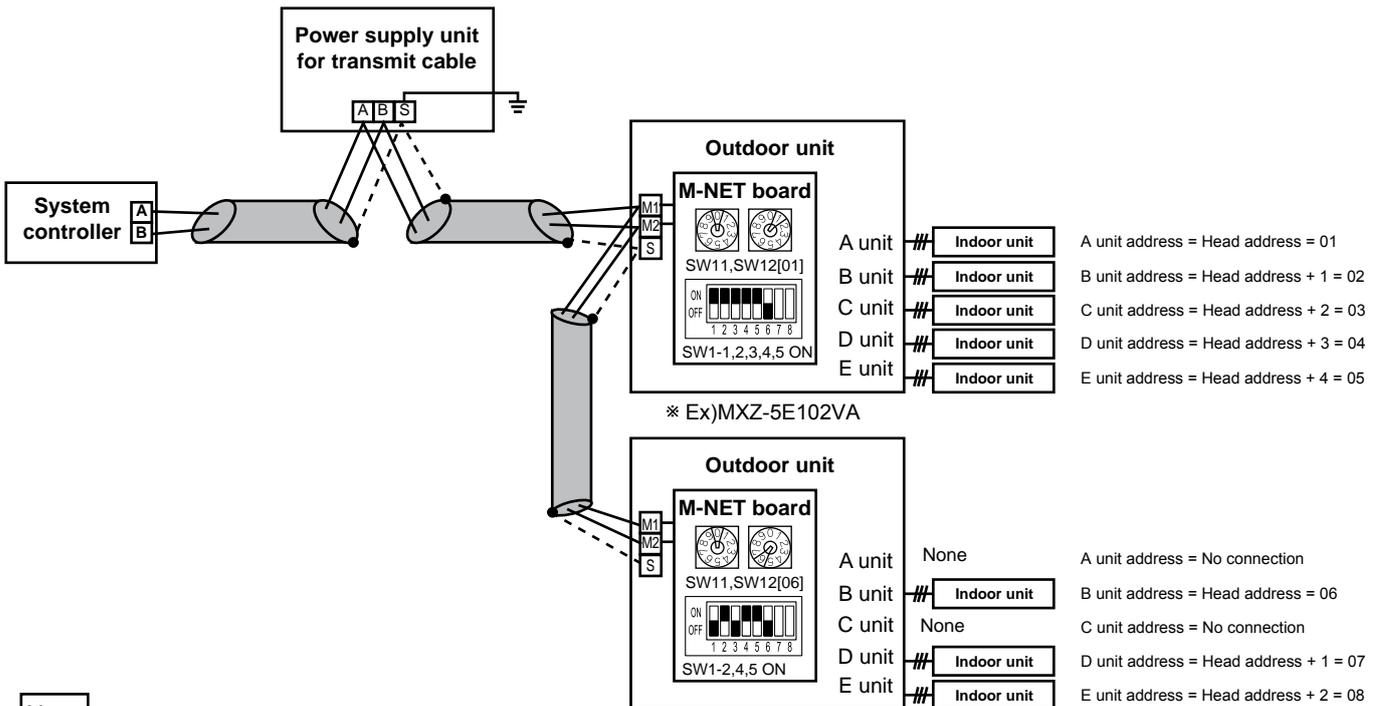





Note

M-NET address should be set within the range of 01 to 50.

For instance, when the head address set with SW11 and SW12 is [47] and you are to connect 5 indoor units A, B, C, D, E, the addresses for each indoor unit are A[47], B[48], C[49], D[50] and E[51]. Since the number for E exceeds 50, this setting is not available.

3. Switch setting


(3) SW1-8 setting

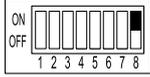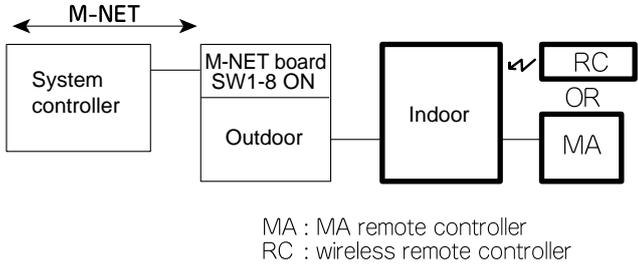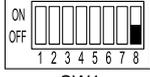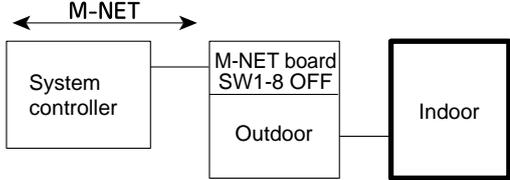SW1-8 Selection	Function	Function details	Initial setting	Effective timing
ON  SW1 ■ is the switch position	Turn the switch ON when MA remote controller or wireless remote controller is connected to indoor unit.  <p style="text-align: center;">MA : MA remote controller RC : wireless remote controller</p>	<FUNCTION> Set the connection of MA-remote controller or wireless remote controller to the indoor unit. ON : exist (initial setting) OFF : not exist	ON	Always
OFF  SW1 ■ is the switch position	Turn the switch OFF when MA remote controller or wireless remote controller is NOT connected to indoor unit. 	<NOTE> In case of switch is ON, transmission error between M-NET board and system controllers does not be detected, and M-NET board operates continuously.		


(4) Group setting prohibited

Group setting for more than one outdoor unit is not available. (Each outdoor unit is one group.)


[Good example]

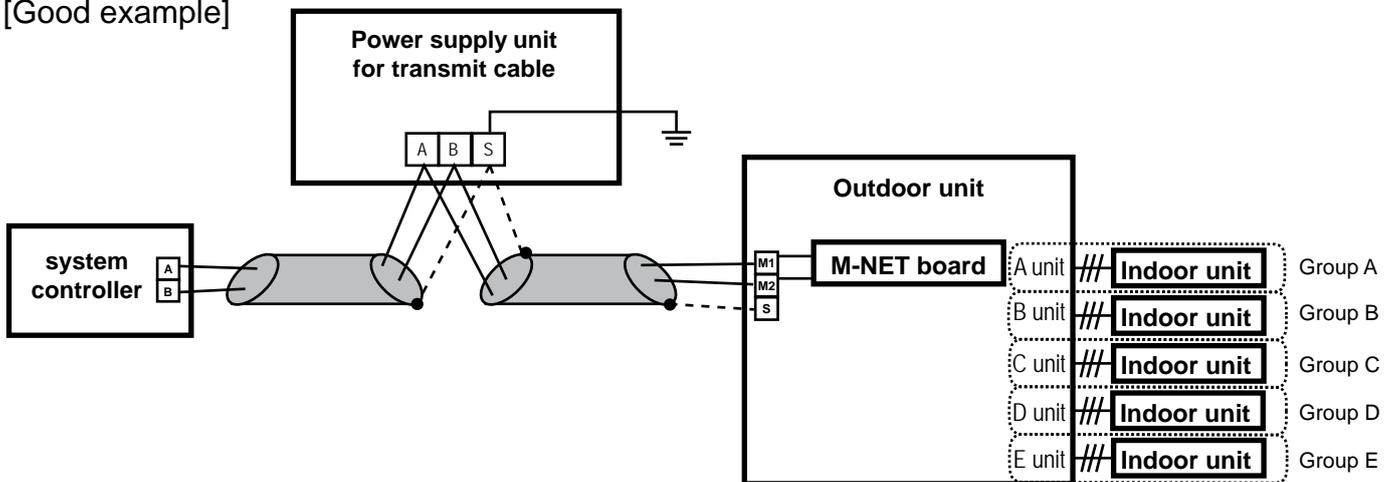

[Bad example]

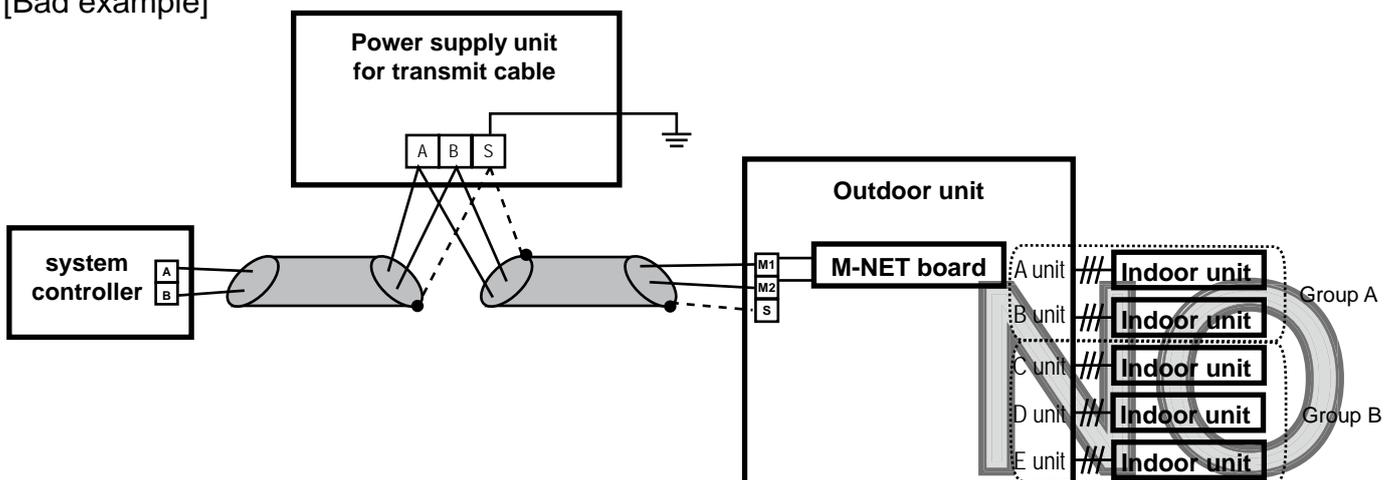

4. Installation procedure 【 Applicable model: Group B 】

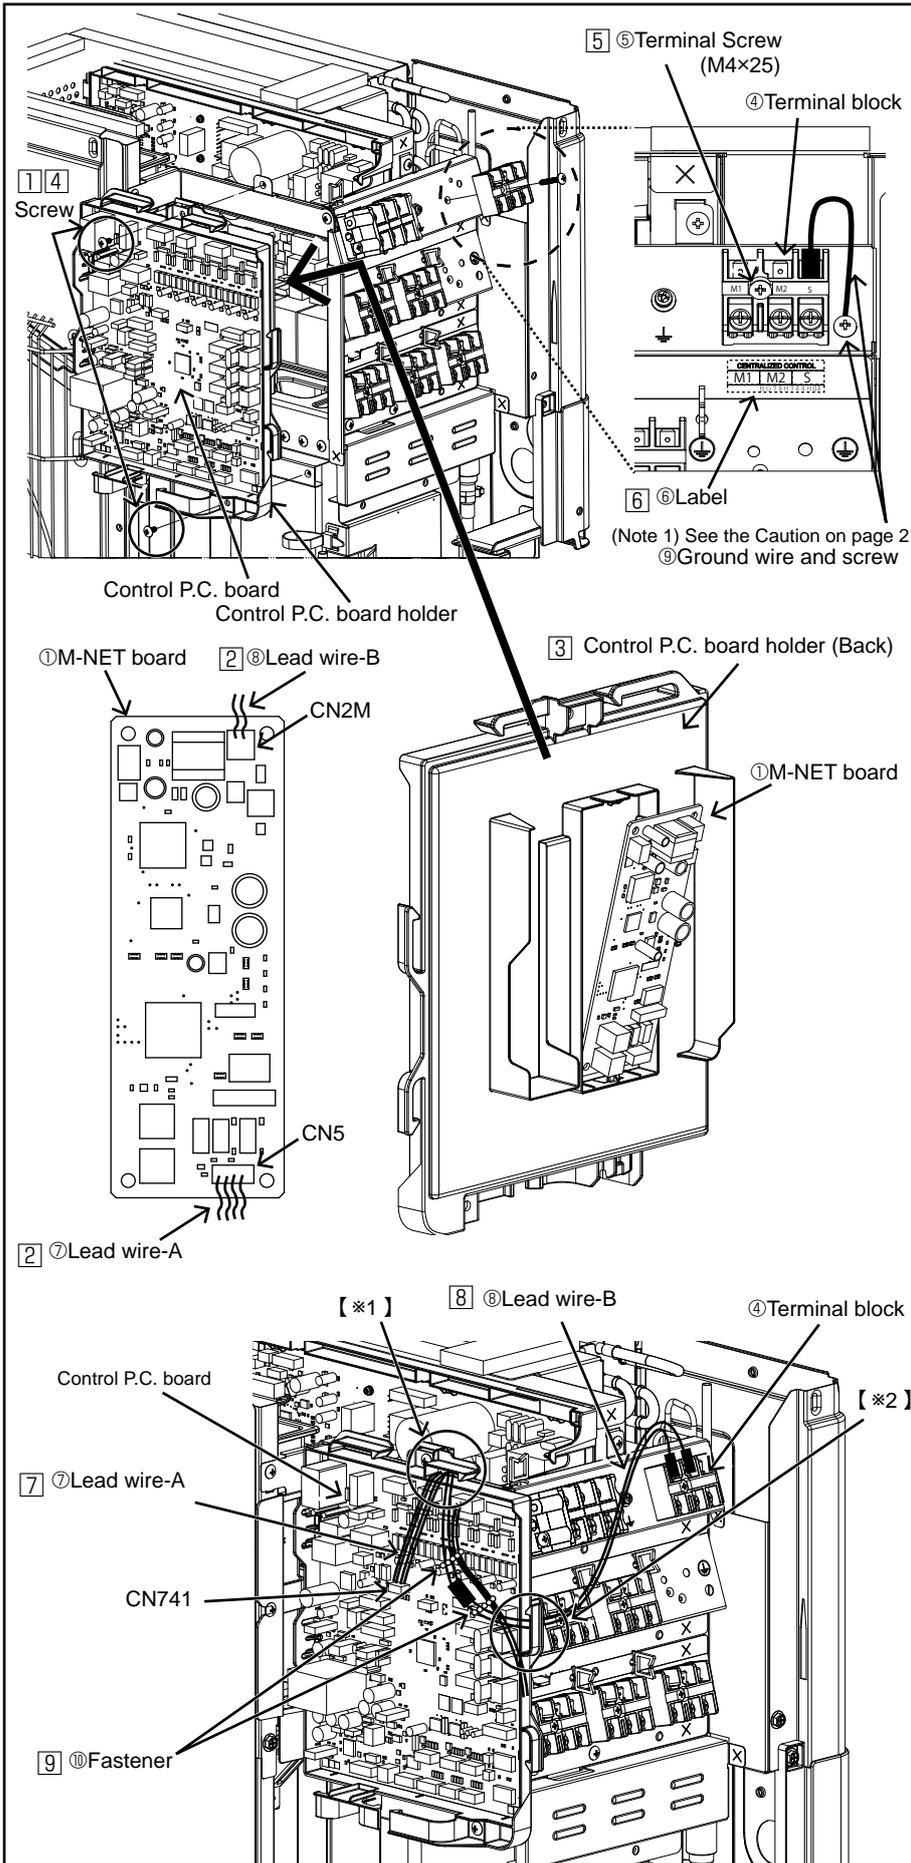

① Remove the two screws and remove the control P.C. board holder.

② Attach ⑦ Lead wire-A to CN5 (Color: White) on the ① M-NET Board and ⑧ Lead wire-B to CN2M (Color: White) on the ① M-NET Board.

③ Install the ① M-NET Board to which the wires were attached in the previous step to the back of the control P.C. board holder.
 *Set the addresses on the ① M-NET Board before installing into the electrical parts box.
 *Be sure that the M-NET board is installed in the correct orientation (so that the CN2M is upwards and CN5 is downwards).

④ Use the two screws removed previously to install the control P.C. board holder in the previous position.

⑤ Use the ⑤ Terminal screw (M4 x 25) to fix the ④ Terminal block in the position shown in the figure.
 *The ④ Terminal block has a boss for positioning. Align the boss with the positioning hole on the metal plate.

⑥ Attach ⑥ Label to the position shown in the figure.

⑦ Refer to the wiring diagram, and connect the ⑦ Lead wire-A that you previously connected to CN5 on the ① M-NET board to CN741 (Color: Red) on the control P.C. board.

⑧ Refer to the wiring diagram, and connect the ⑧ Lead wire-B that you previously connected to CN2M on the ① M-NET board to the M1 and M2 terminals on the ④ Terminal block.
 There is no polarity difference.

⑨ Bundle the front and back of the coil sections of ⑧ Lead wire-B using the ⑩ Fasteners as shown in the figure.

(Note 1)
 If required, connect the shield of the M-NET transmission wire to the main unit using the ⑨ Ground wire and screw (M4 x8).
 (See the Caution on page 2)

(Note 2)
 Take great care that no lead wire is caught on anything when installing panels.

【※1】 Pass ⑦ Lead wire-A and ⑧ Lead wire-B through the upper clips (right side) on the control P.C. board holder.

【※2】 Pass ⑧ Lead wire-B through the right clips (upper side) on the control P.C. board holder.

mitsubishi electric corporation

HEAD OFFICE : MITSUBISHI DENKI BLDG., 2-2-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN