




### Photo

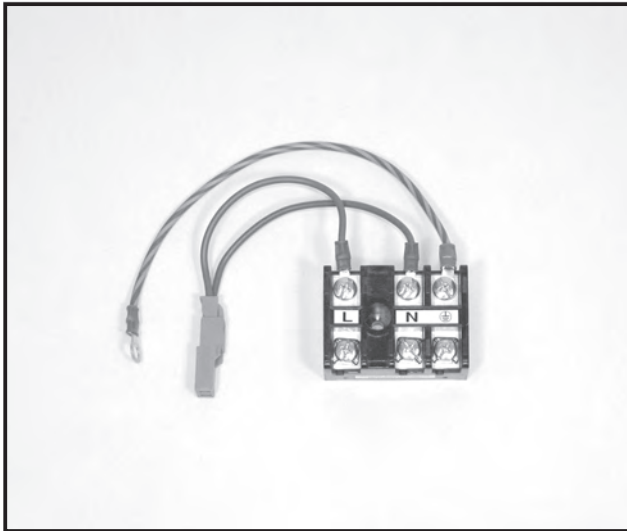

### Descriptions

This kit (L/N/Earth) is used when the power supply of the indoor unit and the outdoor unit is separated.  
(For PUHZ applications only)

### Applicable Models


- PKA-M35,50HA                      ■ PKA-M35,50HAL
- PKA-M60,71,100KA                ■ PKA-M60,71,100KAL

### Specifications

Terminal block capacity	20A/250V
Terminal block material	Denatured melamine

### Dimensions

Unit : mm

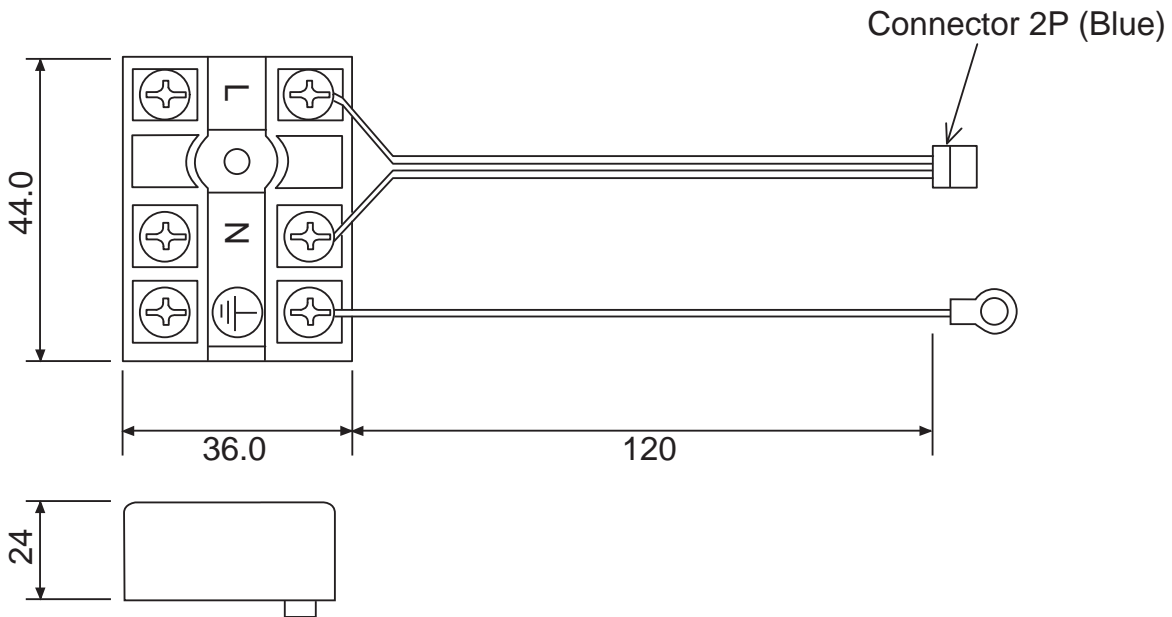

OPTIONAL PARTS



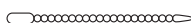

# How to Use / How to Install

## 1. Overview

This kit is used when the power supply of the indoor unit and the outdoor unit is separated.  
(for PUHZ applications only)  
Refer to the installation manual of the indoor unit as well.


## 2. Provided parts

Confirm the following parts are included.

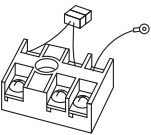Terminal block (lead wires already wired) x 1	Screw (to attach terminal block) x 1	Fastener (to tie lead wires) x 1	Screw (to secure ground wire) x 1
			For PAC-SG96HR-E only 

### 1:1 System

<For models without heater>  
•The indoor power supply terminal kit is required.

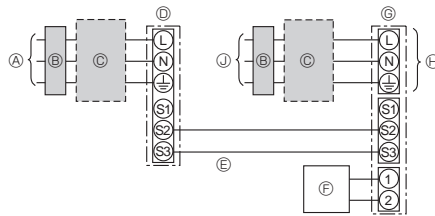


- Ⓐ Outdoor unit power supply
- Ⓑ Earth leakage breaker
- Ⓒ Wiring circuit breaker or isolating switch
- Ⓓ Outdoor unit
- Ⓔ Indoor unit / outdoor unit connecting cords
- Ⓕ Wired remote controller(option)
- Ⓖ Indoor unit
- Ⓗ Option
- Ⓘ Indoor unit power supply

•Affix a label B that is included with the manuals near each wiring diagram for the indoor and outdoor units.

### Simultaneous twin/triple/four system

<For models without heater>  
•The indoor power supply terminal kits are required.

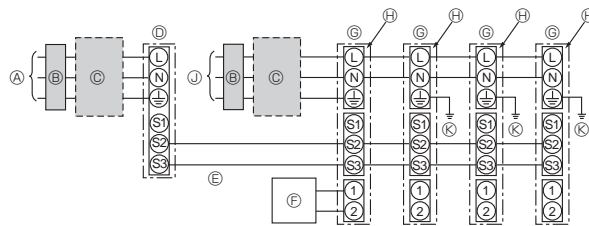

- Ⓐ Outdoor unit power supply
- Ⓑ Earth leakage breaker
- Ⓒ Wiring circuit breaker or isolating switch
- Ⓓ Outdoor unit
- Ⓔ Indoor unit / outdoor unit connecting cords
- Ⓕ Wired remote controller(option)
- Ⓖ Indoor unit
- Ⓗ Option
- Ⓙ Indoor unit power supply
- Ⓚ Indoor unit earth

•Affix a label B that is included with the manuals near each wiring diagram for the indoor and outdoor units.


### 3. Attachment method

■ Wall mounted, PKA-M-HA, PKA-M-HAL type:


1. Remove the electrical box covers (front and side).



2. Attach terminal block ① using screw ② in the direction shown in the figure.

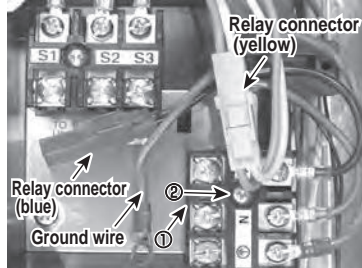


3. Change the relay connectors of blue and yellow lead wires, secure the ground wire using screw ④ at the position shown in the figure, and then bundle the lead wires using fastener ③.

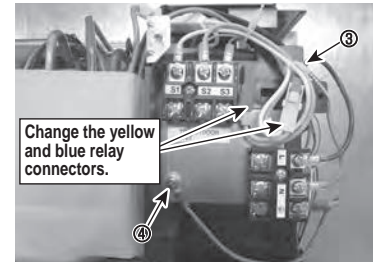


■ Wall mounted, PKA-M-KA, PKA-M-KAL type:


1. Remove the electrical box covers (front and side).

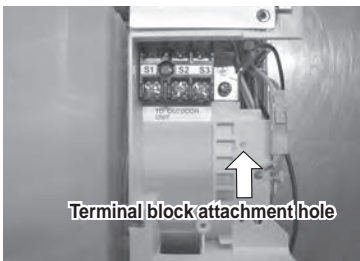

2. Attach terminal block ① using screw ② in the direction shown in the figure.

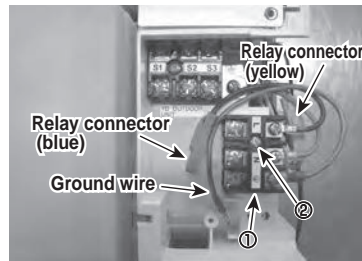

3. Change the relay connectors of blue and yellow lead wires, secure the ground wire using screw ④ at the position shown in the figure, and then bundle the lead wires using fastener ③.

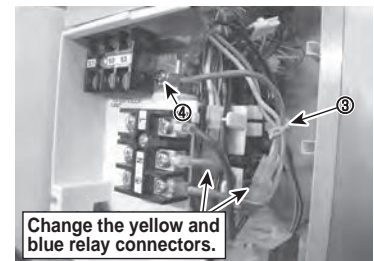

### 4. Electric wiring

Be sure to do the electric wiring following the steps in each indoor unit installation manual.

### 5. Paste the labels enveloped in the instruction document of indoor unit near the electric wiring diagrams of both indoor and outdoor units.

Three types of labels (labels A-C) are provided: Paste the label B. (Separate indoor unit/outdoor unit power supplies... Label B)

### 6. DIP switch settings of the outdoor unit control board

It is necessary to change the settings of DIP switch on the outdoor unit control board.

Outdoor unit DIP switch settings (when using separate indoor unit / outdoor unit power supplies only)	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	3
	OFF	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<SW8>

### 7. Test run

Perform a test run following the steps in the installation manual of the outdoor unit.

#### Change of connectors

